


## Manual


### Smart Line+/S24 Series

### VARIANT 7

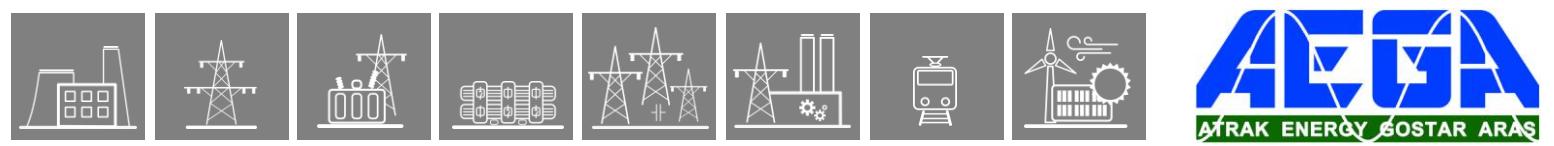


## VERSION INFORMATION

NAME	DOCUMENT ID	VERSION	DATE
S24 general specification	PP-13-20093	2.0	2021-02-19
EuroProt+ Hardware description	PP-13-19958	2.0	2023-02-10
Three-phase Instantaneous Overcurrent Protection	PP-13-22489	2.0	2022-03-04
Residual Instantaneous Overcurrent Protection	PP-13-22488	2.1	2022-11-28
Breaker failure protection	PP-13- 22253	2.1	2022-10-03
Three-phase overcurrent protection	PP-13-21408	2.4	2022-08-22
Residual overcurrent protection	PP-13-20320	1.3	2022-08-22
Inrush current detection function	PP-13-22394	2.0	2021-08-10
High impedance differential protection technical guide	PP-13-22486	2.2	2022-01-18
Phase-Selective Trip Logic	PP-13-21531	2.0	2019-03-12
Circuit breaker wear monitoring	PP-13-21310	1.1	2016-09-06
Circuit Breaker control	PP-13-21877	2.0	2019-04-01
Disconnecter control	PP-13-20396	2.0	2019-04-01
Ethernet Links function	PP-13-21870	1.0	2019-02-19
Application of high-speed TRIP contacts	PP-13-21592	1.1	2017-10-02
Dead Line Detection Function	PP-13-22522	2.0	2022-03-04
Current unbalance function	PP-13-22163	2.0	2020-06-25
Current input function block setting guide	VERSION 1.1	1.0	2015-01-29
Line measurement Frequency measurement Voltage measurement Current measurement	PP-13-21168	2.3	2021-09-02
Average and maximum measurement function	PP-11-20109	1.0	2013-9-27
Metering function	PP-13-22238	2.1	2022-10-19
Trip value recorder function	PP-13-20947	2.1	2020-12-10
Voltage measurement selection function	VERSION 1.0	1.0	2013-02-06
Disturbance recorder	PP-13-20368	3.0	2017-06-02
AIC current input function	PP-13-21392	1.0	2017-01-03
Remote I/O (RIO) server description	PP-13-22346	1.0	2021-06-02
Technical notes on EOB interoperability	-	1.0	2011-06-27
Maintenance guide	PP-13-226045	2.0	2022-11-18
RTD temperature input function	PP-13-21394	1.0	2017-01-03
EP+ Installation manual	PP-06-22516	1.0	2022-03-09

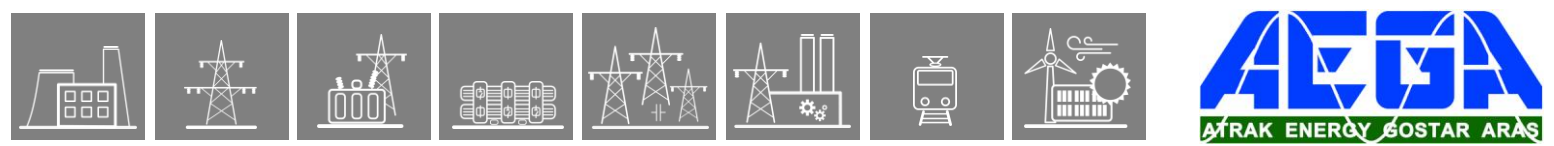


## Table of Contents

1. Introduction .....	5
1.1. Application.....	6
1.1.1. Meeting the device .....	7
1.1.2. System design.....	9
1.1.3. CPU and COM module .....	10
1.1.4. Device housings .....	30
1.1.5. Human-Machine Interface (HMI) module .....	32
1.1.6. Current input module .....	39
1.1.7. Voltage input module.....	44
1.1.8. Binary input module.....	46
1.1.9. Signaling module .....	49
1.1.10. Tripping module.....	52
1.1.11. RTD input module.....	73
1.1.12. Analog input module (AI) .....	75
1.1.13. Analog output module (ATO) .....	77
1.1.14. Sensor input module.....	79
1.1.15. INJ module.....	81
1.1.16. Generator protection modules .....	82
1.1.17. Power supply module.....	85
1.1.18. Sampling synchronization module .....	89
1.1.19. Mixed function modules .....	90
1.1.20. General data.....	100
1.1.21. Mechanical data.....	102
1.1.22. Mounting methods.....	105
1.1.23. Product availability (special and obsolete modules) .....	125
1.1.24. Remote I/O (RIO) server description.....	130
1.1.25. Technical notes on EOB interoperability.....	139
1.1.26. EP+ Installation manual.....	142
2. Function and I/O listing.....	150
3. Software configuration .....	152
3.1. Protection functions.....	152
3.1.1. Three-phase instantaneous Overcurrent Protection .....	152
3.1.2. Residual Instantaneous Overcurrent Protection .....	161
3.1.3. Breaker failure protection .....	170
3.1.4. Three-phase time overcurrent protection .....	179
3.1.5. Residual overcurrent protection function.....	195
3.1.6. Inrush current detection function.....	204
3.1.7. High-Impedance Differential Protection.....	209
3.2. Control & supervision functions.....	233
3.2.1. Phase-Selective Trip Logic .....	233
3.2.2. Circuit breaker wear monitoring function.....	237
3.2.3. Circuit breaker control function block.....	242
3.2.4. Disconnecter control function.....	248
3.2.5. Ethernet Links function.....	255
3.2.6. Trip Circuit Supervision .....	258
3.2.7. Dead Line Detection Function .....	265
3.2.8. Current unbalance function.....	274

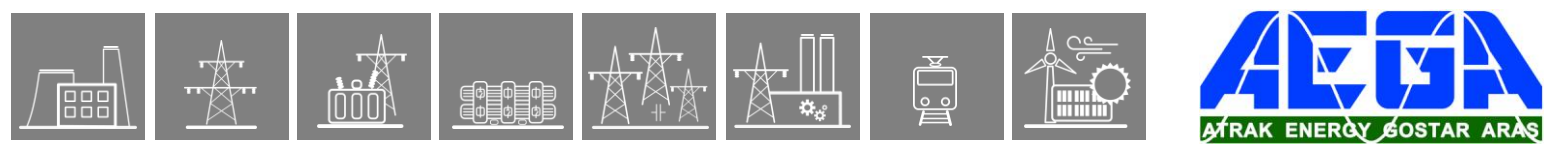

3.3.	Measuring functions .....	280
3.3.1.	Current input function .....	282
3.3.2.	Line and frequency measurement functions .....	287
3.3.3.	Average and maximum measurement function.....	297
3.3.4.	AIC current input function.....	299
3.3.5.	Metering .....	301
3.3.6.	Voltage selection function block.....	307
3.3.7.	Trip Value Recorder .....	309
3.3.8.	RTD temperature input function.....	312
3.4.	Disturbance recorder function .....	315
3.4.1.	Mode of recording.....	315
3.4.2.	Format of recording.....	316
3.4.3.	Downloading and evaluating the disturbance records .....	316
3.4.4.	Parameters of the disturbance recorder functions.....	316
3.4.5.	The input signals of the disturbance recorder functions .....	317
3.4.6.	The function blocks .....	317
3.4.7.	The recorded signals.....	317
3.5.	Event recorder .....	318
4.	Maintenance guide for EuroProt+ devices .....	319
4.1.	Foreword .....	319
4.2.	Safety precautions .....	319
4.2.1.	General guidelines for a scheduled maintenance of EP+ devices .....	320
4.3.	Power supply maintenance.....	321
4.4.	Elements and Batteries .....	323



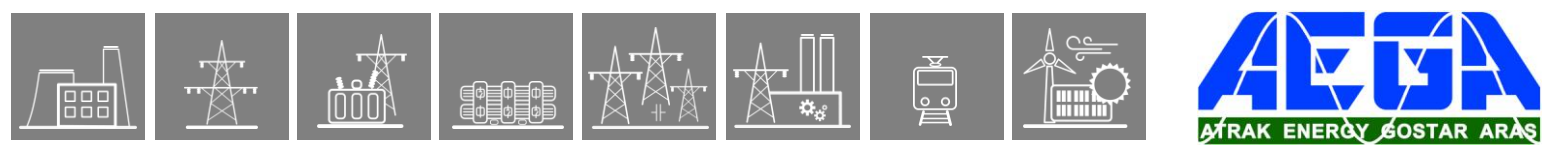

## 1. Introduction

The IED EP+ S24 series is member of the **EuroProt+** product line, made by Protecta Co. Ltd. The **EuroProt+** type complex protection in respect of hardware and software is a modular device. The modules are assembled and configured according to the requirements, and then the software determines the functions. The IED EP+ S24 Smart Line series is a special selection of the EuroProt+ products, bearing in mind the cost effective realization. All modules, all FW and SW are identical to the general EuroProt+ series therefore all test reports and certificates issued for EuroProt+ apply to the S24 series.

The IED provides main protection for overhead lines and cable feeders in distribution networks. EP+ S24 is a dedicated transformer protection and control IED (intelligent electronic device) for power transformers, unit and step-up transformers including power generator-transformer blocks in utility and industry power distribution systems. EP+ S24 is also used as back-up protection for motors, transformers and generators in utility and industry applications, where an independent and redundant protection system is required. Depending on the chosen standard configuration, the IED is adapted for the protection of medium voltage feeders in isolated neutral, resistance earthed, compensated and solidly earthed networks. Once the standard configuration IED has been given the application-specific settings, it can directly be put into service. Application area also covers protection functions for a large variety of applications, e.g. frequency and voltage based protection, motor protection and thermal overload protection function.


The IEDs support a range of communication protocols including the IEC 61850 substation automation standard with horizontal GOOSE communication, IEC 60870-5-101, IEC 60870-5-103 and Modbus® RTU. The IED-EP+ S24 is available in six predefined standard configurations to suit the most common feeder protection and control applications.

The relay is provided with a built-in digital disturbance recorder for up to eight analog signal channels and 32 digital signal channels. The recordings are stored in a non-volatile memory from which data can be uploaded for subsequent fault analysis.

To provide network control and monitoring systems with feeder level event logs, the relay incorporates a non-volatile memory with capacity of storing 1000 event codes including time stamps. The non-volatile memory retains its data also in case the relay temporarily loses its auxiliary supply. The event log facilitates detailed pre- and post-fault analyses of feeder faults and distribution disturbances.

The trip circuit supervision continuously monitors the availability and operability of the trip circuit. It provides open circuit monitoring both when the circuit breaker is in its closed and in its open position.

The relay's built-in self-supervision system continuously monitors the state of the relay hardware and the operation of the relay software. Any fault or malfunction detected will be used for alerting the operator. When a permanent relay fault is detected the protection functions of the relay will be completely blocked to prevent any incorrect relay operation.

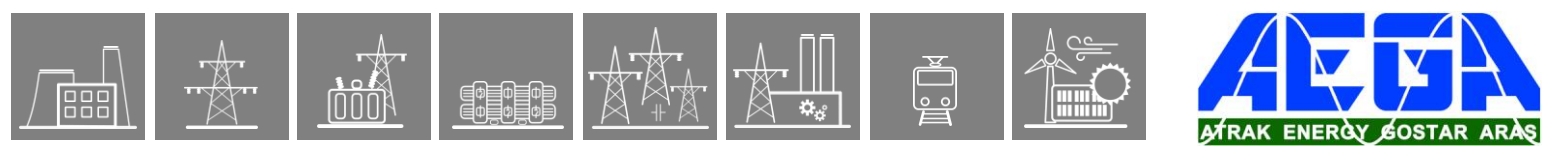

## 1.1. Application

The IED-EP+ S24 protection device is a member of the EuroProt+ product line, made by Protecta Co. Ltd. The EuroProt+ type complex protection in respect of hardware and software is a modular device with defined variants. The modules are assembled and configured according to the requirements, and then the software determines the functions.

As of now, the IED-EP+ S24 is available in eight predefined standard configurations to suit the most common feeder protection application.

### EP+S24:

- **Variant 0** serves as a simple bay control unit.
- **Variant 1** is mainly used main or backup protection as overcurrent and motor protection.
- **Variant 2** has additional provide voltage protection above **Variant 1**. Especially for those applications where small generators are connected to the network / smart grids. Additionally, it can be extended with restricted earth fault protection function for simple protection of small transformer.
- **Variant 3** is used main protection for overhead lines and cable feeders in distribution networks with distance protection function.
- **Variant 4** application has already included line differential protection function for medium voltage distribution network
- **Variant 5** is dedicated transformer protection and control IED (intelligent electronic device) for power transformers, unit and step-up transformers including power generator-transformer blocks in utility and industry power distribution systems.
- **Variant 6** is dedicated for those application where is only voltage and frequency-based protection functions are required.
- **Variant 7** provides high-impedance differential protection for machines, power transformers and busbar installations as well as for other applications where high-impedance differential protection is required

### 1.1.1. Meeting the device

The basic information for working with the **EuroProt+** devices are described in the document "**Quick start guide to the devices of the EuroProt+ product line**".



Figure 3 IED EP+ S24 with B&W HMI front panel as standard



Figure 4 IED EP+S24 with true colour HMI front panel as optional

## 1.1.2. System design

The EuroProt+ protection device family is a scalable hardware platform to adapt to different applications. Data exchange is performed via a 16-bit high-speed digital non-multiplexed parallel bus with the help of a backplane module.

Each module is identified by its location and there is no difference between module slots in terms of functionality. The only restriction is the position of the CPU module because it is limited to the “CPU” position. The built-in self-supervisory function minimizes the risk of device malfunctions.


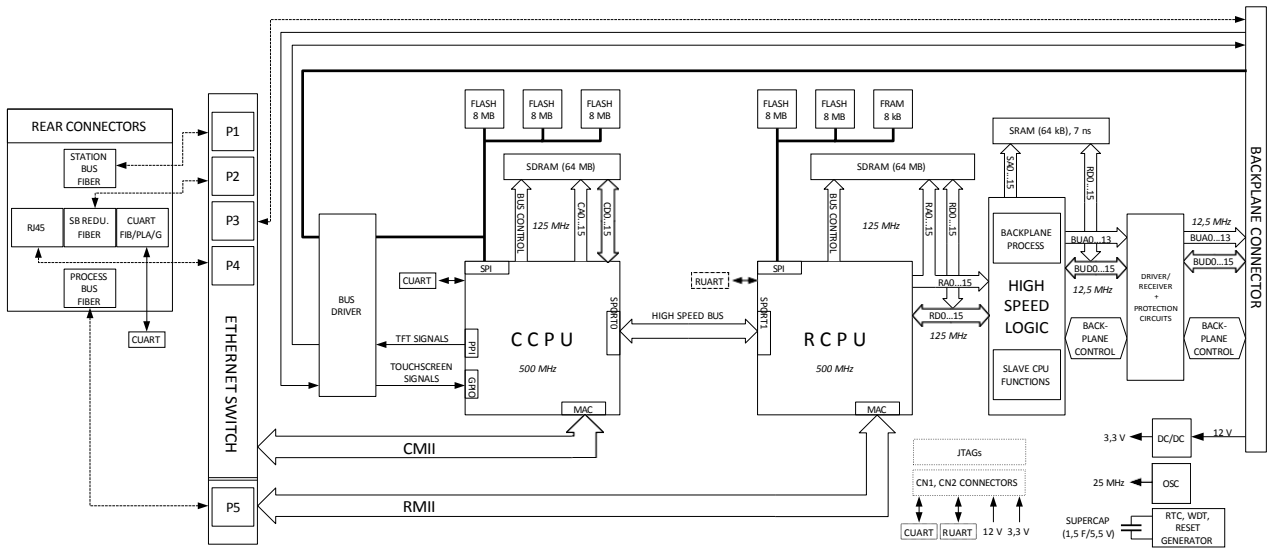


Figure 1-1 CPU block diagram

The backplane board itself is a passive board but it provides a 16-bit bus, power supply distribution, a two-wire interface (TWI) supporting module inventory management and module identification. It is designed to meet the requirements for high-speed digital buses and to comply with electromagnetic emission standards.



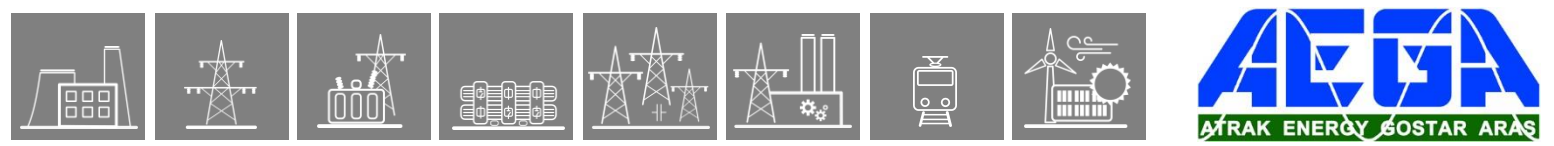

### 1.1.3. CPU and COM module


#### 1.1.3.1. CPU+ module

The CPU module contains all the protection, control and communication functions of the EuroProt+ device. Dual 500 MHz high-performance Analog Devices Blackfin processors separate relay functions (RDSP) from communication and HMI functions (CDSP). Reliable communication between processors is performed via high-speed synchronous serial internal bus (SPORT).

Each processor has its own operative memory such as SDRAM and flash memories for configuration, parameter and firmware storage. Both firmwares are stored in a dedicated flash memory independent from the disturbance recorder and event storage.

The CDSP's operating system (uClinux) utilizes a robust JFFS flash file system, which enables fail-safe operation and the storage of disturbance record files, configuration and parameters.

The RDSP core runs at 500 MHz and its external bus speed is 125 MHz. The backplane data speed is limited to approx. 20 MHz, which is more than enough for module data throughput. An additional logic element (CPLD and SRAM) is used as a bridge between the RDSP and the backplane. The CPLD collects analogue samples from CT/VT modules and also controls signaling outputs and inputs.

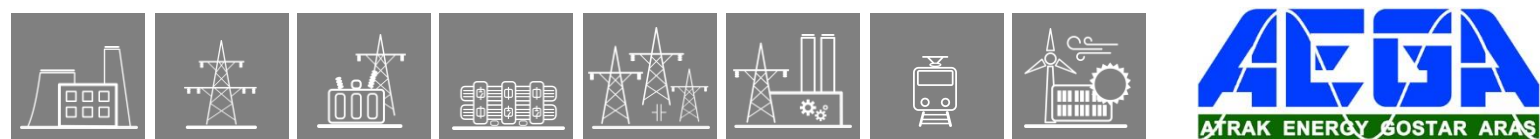

### 1.1.3.1.1. Fast start-up

After power-up the RDSP processor starts up with the previously saved configuration and parameters. Generally, the power-up procedure for the RDSP and relay functions takes only a few seconds. That is to say, it is ready to trip within this time. CDSP's start-up procedure is longer because its operating system needs time to build its file system, initializing user applications such as HMI functions and the IEC61850 software stack.

### 1.1.3.1.2. HMI and communication tasks

- Embedded WEB-server:
  - Firmware upgrade possibility
  - Modification of user parameters
  - Events list and disturbance records
  - Password management
  - Online data measurement
  - Commands
  - Administrative tasks
- Front panel TFT display handling: the interactive menu set is available through the TFT and the touchscreen interface
- User keys: capacitive touch keys on front panel
- The built-in 5-port Ethernet switch allows EuroProt+ to connect to IP/Ethernet-based networks. The following Ethernet ports are available:
  - Station bus (100Base-FX Ethernet) SBW
  - Redundant station bus (100Base-FX Ethernet) SBR
  - Process bus (100Base-FX Ethernet)
  - EOB2 (Ethernet Over Board) or RJ-45 Ethernet user interface on front panel
  - Optional 10/100Base-T port via RJ-45 connector
- PRP/HSR seamless redundancy for Ethernet networking (100Base-FX Ethernet)
- Other communication:
  - RS422/RS485 interfaces (galvanic interface to support legacy or other serial protocols, ASIF)
  - Plastic or glass fiber interfaces to support legacy protocols, ASIF
  - Proprietary process bus communication controller on COM+ module
  - Telecommunication interfaces: G.703, IEEE C37.94

CPU VERSION	PRIMARY STATION BUS SBW	SECONDARY (REDUNDANT) STATION BUS SBR	LEGACY PORT/PROTOCOL	PROCESS BUS (FIBER) PB	SERVICE PORT ON FRONT PANEL EOB/ RJ45
CPU+/0007	-	-	-	-	+
CPU+/0091	-	-	-	+ SM SH	+
CPU+/0201*	-	+ RJ45	-	-	+
CPU+/0211*	-	+ RJ45	-	+ MM	+
CPU+/0281*	-	+ RJ45	-	+ SM LH	+
CPU+/0291*	-	+ RJ45	-	+ SM SH	+
CPU+/0301	-	-	+ POF	-	+
CPU+/0401	-	-	+ GS	-	+
CPU+/0501*	-	-	+ Galv. RS485/422	-	+
CPU+/1001	+ MM	-	-	-	+
CPU+/1004	+ MM	-	-	-	+
CPU+/1011	+ MM	-	-	+ MM	+
CPU+/1091	+ MM	-	-	+ SM SH	+
CPU+/1101*	+ MM	+ MM	-	-	+
CPU+/1111	+ MM	+ MM	-	+ MM	+
CPU+/1181	+ MM	+ MM	-	+ SM LH	+
CPU+/1191	+ MM	+ MM	-	+ SM SH	+
CPU+/1201*	+ MM	+ RJ45	-	-	+
CPU+/1202	+ MM	+ RJ45	-	-	+
CPU+/1211	+ MM	+ RJ45	-	+ MM	+
CPU+/1281	+ MM	+ RJ45	-	+ SM LH	+
CPU+/1291*	+ MM	+ RJ45	-	+ SM SH	+
CPU+/1292	+ MM	+ RJ45	-	+ SM SH	+
CPU+/1301	+ MM	-	+ POF	-	+
CPU+/1311	+ MM	-	+ POF	+ MM	+
CPU+/1331	+ MM	-	+ double POF	-	+
CPU+/1381	+ MM	-	+ POF	+ SM LH	+
CPU+/1391	+ MM	-	+ POF	+ SM SH	+
CPU+/1401	+ MM	-	+ GS	-	+
CPU+/1411	+ MM	-	+ GS	+ MM	+
CPU+/1481	+ MM	-	+ GS	+ SM LH	+
CPU+/1491	+ MM	-	+ GS	+ SM SH	+
CPU+/1501	+ MM	-	+ Galv. RS485/422	-	+
CPU+/1511	+ MM	-	+ Galv. RS485/422	+ MM	+


















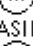













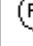
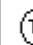

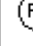
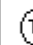





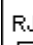














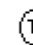






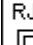


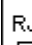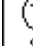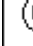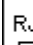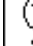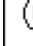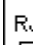


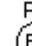


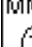


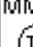




 


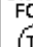














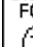


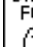


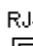


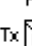

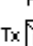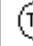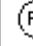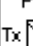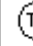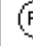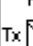




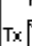


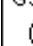



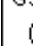

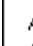
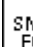

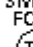





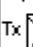
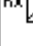
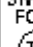


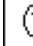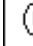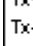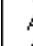



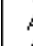

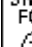


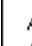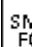


CPU VERSION	PRIMARY STATION BUS (FIBER) SBW	SECONDARY (REDUNDANT) STATION BUS SBR	LEGACY PORT/PROTOCOL	PROCESS BUS (FIBER) PB	SERVICE PORT ON FRONT PANEL EOB/ RJ45
CPU+/1581	+ MM	-	+ Galv. RS485/422	+ SM LH	+
CPU+/1611	+ MM	-	+ Galvanic sync	+ MM	+
CPU+/1681	+ MM	-	+ Galvanic sync	+ SM LH	+
CPU+/6001	+ MM/LC	-	-	-	+
CPU+/6004	+ MM/LC	-	-	-	+
CPU+/6093	+ MM/LC	-	-	+ SM SH	+
CPU+/6094	+ MM/LC	-	-	+ SM SH	+
CPU+/6601*	+ MM/LC	+ MM/LC	-	-	+
CPU+/9201	+ SM SH	+ RJ45	-	-	+
CPU+/9291	+ SM SH	+ RJ45	-	+ SM SH	+
CPU+/9501	+ SM SH	-	+ Galv. RS485/422	-	+
CPU+/9901	+ SM SH	+ SM SH	-	-	+
CPU+/A001*	+ MM/LC PRP/HSR	-	-	-	+
CPU+/A004	+ MM/LC PRP/HSR	-	-	-	+
CPU+/A011	+ MM/LC PRP/HSR	-	-	+ MM	+
CPU+/A081	+ MM/LC PRP/HSR	-	-	+ SM LH	+
CPU+/A091	+ MM/LC PRP/HSR	-	-	+ SM SH	+
CPU+/A094	+ MM/LC PRP/HSR	-	-	+ SM SH	+

\*Note: the modules can be equipped with a different handle (narrower and made of aluminum, instead of the standard plastic), if the other modules of the device are equipped with top-screw terminals (see Chapter 20.2). In these cases, a "T" letter appears on the label of the module (e.g. CPU+/1201T), but all other properties remain the same.

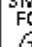For legacy CPU cards (e.g. CPU+0001, ...) see [Product availability](#) chapter.

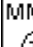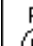**PRP/HSR** option: A and F types can be ordered with PRP/HSR communication as sw option **Legend for CPU version table:**
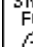
<b>MM:</b> Multimode with ST connector	<b>GS:</b> Glass with ST connector
<b>MM/LC:</b> Multimode with LC connector	<b>SFP:</b> Small Form-factor Pluggable connector
<b>SM:</b> Single mode with FC/PC connector	<b>SB:</b> Station Bus
<b>LH:</b> Long Haul with FC/PC connector	<b>SBW:</b> Station Bus Working
<b>SH:</b> Short Haul with FC/PC connector	<b>SBR:</b> Station Bus Redundant
<b>POF:</b> Plastic Optical Fiber with 1 mm fiber connector	<b>PB:</b> Proprietary Process Bus

CPU+ 0007	CPU+ 0091	CPU+ 0201	CPU+ 0211	CPU+ 0281	CPU+ 0291	CPU+ 0301	CPU+ 0401	CPU+ 0501	CPU+ 1001	CPU+ 1004
									MM/ST	MM/ST
									  	  
		RJ-45	RJ-45	RJ-45	RJ-45	POF Tx Rx	GS/ST	Tx+ 1 Tx- 2 GND 3 Rx- 4 Rx+ 5		
	SM SH FCPC		MM/ST	SM LH FCPC	SM SH FCPC		  			
	  		  	  	  					
CPU+ 1011	CPU+ 1091	CPU+ 1101	CPU+ 1111	CPU+ 1181	CPU+ 1191	CPU+ 1201	CPU+ 1202	CPU+ 1211	CPU+ 1281	CPU+ 1291
MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST
  	  	  	  	  	  	  	  	  	  	  
		MM/ST	MM/ST	MM/ST	MM/ST	RJ-45	RJ-45	RJ-45	RJ-45	RJ-45
MM/ST	SM SH FCPC		MM/ST	SM LH FCPC	SM SH FCPC			MM/ST	SM LH FCPC	SM SH FCPC
  	  	  	  	  	  			  	  	  
CPU+ 1292	CPU+ 1301	CPU+ 1311	CPU+ 1331	CPU+ 1381	CPU+ 1391	CPU+ 1401	CPU+ 1411	CPU+ 1481	CPU+ 1491	CPU+ 1501
MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST	MM/ST
  	  	  	  	  	  	  	  	  	  	  
RJ-45	POF	POF	POF1	POF	POF	GS/ST	GS/ST	GS/ST	GS/ST	Tx+ 1 Tx- 2 GND 3 Rx- 4 Rx+ 5
SM SH FCPC			POF2	SM LH FCPC	SM SH FCPC	  	  	  	  	
  		  	 	  	  		  	  	  	



CPU+ 1511	CPU+ 1581	CPU+ 1611	CPU+ 1681	CPU+ 6001	CPU+ 6004	CPU+ 6093	CPU+ 6094	CPU+ 6601	CPU+ 9201	CPU+ 9291
MM/ST	MM/ST	MM/ST	MM/ST	MM/LC	MM/LC	MM/LC	MM/LC	MM/LC	SM SH FCPC	SM SH FCPC
Tx SB Rx	Tx SB Rx	Tx SB Rx	Tx SB Rx	Rx Tx	Rx Tx	Rx Tx	Rx Tx	Rx Tx	Tx SB Rx	Tx SB Rx
Tx+ 1	Tx+ 1	-	-							
Tx- 2	Tx- 2	-	-							
GND 3	GND 3	GND 3	GND 3							
Rx- 4	Rx- 4	Sy- 4	Sy- 4							
Rx+ 5	Rx+ 5	Sy+ 5	Sy+ 5							
MM/ST	SM LH FCPC	MM/ST	SM LH FCPC					MM/LC	RJ-45	RJ-45
Tx PB Rx	Tx PB Rx	Tx PB Rx	Tx PB Rx			SM SH FCPC	SM SH FCPC			SM SH FCPC
						Tx PB Rx	Tx PB Rx			Tx PB Rx


  

CPU+ 9501	CPU+ 9901	CPU+ A001	CPU+ A004	CPU+ A011	CPU+ A081	CPU+ A091	CPU+ A094
SM SH FCPC	SM SH FCPC	PRP/HSR MM/LC	PRP/HSR MM/LC	PRP/HSR MM/LC	PRP/HSR MM/LC	PRP/HSR MM/LC	PRP/HSR MM/LC
Tx SB Rx	Tx PB Rx	Rx Tx Tx Tx	Rx Tx Tx Tx	Rx Tx Tx Tx	Rx Tx Tx Tx	Rx Tx Tx Tx	Rx Tx Tx Tx
Tx+ 1	SM SH FCPC	LAN A LAN B	LAN A LAN B	LAN A LAN B	LAN A LAN B	LAN A LAN B	LAN A LAN B
Tx- 2	Tx PB Rx	A B I LINK/ACT	A B I LINK/ACT	A B I LINK/ACT	A B I LINK/ACT	A B I LINK/ACT	A B I LINK/ACT
GND 3							
Rx- 4							
Rx+ 5							
				MM/ST	SM LH FCPC	SM SH FCPC	SM SH FCPC
				Tx PB Rx	Tx PB Rx	Tx PB Rx	Tx PB Rx

Figure 2-1 CPU versions

**Interface types:**

- 100Base-FX Ethernet:
  - MM/ST 1300 nm, 50/62.5/125 μm connector, (up to 2 km) fiber
  - SM/FC 1550 nm, 9/125 μm connector, (LH: long haul, up to 120 km)
  - SM/FC 1550 nm, 9/125 μm connector, (SH: short haul, up to 50 km)
  - MM/LC 1300 nm, 50/62.5/125 μm connector, (up to 2 km) fiber
- 10/100 Base-TX Ethernet: RJ-45-8/8
- Service port on HMI:
  - 10/100 Base-T Ethernet: RJ-45-8/8
  - EOB2 interface: attachable to the front panel by a proprietary magnetic connector; the connector box ends in a RJ-45 8/8 plug. It is 10Base-T full duplex interface, and it enables 10/100Base TX communication with service computers.
- ASIF: Asynchronous Serial Interface
  - plastic optical fiber (ASIF-POF)
  - glass with ST connector (ASIF-GS)
  - galvanic RS485/422 (ASIF-G)

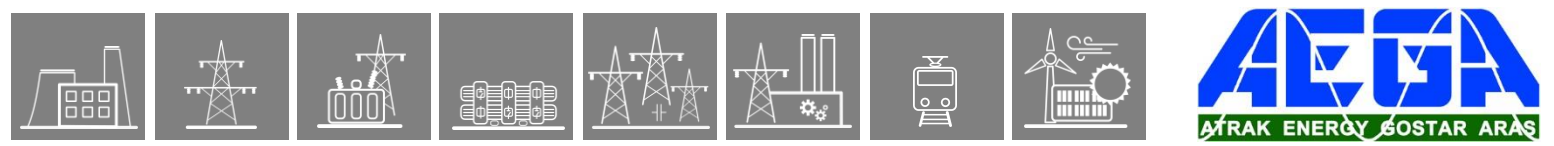

### 1.1.3.2. COM modules

The COM+ modules are responsible for special communication tasks, these are the following:

- binary signal transmission
- line differential protection communication via Ethernet or telecommunication networks
- busbar differential protection communication
- multi-port Ethernet switch using MODBUS/TCP protocol for Remote I/O (RIO) servers

### 1.1.3.2.1. COM modules for binary signal transmission

MODULE TYPE	INTERFACE TYPE	NUMBER OF INTERFACES	UNIT WIDTH	APPLICATION
<b>COM+/1801*</b>	MM/ST 1300 nm, 50/62.5/125 µm and SM/FC 1550 nm, 9/125 µm connector, 100Base-FX Ethernet	2	4 HP	Line differential protection, binary signal transmission up to 2 km and up to 120 km
<b>COM+/1901*</b>	MM/ST 1300 nm, 50/62.5/125 µm and SM/FC 1550 nm, 9/125 µm connector, 100Base-FX Ethernet	2	4 HP	Line differential protection, binary signal transmission up to 2 km and up to 50 km
<b>COM+/8882</b>	SM/FC 1550 nm, 9/125 µm connector, 100Base-FX Ethernet	3	4 HP	3 direction binary signal transmission up to 120 km
<b>COM+/9902</b>	SM/FC 1550 nm, 9/125 µm connector, 100Base-FX Ethernet	2	4 HP	2 direction binary signal transmission up to 50 km
<b>COM+/9992</b>	SM/FC 1550 nm, 9/125 µm connector, 100Base-FX Ethernet	3	4 HP	3 direction binary signal transmission up to 50 km

\*Note: the modules can be equipped with a different handle (narrower and made of aluminum, instead of the standard plastic), if the other modules of the device are equipped with top-screw terminals (see Chapter 20.2). In these cases, a "T" letter appears on the label of the module (e.g. **COM+/1801T**), but all other properties remain the same

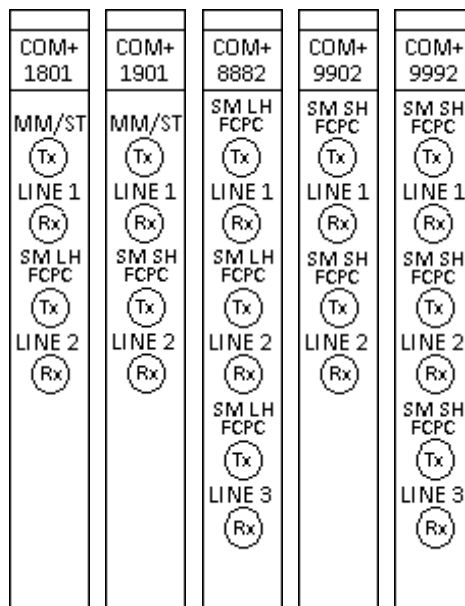


Figure 2-2 COM modules for binary signal transmission

### 1.1.3.2.2. COM modules for line differential communication

MODULE TYPE	INTERFACE TYPE	NUMBER OF INTERFACES	UNIT WIDTH	APPLICATION
COM+/0091	G703.1 (64 kbit/s)	1	4 HP	Line differential protection via telecom network
COM+/1101	MM/ST 1300 nm, 50/62.5/125 μm connector, 100Base-FX Ethernet	2	4 HP	3 terminals / redundant line differential protection up to 2 km
COM+/1801*	MM/ST 1300 nm, 50/62.5/125 μm and SM/FC 1550 nm, 9/125 μm connector, 100Base-FX Ethernet	2	4 HP	3 terminals / redundant line differential protection up to 2 km and up to 120 km
COM+/1901*	MM/ST 1300 nm, 50/62.5/125 μm and SM/FC 1550 nm, 9/125 μm connector, 100Base-FX Ethernet	2	4 HP	3 terminals / redundant line differential protection up to 2 km and up to 50 km
COM+/8801	SM/FC 1550 nm, 9/125 μm connector, 100Base-FX Ethernet	2	4 HP	3 terminals / redundant line differential protection up to 120 km
COM+/9901	SM/FC 1550 nm, 9/125 μm connector, 100Base-FX Ethernet	2	4 HP	3 terminals / redundant line differential protection up to 50 km

\*Note: the modules can be equipped with a different handle (narrower and made of aluminum, instead of the standard plastic), if the other modules of the device are equipped with top-screw terminals (see Chapter 20.2). In these cases, a "T" letter appears on the label of the module (e.g. **COM+/1801T**), but all other properties remain the same

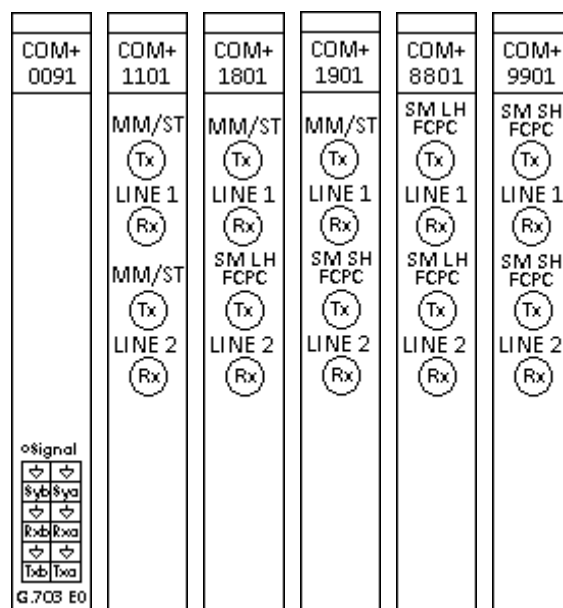


Figure 2-3 COM modules for line differential applications

### 1.1.3.2.3. COM modules for busbar differential protection communication

MODULE TYPE	INTERFACE TYPE	NUMBER OF INTERFACES	UNIT WIDTH	APPLICATION
<b>COM+/1111</b>	MM/ST 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	3	4 HP	Busbar protection for 3 bay units up to 2 km
<b>COM+/1111D</b>	MM/ST 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	3	4 HP	Busbar protection for 3x2 bay units (dual) up to 2 km

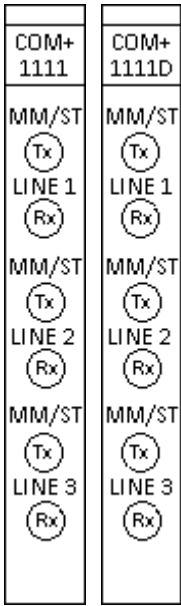


Figure 2-4 COM modules for busbar differential protections



### 1.1.3.2.4. COM modules for Remote I/O (RIO) servers

MODULE TYPE	INTERFACE TYPE	NUMBER OF INTERFACES	UNIT WIDTH	APPLICATION
COM+/1202*	MM/LC 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	2	8 HP	2-port Ethernet switch for MODBUS via RIO
COM+/1324*	MM/LC 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	4	8 HP	4-port Ethernet switch for MODBUS via RIO
COM+/1335	MM/LC 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	5	8 HP	5-port Ethernet switch for MODBUS via RIO
COM+/6603	MM/LC 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	2	4 HP	2-port Ethernet switch for MODBUS via RIO
COM+/6663	MM/LC 1300 nm, 50/62.5/125 µm connector, 100Base-FX Ethernet	3	4 HP	3-port Ethernet switch for MODBUS via RIO

\*Obsolete module. These modules are not recommended for new designs!

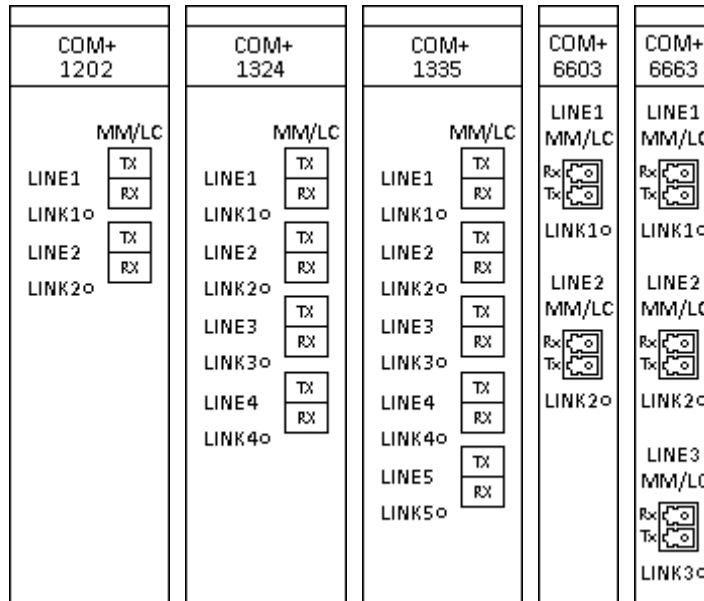


Figure 2-5 COM modules for RIO servers

### 1.1.3.3. Communication interface characteristics

#### 1.1.3.3.1. Ethernet multi-mode transmitter and receiver

##### 1.1.3.3.1.1. MM/ST connector

Up to approximately 2 km.

###### Transmitter


PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL OUTPUT POWER 62.5/125 $\mu\text{m}$ , NA = 0.275 FIBER	$P_O$	BOL*: -19 EOL*: -20	-	-14	dBm avg.
OUTPUT OPTICAL POWER 50/125 $\mu\text{m}$ , NA = 0.20 FIBER	$P_O$	BOL*: -22.5 EOL*: -23.5	-	-14	dBm avg.
OPTICAL EXTINCTION RATIO	ER	-	-	10 -10	% dB
CENTER WAVELENGTH	$\lambda_C$	1270	1308	1380	nm

\* BOL: Beginning of life, EOL: End of life

Note: according to field experiences, the 62.5/125  $\mu\text{m}$  cabling is recommended for applications where the center wavelength is 1300/1310 nm.

Receiver sensitivity is measured with  $2^{23} - 1$  PRBS pattern within BER =  $2.5 \times 10^{-10}$

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
SIGNAL DETECT - ASSERTED	$P_A$	$P_D + 1.5$ dB	-	-33	dBm avg.
SIGNAL DETECT - DEASSERTED	$P_D$	-45	-	-	dBm avg.
SIGNAL DETECT - HYSTERESIS	$P_A - P_D$	1.5	-	-	dB
SIGNAL DETECT ASSERT TIME (OFF TO ON)	AS_Max	0	2	100	$\mu\text{s}$
SIGNAL DETECT DEASSERT TIME (ON TO OFF)	ANS_Max	0	8	350	$\mu\text{s}$

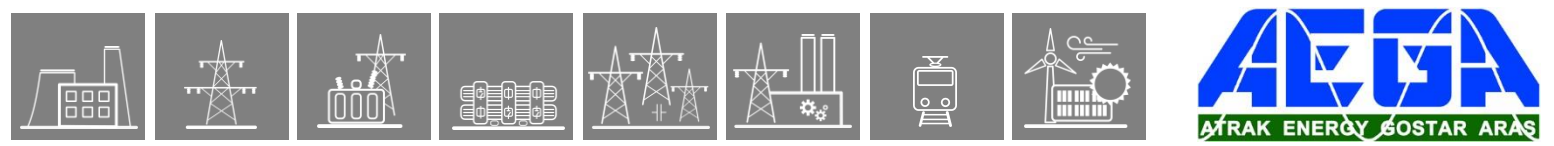

### 1.1.3.3.1.2. MM/LC connector

Up to approximately 2 km.

#### Transmitter

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL OUTPUT POWER** 62.5/125 $\mu\text{m}$ , NA = 0.275 FIBER	$P_o$	BOL*: -19 EOL*: -20	-15.7	-14	dBm avg.
OUTPUT OPTICAL POWER 50/125 $\mu\text{m}$ , NA = 0.20 FIBER	$P_o$	BOL*: -22.5 EOL*: -23.5	-	-14	dBm avg.
OPTICAL EXTINCTION RATIO	ER	-	0.002 -47	0.2 -27	% dB
CENTER WAVELENGTH	$\lambda_c$	1270	1308	1380	nm

\* BOL: Beginning of life, EOL: End of life

Note: according to field experiences, the 62.5/125  $\mu\text{m}$  cabling is recommended for applications where the center wavelength is 1300/1310 nm.

Receiver sensitivity is measured with  $2^{23} - 1$  PRBS pattern within BER =  $2.5 \times 10^{-10}$

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
SIGNAL DETECT - ASSERTED	$P_A$	$P_D + 1.5 \text{ dB}$	-	-33	dBm avg.
SIGNAL DETECT - DEASSERTED	$P_D$	-45	-	-	dBm avg.
SIGNAL DETECT - HYSTERESIS	$P_A - P_D$	1.5	-	-	dB
SIGNAL DETECT ASSERT TIME (OFF TO ON)	AS_Max	0	2	100	$\mu\text{s}$
SIGNAL DETECT DEASSERT TIME (ON TO OFF)	ANS_Max	0	5	100	$\mu\text{s}$

## 1.1.3.3.2. Ethernet single mode transmitter and receiver

### 1.1.3.3.2.1. Long haul single mode transceiver


Up to approximately 120 km, with max. 32 dB link attenuation.

#### Transmitter

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL OUTPUT POWER	$P_O$	-6	-	0	dBm avg.
OPTICAL EXTINCTION RATIO	ER	8.3	-	-	dB
CENTER WAVELENGTH	$\lambda_C$	1490	1550	1610	nm

Receiver sensitivity is measured with  $2^{23} - 1$  PRBS pattern within  $BER = 2.5 \times 10^{-10}$

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL INPUT SENSITIVITY	$P_{IN}$	-	-38	-35	dBm avg.
SATURATION	$P_{SAT}$	-3	0	-	dBm
CENTER WAVELENGTH	$\lambda_C$	1100	-	1600	nm
SIGNAL DETECT - ASSERTED	$P_A$	-	-	-35	dBm avg.
SIGNAL DETECT - DEASSERTED	$P_D$	-45	-	-	dBm avg.
HYSTERESIS	$P_{HYS}$	-	3	-	dB

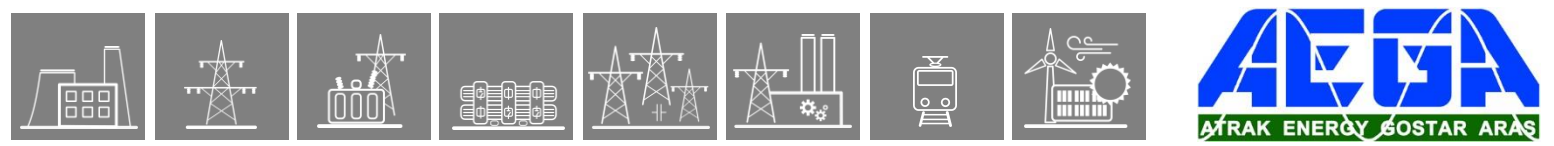

### 1.1.3.3.2.2. Short haul single mode transceiver

Up to approximately 50 km, with max. 27 dB link attenuation.

#### Transmitter

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL OUTPUT POWER	$P_O$	-12	-	-6	dBm avg.
OPTICAL EXTINCTION RATIO	ER	8.3	-	-	dB
CENTER WAVELENGTH	$\lambda_C$	1490	1550	1610	nm

Receiver sensitivity is measured with  $2^{23} - 1$  PRBS pattern within  $BER = 2.5 \times 10^{-10}$

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
OPTICAL INPUT SENSITIVITY	$P_{IN}$	-	-38	-35	dBm avg.
SATURATION	$P_{SAT}$	-3	0	-	dBm
CENTER WAVELENGTH	$\lambda$	1100	-	1600	nm
SIGNAL DETECT - ASSERTED	$P_A$	-	-	-35	dBm avg.
SIGNAL DETECT - DEASSERTED	$P_D$	-45	-	-	dBm avg.
HYSTERESIS	$P_{HYS}$	-	3	-	dB



### 1.1.3.3.3. ASIF-O transmitter and receiver

#### 1.1.3.3.3.1. ASIF-O POF

##### Transmitter

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT	JUMPER SETTINGS
TRANSMITTER OUTPUT OPTICAL POWER	$P_T$	-15.3	-	-9	dBm	JP1 2-3
		-23.3	-	-17		JP1 1-2
PEAK EMISSION WAVELENGTH	$\lambda_{PK}$	-	660	-	nm	
EFFECTIVE DIAMETER	D	-	1	-	mm	
NUMERICAL APERTURE	NA	-	0.5	-		

##### Receiver

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
INPUT OPTICAL POWER LEVEL LOGIC 0	$P_{R(L)}$	-39	-	-13.7	dBm
INPUT OPTICAL POWER LEVEL LOGIC 1	$P_{R(H)}$	-	-	-53	dBm
EFFECTIVE DIAMETER	D	-	1	-	mm
NUMERICAL APERTURE	NA	-	0.5	-	

These characteristics are valid for both POF interfaces in CPU+1331 module.


#### 1.1.3.3.3.2. ASIF-O GLASS

##### Transmitter (Output measured out of 1 meter of cable)

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT	JUMPER SETTINGS
50/125 $\mu\text{m}$ FIBER CABLE NA = 0.2	$P_o$	-19.4	-16.4	-14.4	dBm peak	JP1 2-3
		-28.9	-25.9	-23.9		JP1 1-2
62.5/125 $\mu\text{m}$ FIBER CABLE NA = 0.275	$P_o$	-15.6	-12.6	-10.6	dBm peak	JP1 2-3
		-22.9	-19.9	-17.9		JP1 1-2

##### Receiver

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
PEAK OPTICAL INPUT POWER LOGIC LEVEL HIGH ( $\lambda_P = 820 \text{ nm}$ )	$P_{RH}$	-25.4	-	-9.2	dBm peak
PEAK OPTICAL INPUT POWER LOGIC LEVEL LOW	$P_{RL}$	-	-	-40	dBm peak

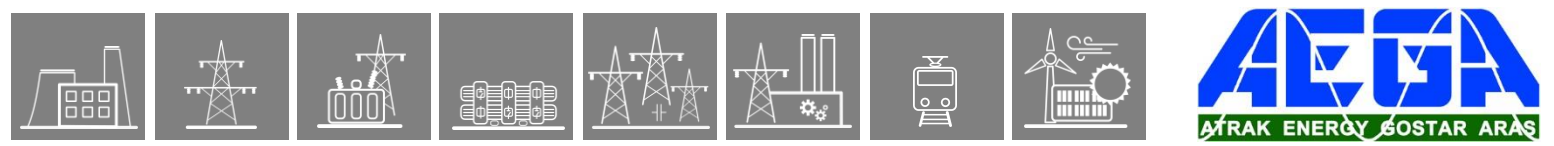

### 1.1.3.3.4. ASIF-G transmitter and receiver

The RS422/RS485 interfaces of our CPU+1501, CPU+1511, CPU+1581, CPU+9501 modules provide galvanic interface to support legacy or other serial protocols. For more details see our RS485/422 application note, available on our homepage.

#### Transmitter

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
DIFFERENTIAL OUTPUT VOLTAGE (LOADED, $R_L = 100 \Omega$ , RS422)	$V_{OD2}$	2	-	3.6	V
DIFFERENTIAL OUTPUT VOLTAGE (LOADED, $R_L = 54 \Omega$ , RS485)	$V_{OD2}$	1.5	-	3.6	V

#### Receiver

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
DIFFERENTIAL INPUT THRESHOLD VOLTAGE	$V_{TH}$	-200	-125	-30	mV
INPUT VOLTAGE HYSTERESIS	$V_{HYS}$	-	15	-	mV
LINE INPUT RESISTANCE	$R_{IN}$	96	-	-	k $\Omega$

### 1.1.3.3.5. G.703 64 kbit/s co-directional interface (E0)

The EuroProt+ device also supports line differential communication via telecom networks using

- 64 kbit/s co-directional interface type through COM+0091. This type of communication is performed via 2 x 2 wire isolated galvanic type interface. The protection device is connected to a multiplexer or gateway which is responsible for protocol/speed conversion.
- Connector type: Weidmüller:     Receptacle: S2L 3.50/12/90 F  
                                                  Plug: B2L 3.50/12/180 F
- Impedance: 120 Ω
- Cable length: 50 m
- Interface type: G.703.1 64 kbit/s (E0) co-directional, selectable grounding, with optional external clock input

*For further information about the cable assembly of this type of interface please see our G.703 E0 cable assembly guide.*

#### Receiver

PARAMETER	VALUE
LOSS OF SIGNAL ALARM LEVEL	± 1.5 dB difference between alarm-on and alarm-off
DYNAMIC RANGE	10 dB maximum cable loss range

#### Transmitter

PARAMETER	VALUE
PAIR FOR EACH DIRECTION	± 1.5 dB difference between alarm-on and alarm-off
TEST LOAD IMPEDANCE	10 dB maximum cable loss range
NOMINAL PEAK VOLTAGE OF A “MARK” (PULSE)	One symmetric pair
PEAK VOLTAGE OF A “SPACE” (NO PULSE)	120 Ω resistive
NOMINAL PULSE WIDTH	1.0 V
RATIO OF THE AMPLITUDES OF POSITIVE AND NEGATIVE	0 V ± 0.10 V
PULSES AT THE CENTRE OF THE PULSES INTERVAL	3.9 ms
RATIO OF THE WIDTHS OF POSITIVE AND NEGATIVE PULSES	0.95 to 1.05
AT THE NOMINAL HALF AMPLITUDE	0.95 to 1.05
MAXIMUM PEAK-TO-PEAK JITTER AT THE OUTPUT PORT	Refer to clause 2/G.823

### 1.1.3.3.5.1. PRP/HSR redundant Ethernet communication interface

The PRP/HSR redundant Ethernet communication interface supports the two new IEC 62439-3 protocols which provide seamless redundancy for Ethernet networking in substations with zero-time recovery in case of a single failure without frame loss:

- PRP – Parallel Redundancy Protocol (IEC 62439-3 Clause 4)
- HSR – High-availability Seamless Redundancy (IEC 62439-3 Clause 5)

This interface uses two MM/LC connectors for double connection to networks as these protocols are based on the duplication of the sent frames.

 


Figure 2-6 PRP/HSR connectors on a CPU+A001 module

### 1.1.3.3.5.2. Parallel Redundancy Protocol (PRP)

This redundancy protocol implements redundancy in the nodes as they are connected to two independent networks (LAN\_A and LAN\_B) sending a copy of each frame to both directions. The destination node receives and processes the first copy and discards the other copy of the sent frame.

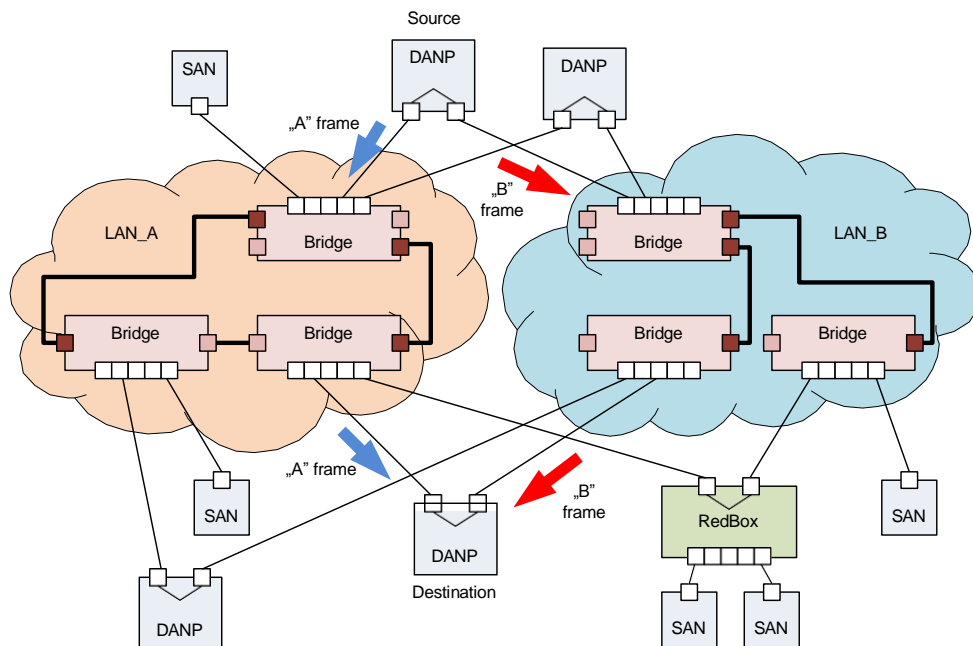


Figure 2-7 Example of a PRP redundant network

Single attached node (SAN): Network device that connects to a network with only one port.  
 Double attached node implementing PRP (DANP): Network device which connects to a network with two ports implementing PRP redundancy.

### 1.1.3.3.5.3. High-availability Seamless Redundancy (HSR)

An HSR network provides redundancy with the same safety as PRP does with a lower cost. The principle of this protocol is also based on the duplication of the sent frames but in this solution the nodes are connected to a closed ring. A source node sends two copy of a frame to both direction and the destination node accepts the first received copy and discards the other one. If a frame returns to its source the node does not let it through itself prevent the possibility of an overload of the ring.


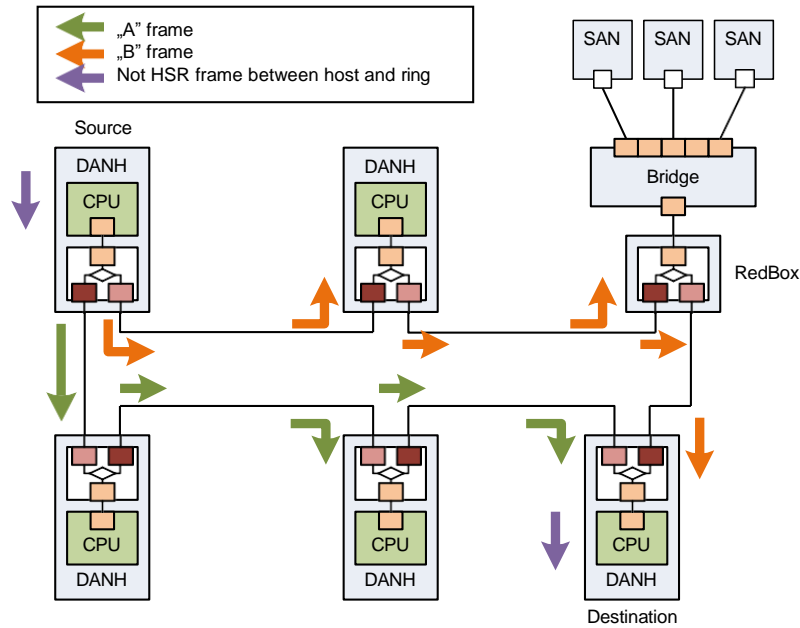


Figure 2-8 Example of an HSR redundant network

*Single attached node (SAN): Network device that connects to a network with only one port.*  
*Double attached node implementing HSR (DANH): Network device which connects to a network with two ports implementing HSR redundancy.*

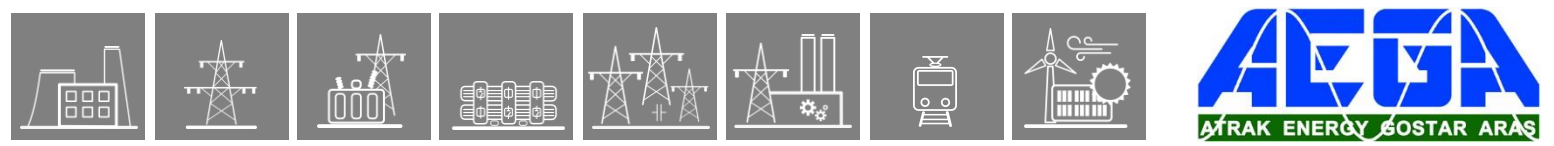

## 1.1.4. Device housings

Three+one versions are available: one is 84 HP wide with 21 module slots, the 42 HP wide, which supports 10 module slots, the double 42 HP wide with 20 module slots, and finally the 24 HP, which supports 6 module slots.

Depending on the installed modules of the configuration, the top and bottom panels of the 84 HP and 42 HP racks can be either solid (default) or perforated by 2 mm holes to prevent overheating. 24 HP housings do not have this feature, as the S24 system is less flexible, their range of the optional modules are narrower.

RACK CONFIGURATION	FREE MODULE SLOTS*	BOTTOM AND TOP PANELS	DISPLAY OPTIONS
<b>84 HP, SINGLE RACK (3 U)</b>	20	Solid, Perforated	3.5" TFT, 5.7" TFT
<b>42 HP, SINGLE RACK (3 U)</b>	9	Solid, Perforated	3.5" TFT, 5.7" TFT
<b>42 HP, DOUBLE RACK (6 U)</b>	19	Solid, Perforated	3.5" TFT
<b>24 HP, PANEL INSTRUMENT CASE</b>	5	Solid	B/W alphanumeric 3.5" TFT

*\*CPU module is mandatory, it uses up one fixed position*

Previously, a new rack type has been introduced to the 42HP devices. As of April 2021. this type is introduced to the 84HP devices as well. The depth of the box has been reduced from 242 mm to 223 mm. By default, this reduced-depth housing shall be used for newly manufactured devices. For more information about the previous and new size, see Chapter 22.1.

The following images showcase examples of the different types of available device housings with different kinds of front panel HMI. The available front panels are listed in Chapter 4.






<p>84 HP single rack (3 U) with 3.5" TFT display and solid housing</p>	
<p>84 HP single rack (3 U) with 5.7" TFT display and perforated housing</p>	
<p>42 HP single rack (3 U) with 3.5" TFT display and solid housing</p>	
<p>42 HP double rack (6 U) with 3.5" TFT display and solid housing</p>	
<p>24 HP panel instrument case with B/W display (left) TFT display (right)</p>	

Figure 3-1 Rack configuration illustrations











## 1.1.5. Human-Machine Interface (HMI) module


The EuroProt+ device HMI consists of the following two main parts:

- Hardware: the HMI module, which is the front panel of the device, this is described here
- Software: the embedded web server and the menu system that is accessible through the HMI module. The web server is accessible via station bus, EOB interface or RJ-45 Ethernet connector. This is described in detail in the [Operating Manual](#) (external document).

### 1.1.5.1. Local HMI modules

MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	RACK DEPTH	ILLUSTRATION
HMI+/3505 HMI+/3405*	3,5" TFT	EOB	42 HP	Reduced	
			84 HP		
HMI+/3506 HMI+/3406* HMI+/3404*	3,5" TFT	RJ-45	42 HP	Reduced	
			Double 42HP		
			84 HP		
HMI+/5005	5,7" TFT	EOB	42 HP	Reduced	
HMI+/5006 HMI+/5004*	5,7" TFT	RJ-45	42 HP	Reduced	
			Double 42 HP		n/a
HMI+/5706 HMI+/5704*	5,7" TFT	RJ-45	84 HP	Reduced	

\*new display hardware requires CDSP firmware version 1560-H5 or higher!

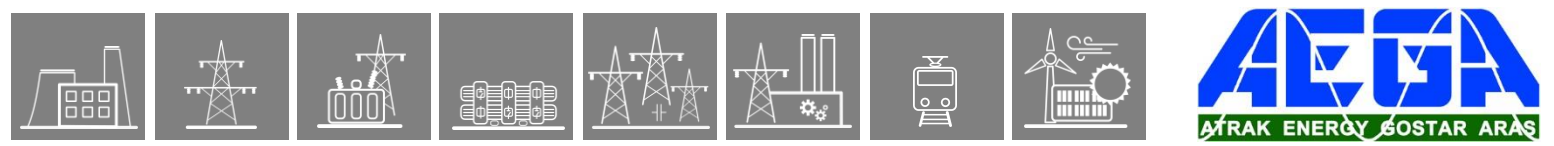

The following modules were made for the previous (now obsolete) racks (see Chapter 22.1), so they can be found in numerous devices. These became obsolete as well, **they are not recommended for new designs!**

MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	RACK DEPTH	ILLUSTRATION
HMI+/3501	3,5" TFT	EOB	42 HP	Normal	
			84 HP		
HMI+/3502	3,5" TFT	RJ-45	42 HP	Normal	
			84 HP		
HMI+/5001	5,7" TFT	EOB	42 HP	Normal	
HMI+/5002	5,7" TFT	RJ-45	42 HP	Normal	
HMI+/5701	5,7" TFT	EOB	84 HP	Normal	
HMI+/5702	5,7" TFT	RJ-45	84 HP	Normal	

### 1.1.5.2. Remote HMI

Protecta provides an alternative solution in that case if the IED can be only mounted in a non-practical way for managing the device via usual Human-Machine Interface.

By using a remote HMI (*terminal HMI device*), customers can place the HMI up to 3 meters far from the IED itself (*host device*) and mount the IED in any possible way that is applicable. The connection between the remote HMI and the IED is provided by a custom galvanic interface with DA-15 connector on the remote side.




Depending on the size of the HMI module you can use any applicable mounting methods that described in the [Mounting methods](#) chapter (Flush mounting, Semi-flush mounting, Rack mounting).

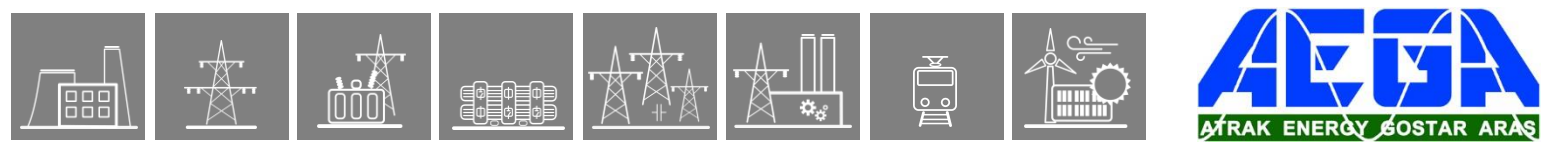


Figure 4-1 42 HP Remote HMI



Figure 4-2 Remote HMI module with its host device

MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	RACK DEPTH	ILLUSTRATION
HMIT+/3505	3,5" TFT	EOB	42 HP	Reduced	
			84 HP		
HMIT+/3506	3,5" TFT	RJ-45	42 HP	Reduced	
			84 HP		
HMIT+/5706	5,7" TFT	RJ-45	84 HP	Reduced	


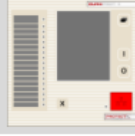

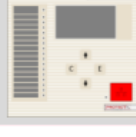


The following modules were made for the previous (now obsolete) racks (see Chapter 22.1), so they can be found in numerous devices. These became obsolete as well, **they are not recommended for new designs!**

MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	RACK DEPTH	ILLUSTRATION
HMIT+/3501	3,5" TFT	EOB	42 HP	Normal	
			84 HP		
HMIT+/3502	3,5" TFT	RJ-45	42 HP	Normal	
			84 HP		
HMIT+/5702	5,7" TFT	RJ-45	84 HP	Normal	

### 1.1.5.3. S24 HMI


The S24 Smart Line devices have a different HMI family:


MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	MOUNTING	ILLUSTRATION
HMI+/2604* HMI+/2404 HMI+/2304**	3,5" TFT	RJ-45	24 HP	Normal	
HMI+/2606* HMI+/2406 HMI+/2306**	3,5" TFT	RJ-45	24 HP	DIN-rail	
HMI+/2704* HMI+/2504	B&W LCD	RJ-45	24 HP	Normal	
HMI+/2706* HMI+/2506	B&W LCD	RJ-45	24 HP	DIN-rail	

*\*for newer, modular-type S24 devices*

*\*\*new display hardware requires CDSP firmware version 1560-H5 or higher!*

The following module is **obsolete, it is not recommended for new designs!**

MODULE TYPE	DISPLAY	SERVICE PORT	RACK SIZE	MOUNTING	ILLUSTRATION
HMI+/2401*	3,5" TFT	EOB	24 HP	Normal	

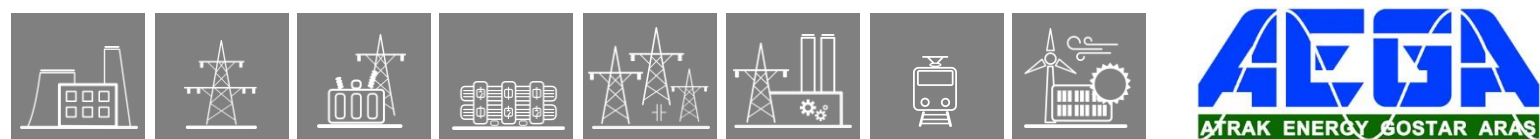

### 1.1.5.4. Parts of the HMI modules

The EuroProt+ device HMI on the front panel contains the following elements:

Function	Description
<b>16 PIECES USER LEDs</b>	Three-color, 3 mm circular LEDs
<b>COM LED</b>	Yellow, 3 mm circular LED indicating EOB/RJ-45 (on the front panel) communication link and activity
<b>CAPACITIVE TOUCH KEY LEDs</b>	4 pcs yellow, 3 mm circular LEDs indicating touch key actions
<b>DEVICE STATUS LED</b>	1 piece three-color, 3 mm circular LED Green: normal device operation Yellow: device is in warning state Red: device is in error state
<b>DEVICE KEYS</b> (I, O, X, PAGE)	Capacitive touch keys
	Tactile push buttons
<b>BUZZER</b>	Audible touch key pressure feedback
<b>CHANGEABLE LED DESCRIPTION LABEL</b>	Describes user LED functionality
<b>DISPLAY</b>	320 × 240 pixel TFT color display with resistive touchscreen interface (3.5" or optional 5.7")
	128 × 64 LCD black & white display
<b>OPTICAL INTERFACE FOR FACTORY USAGE</b>	For debugging and software development purposes <i>Only for 42 HP and 84 HP devices.</i>
<b>EOB CONNECTOR</b>	<p><b>Ethernet Over Board:</b> communication interface accomplishes isolated, non-galvanic Ethernet connection with the help of a magnetically attached EOB device. The EOB device has an RJ-45 type connector supporting Ethernet connection to the user computer. This is a proprietary and patented solution from Protecta Ltd.</p> <p><b>EOB1:</b> Supporting 10Base-T Ethernet connection. Passive device with one RJ45 type connector. Obsolete module.</p> <p><b>EOB2:</b> Supporting 10/100Base-Tx Ethernet connection. An active device that has a USB port in addition to the RJ45 connector for powering up.</p>
<b>ETHERNET SERVICE PORT</b>	<b>IP56</b> rated Ethernet 10/100-Base-T interface with RJ-45 type connector (IP56 only valid if the cap of the service port is closed.)

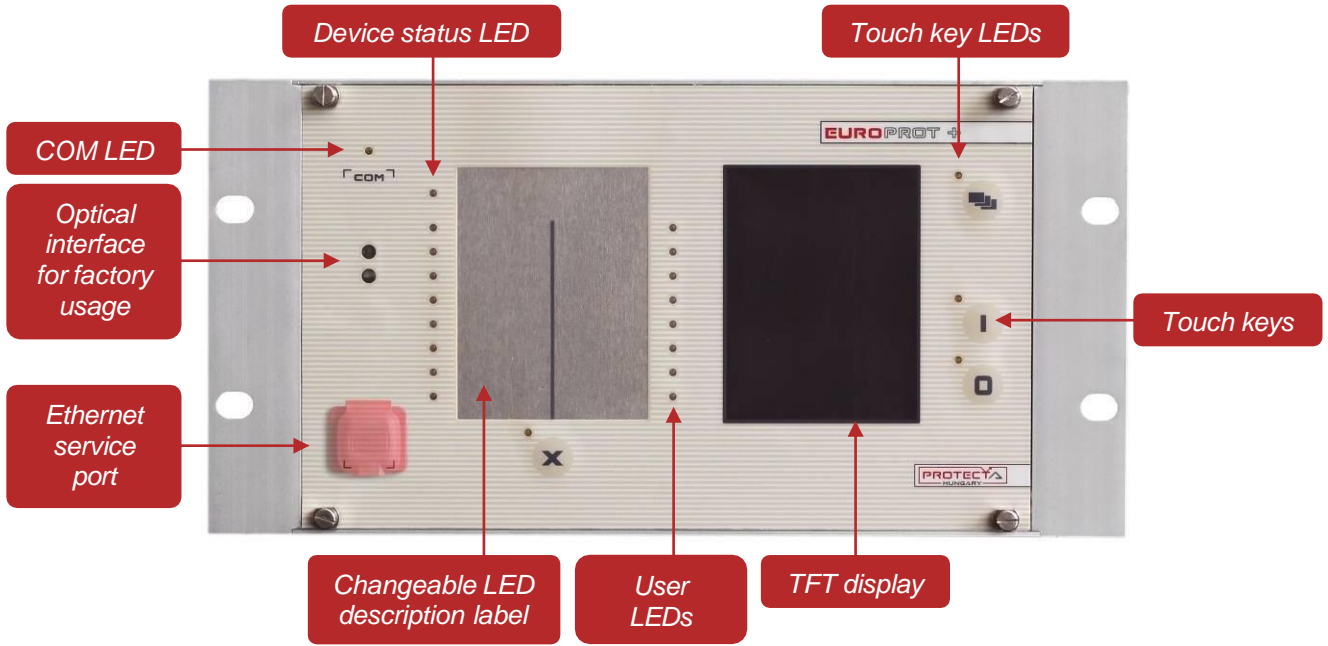


Figure 4–3 HMI signals and controls

**LCD dot-defect handling policy**

The definitions of dot-defect are as below:

- The defect area of the dot must be bigger than half of a dot.
- For bright dot-defect (sparkle mode), showing black pattern, the dot's brightness must be over 30 % brighter than others at black raster.
- For dark dot-defect (black mode), showing white pattern, the dot's brightness must be under 70 % darker than others at R.G.B. raster.

DOT-DEFECT TYPE		MAXIMUM NUMBER ACCEPTABLE	
		3.5"	5.7"
SPARKLE MODE	1 dot	4	4
	2 dots	2 (sets)	1
	IN TOTAL	4	5
BLACK MODE	1 dot	4	5
	2 dots	2 (sets)	2
	IN TOTAL	4	5
SPARKLE MODE AND BLACK MODE	2 dots	2 (sets)	n/a
IN TOTAL		6	10

For further information please contact our Application Team. ([application@protecta.hu](mailto:application@protecta.hu))

## 1.1.6. Current input module

This is an input module with intermediate current transformers to input the phase currents and the zero-sequence current. The rated current for the phase current and for the zero-sequence current can be selectable by parameter.

Main features:

- Rated frequency: 50 Hz, 60 Hz
- *Electronic* iron-core flux compensation

Connector types:

- *The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.*

MODULE TYPE	CT+/0101		CT+/1111*		CT+/1155		CT+/1500	
CHANNEL NUMBER	1 – 4		1 – 4		1 – 4		1 – 3	
SELECTABLE RATED CURRENT, $I_N$ [A]	0.04	0.2	1	5	1	5	1	5
MAX. MEASURED CURRENT ( $\pm 10\%$ )	$8 \times I_N$		$50 \times I_N$		$12.5 \times I_N$		$2 \times I_N$	
POWER CONSUMPTION AT RATED CURRENT [VA]	0.005	0.1	0.01	0.25	0.02	0.45	0.1	1.55
THERMAL WITHSTAND [A]								
CONTINUOUSLY	7		20		20		7	
10 s	50		175		120		50	
1 s	150		500		380		150	
10 ms	330		1200		850		330	
CONNECTOR TYPE	<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> R	
RECOMMENDED APPLICATION	DEFL earth fault protection		Special disturbance recorder application in wider frequency range		Special protection applications where the overcurrent in the secondary circuit can not exceed $10 \times I_N$		General three-phase measurement	

**\*Obsolete module. These modules are not recommended for new designs!**



MODULE TYPE	CT+/1515*		CT+/2500*		CT+/5101			
CHANNEL NUMBER	1 – 4		1 – 3		1 – 3		4	
SELECTABLE RATED CURRENT, $I_N$ [A]	1	5	1	5	1	5	0.2	1
MAX. MEASURED CURRENT ( $\pm 10\%$ )	$2 \times I_N$		$2 \times I_N$		$50 \times I_N$		$12.5 \times I_N$	
POWER CONSUMPTION AT RATED CURRENT [VA]	0.1	1.55	0.1	1.55	0.01	0.25	0.005	0.1
THERMAL WITHSTAND [A]								
CONTINUOUSLY	7		7		20		7	
10 s	50		50		175		50	
1 s	150		150		500		150	
10 ms	330		330		1200		330	
CONNECTOR TYPE	<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> -			
RECOMMENDED APPLICATION	Special disturbance recorder application		Generator protections		Extremely sensitive earth-fault applications			

**\*Obsolete module. These modules are not recommended for new designs!**

MODULE TYPE	CT+/5102				CT+/5111*			
CHANNEL NUMBER	1 – 3		4		1 – 3		4	
SELECTABLE RATED CURRENT, $I_N$ [A]	1	5	0.2	1	1	5	0.001	0.005
MAX. MEASURED CURRENT ( $\pm 10\%$ )	$50 \times I_N$		$50 \times I_N$		$50 \times I_N$		$50 \times I_N$	
POWER CONSUMPTION AT RATED CURRENT [VA]	0.01	0.25	0.001	0.01	0.01	0.25	0.005	0.1
THERMAL WITHSTAND [A]								
CONTINUOUSLY	20		20		20		7	
10 s	175		120		175		50	
1 s	500		380		500		150	
10 ms	1200		850		1200		330	
CONNECTOR TYPE	<u>Default:</u> STVS <u>Options:</u> -				<u>Default:</u> STVS <u>Options:</u> R			
RECOMMENDED APPLICATION	Sensitive earth-fault applications				Sensitive earth-fault applications			

**\*Obsolete module. These modules are not recommended for new designs!**

MODULE TYPE	CT+5115		CT+5116		CT+/5151		CT+/5152	
CHANNEL NUMBER	1 – 4		1 – 3		1 – 4		1 – 4	
SELECTABLE RATED CURRENT, $I_N$ [A]	1	5	1	5	1	5	1	5
MAX. MEASURED CURRENT ( $\pm 10\%$ )	$50 \times I_N$		$50 \times I_N$		$50 I_N$		$50 I_N$	
POWER CONSUMPTION AT RATED CURRENT [VA]	0.01	0.25	0.01	0.25	0.01	0.25	0.01	0.25
THERMAL WITHSTAND [A]								
CONTINUOUSLY	20		20		20		20	
10 s	175		175		175		175	
1 s	500		500		500		500	
10 ms	1200		1200		1200		1200	
CONNECTOR TYPE	<u>Default:</u> STVS <u>Options:</u> R		<u>Default:</u> STVS <u>Options:</u> -		<u>Default:</u> STVS <u>Options:</u> R		<u>Default:</u> STVS <u>Options:</u> R	
RECOMMENDED APPLICATION	<ul style="list-style-type: none"> <li>General protection applications*</li> <li>Three-phase measurement*</li> </ul>		High-impedance differential protection		General protection applications		Busbar protection bay units	

\*The CT+/5115 module handles both applications: it can be connected to the protection and measurement core of the primary CT as well

MODULE TYPE	CT+/5153					CT+/5154*				
CHANNEL NUMBER	1 – 3		4			1 – 3		4		
SELECTABLE RATED CURRENT, $I_N$ [A]	1	5	1	0.2	0.2 sens.	1	5	5	1	0.2
MAX. MEASURED CURRENT ( $\pm 10\%$ )	$50 \times I_N$			$10 \times I_N$		$50 \times I_N$			$10 \times I_N$	
POWER CONSUMPTION AT RATED CURRENT [VA]	0.06	1.3	0.6	0.004	0.0004	0.06	1.3	1.3	0.06	0.004
THERMAL WITHSTAND [A]										
CONTINUOUSLY	20		7			20				
10 s	175		50			175				
1 s	500		150			500				
10 ms	1200		330			1200				
CONNECTOR TYPE	<u>Default:</u> STVS <u>Options:</u> R, T**					<u>Default:</u> STVS <u>Options:</u> R				
RECOMMENDED APPLICATION	General protection application, extremely sensitive transient earth-fault protections					General protection application, sensitive transient earth-fault protections				


**\*Obsolete module. These modules are not recommended for new designs!**

\*\*The connector remains the same STVS, only the handle of the module becomes narrower and will be made of aluminum

MODULE TYPE	CT+/5155*					CT+/5253**				
CHANNEL NUMBER	1 – 3		4			1 – 3		4		
SELECTABLE RATED CURRENT, $I_N$ [A]	1	5	0.25	0.05	0.05 sens.	5	1	0.25	0.05	0.05 sens.
MAX. MEASURED CURRENT ( $\pm 10\%$ )	50 × $I_N$			10 × $I_N$		25 × $I_N$				
POWER CONSUMPTION AT RATED CURRENT [VA]	0.06	1.3	0.6	0.004	0.0004	0.06	1.3	0.6	0.004	0.0004
THERMAL WITHSTAND [A]										
CONTINUOUSLY	20		7			20		7		
10 s	175		50			175		50		
1 s	500		150			500		150		
10 ms	1200		330			1200		330		
CONNECTOR TYPE	Default: STVS Options: -					Default: STVS Options: -				
RECOMMENDED APPLICATION	DMD Special sensitive earth fault protection					Circuit breaker diagnostics				

**\*Obsolete module. These modules are not recommended for new designs!**

**\*\*Special module**

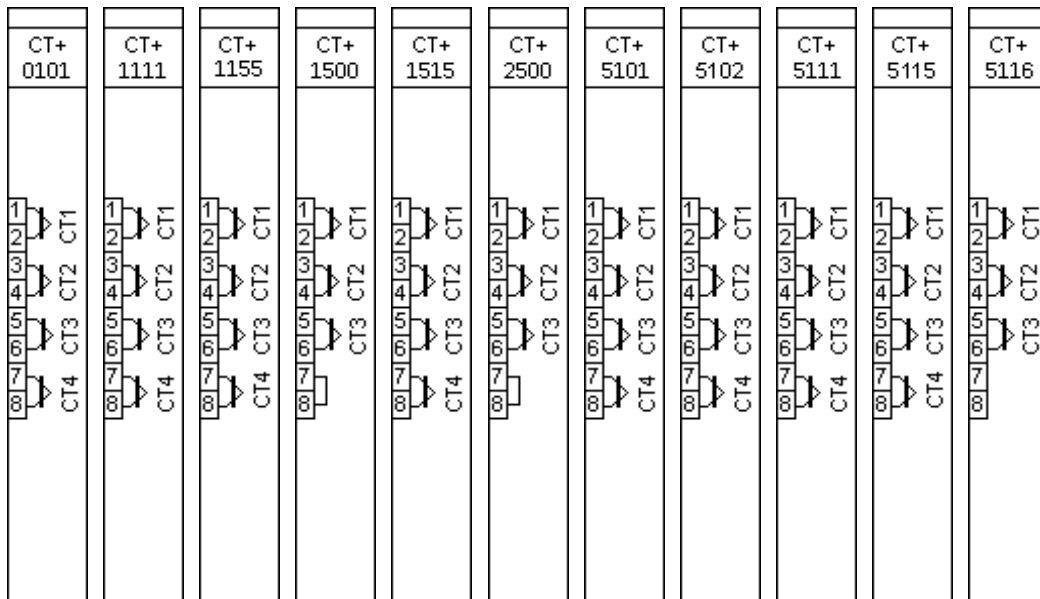


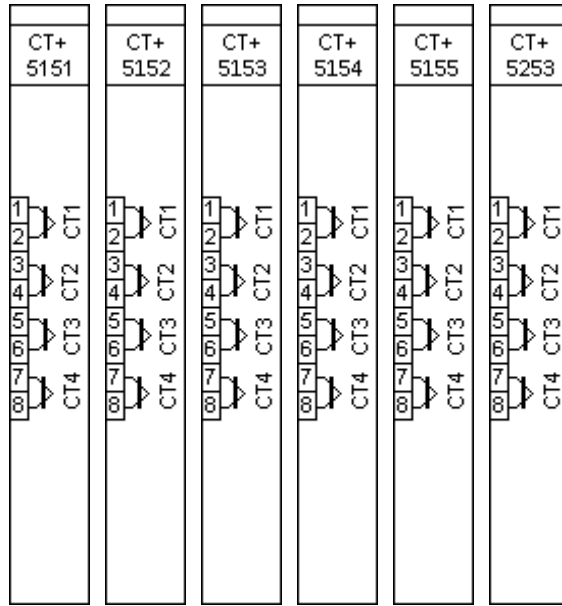


Figure 5-1 CT modules

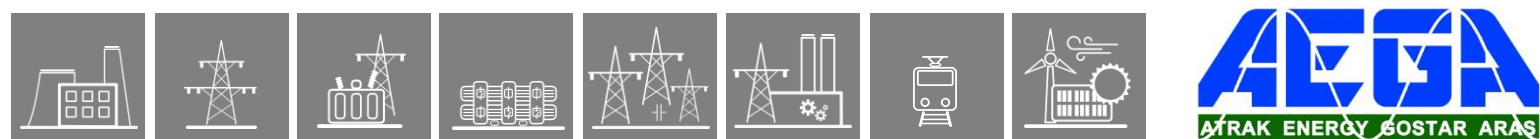

## 1.1.7. Voltage input module

If the device performs voltage and/or frequency related functions and measurements (voltage protections, directional protections, frequency protections etc.), then this module is needed.

### Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

MODULE TYPE	VT+/2211	VT+/2212*	VT+/2215**
CHANNEL NUMBER	4	4	4
SELECTABLE VOLTAGE RANGE	<u>Type 100:</u> $\frac{100}{\sqrt{3}}$ , 100 V <u>Type 200:</u> $\frac{200}{\sqrt{3}}$ , 200 V	<u>Type 100:</u> $\frac{100}{\sqrt{3}}$ , 100 V <u>Type 200:</u> $\frac{200}{\sqrt{3}}$ , 200 V	<u>Type 100:</u> $\frac{100}{\sqrt{3}}$ , 100 V <u>Type 200:</u> $\frac{200}{\sqrt{3}}$ , 200 V
CONTINUOUS VOLTAGE WITHSTAND	200 V	200 V	200 V
SHORT TIME OVERLOAD (1 s)	275 V (10s)	275 V	275 V
VOLTAGE MEASURING RANGE ( $\pm 10\%$ )	$0.05 U_N - 1.3 U_N$	$0.05 U_N - 1.3 U_N$	$0.05 U_N - 1.3 U_N$
POWER CONSUMPTION OF VOLTAGE INPUT	0.61 VA at 200 V 0.2 VA at 100 V	0.61 VA at 200 V 0.2 VA at 100 V	<u>ch. 1-3:</u> 0.61 VA at 200 V 0.2 VA at 100 V <u>ch. 4:</u> 50 mVA at 100 V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T, R	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -
RECOMMENDED APPLICATION	General protection applications.	Special disturbance recorder application in wider frequency range	Special protection applications with voltage transformers that require low power consumption on the 4 <sup>th</sup> channel.

**\*Obsolete module. These modules are not recommended for new designs!**

\*\*Special module

MODULE TYPE	VT+/2245	VT+/2246*
CHANNEL NUMBER	4	3
SELECTABLE VOLTAGE RANGE	<b>Type 200:</b> $\frac{200}{\sqrt{3}}$ , 200 V <b>Type 400:</b> $\frac{400}{\sqrt{3}}$	
CONTINUOUS VOLTAGE WITHSTAND	400 V	
SHORT TIME OVERLOAD (1 s)	420 V	420 V (10 s)
VOLTAGE MEASURING RANGE ( $\pm 10\%$ )	0.05 U <sub>N</sub> – 1.3 U <sub>N</sub>	
POWER CONSUMPTION OF VOLTAGE INPUT	0.21 VA at 200 V 0.28 VA at 230 V	
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> -
RECOMMENDED APPLICATION	Protection applications for 400 V AC secondary voltage	Special protection applications for 400 V AC secondary voltage and increased isolation to 6 kV

\*Special module


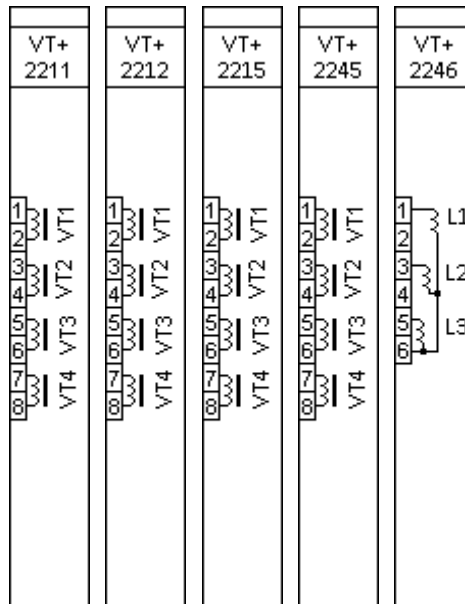


Figure 6-1 VT modules

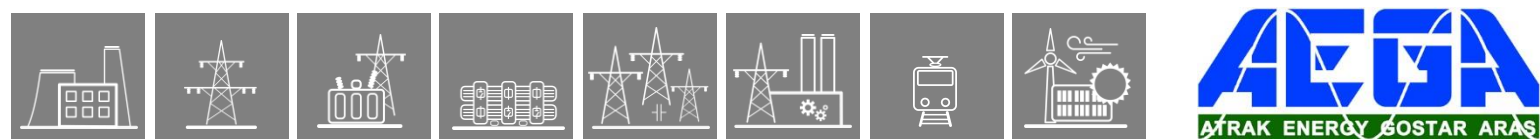

## 1.1.8. Binary input module

The inputs are galvanic isolated, and the module converts high-voltage signals to the voltage level and format of the internal circuits. The inputs of this module can be also programmed to serve as a PPM input for time synchronization.

### Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

### Notes for the following tables:

- **Thermal withstand voltage:** continuous with 60 % of the input channels are energized.
- **Clamp voltage:** these are the guaranteed values; the actual ones might differ from those provided here (falling and rising around  $0.66 U_N$  and  $0.77 U_N$ , respectively)

MODULE TYPE	O8+/2401	O8+/4801	O8+/1101	O8+/2201
CHANNEL NUMBER	8	8	8	8
TIME SYNCHRONIZATION	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP
RATED VOLTAGE	24 V	48 V	110 V	220 V
THERMAL WITHSTAND VOLTAGE	72 V	100 V	250 V	320 V
CLAMP VOLTAGE	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$
COMMON GROUPS	independent	independent	independent	independent
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T

MODULE TYPE	O12+/2401	O12+/4801	O12+/1101	O12+/2201
CHANNEL NUMBER	12	12	12	12
TIME SYNCHRONIZATION	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP
RATED VOLTAGE	24 V	48 V	110 V	220 V
THERMAL WITHSTAND VOLTAGE	72 V	72 V	250 V	320 V
CLAMP VOLTAGE	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$
COMMON GROUPS	4 × 3 common	4 × 3 common	4 × 3 common	4 × 3 common
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> T

MODULE TYPE	O12+/4201*	O12+/2101*	O15+/4801T	O15+/1101T
CHANNEL NUMBER	12	12	15	15
TIME SYNCHRONIZATION	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP	configured by EuroCAP
RATED VOLTAGE	24 V DC / 48 V DC user selectable on channel basis by jumpers	110 V DC / 220 V DC user selectable on channel basis by jumpers	48 V	110 V
THERMAL WITHSTAND VOLTAGE	72 V	320 V	100 V	250 V
CLAMP VOLTAGE	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>
COMMON GROUPS	4 × 3 common	4 × 3 common	1 × 15 common	1 × 15 common
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> T	BLT	BLT

• O12+2101 and O12+4201 modules can be used only in demonstration applications! For further information see our [Product availability](#) chapter.

MODULE TYPE	O16+/2401*	O16+/4801*	O16+/1101*	O16+/2201*
CHANNEL NUMBER	16	16	16	16
TIME SYNCHRONIZATION	-	-	-	-
RATED VOLTAGE	24 V	48 V	110 V	220 V
THERMAL WITHSTAND VOLTAGE	72 V	100 V	250 V	320 V
CLAMP VOLTAGE	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>	falling 0.64 U <sub>N</sub> rising 0.8 U <sub>N</sub>
COMMON GROUPS	2 × 8 common	2 × 8 common	2 × 8 common	2 × 8 common
CONNECTOR TYPE	<u>Default:</u> BL 3.5 <u>Options:</u> -	<u>Default:</u> BL 3.5 <u>Options:</u> -	<u>Default:</u> BL 3.5 <u>Options:</u> -	<u>Default:</u> BL 3.5 <u>Options:</u> -

\*Obsolete module. These modules are not recommended for new designs! O15+ modules are recommended instead (see above).



Main features:

- Digitally filtered per channel
- Current drain:
  - max. 1.6 mA per channel at 220 V DC
  - max. 1.8 mA per channel at 110 V DC
  - max. 2 mA per channel at 48 V DC
  - max. 3 mA per channel at 24 V DC
- In such applications where the input voltage is 60 V the modules with 48 V rated voltage can be used.
- Input voltage type can be either DC or AC voltage. If AC voltage is used make sure that the type and the parameters of the binary inputs are configured properly in EuroCAP tool.


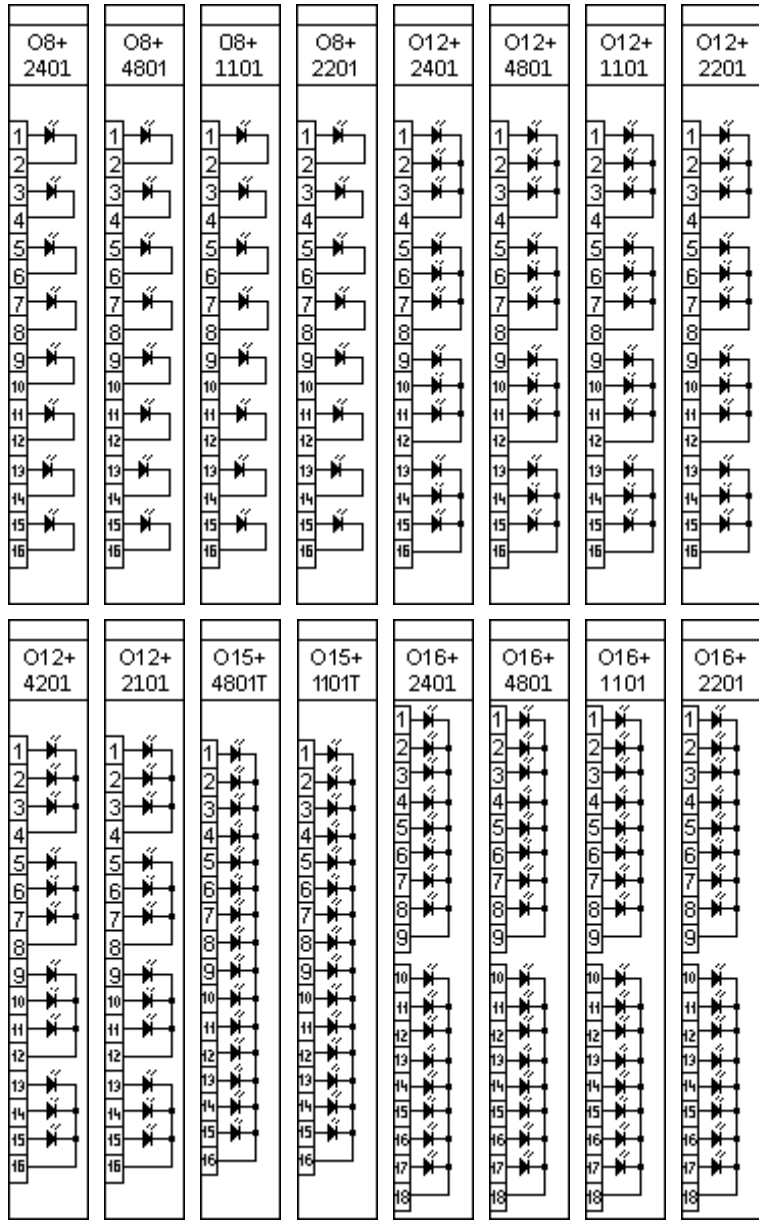


Figure 7-1 Binary input modules

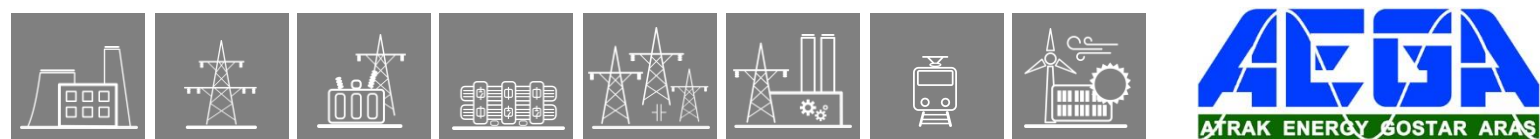

## 1.1.9. Signaling module


The signaling module has 4, 8, 12 or 16 relay outputs with dry contacts.

### Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

MODULE TYPE	R4+/01	R8+/00	R8+/80	R8+/C0
RATED VOLTAGE	250 V AC/DC	250 V AC/DC	250 V AC/DC	250 V AC/DC
CONTINUOUS CARRY	8 A	8 A	8 A	8 A
CONTACT VERSIONS	4 CO	8 NO	CH8 NC others NO	CH7 and CH8 NC others NO
GROUP ISOLATION	4 independent	8 independent	8 independent	8 independent
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T

MODULE TYPE	R8+/FF	R12+/0000	R12+/4000
RATED VOLTAGE	250 V AC/DC	250 V AC/DC	250 V AC/DC
CONTINUOUS CARRY	8 A	8 A	8 A
CONTACT VERSIONS	8 NC	12 NO	CH12 NC others NO
GROUP ISOLATION	8 independent	4 × 3 common	4 × 3 common
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> F, T

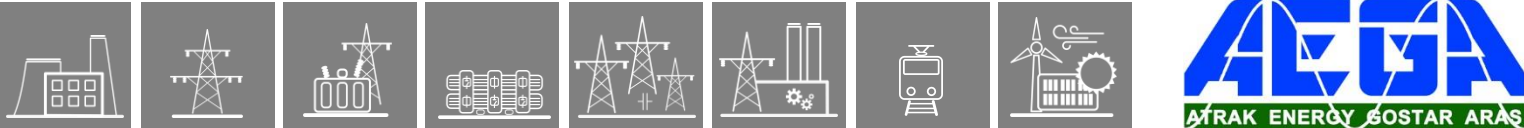

MODULE TYPE	R16+/0000	R16+/8000	R16+/8080
RATED VOLTAGE	250 V AC/DC	250 V AC/DC	250 V AC/DC
CONTINUOUS CARRY	8 A	8 A	8 A
CONTACT VERSIONS	16 NO	CH16 NC others NO	CH16 and CH8 NC others NO
GROUP ISOLATION	2 × 8 common	2 × 8 common	2 × 8 common
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -

MODULE TYPE	R4S+/01*	R4S+/16*	R1T+/0001***
RATED VOLTAGE	250 V AC/DC	250 V AC/DC	320 V AC/DC
CONTINUOUS CARRY	8 A 120 mA**	120 mA	32 A
CONTACT VERSIONS	4 CO (1 SSR, 3 normal)	4 CO (4 SSR)	1 NO
GROUP ISOLATION	4 independent	4 independent	1 independent
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -

\*Modules with **solid-state relays (SSR)**

\*\*If the signaling is performed via the solid-state relay the continuous carry value is 120 mA.

\*\*\***Thyristor module**. Can be used only unipolarly. For further information see our [Product availability chapter](#).

Main features (according to IEC 60255-1):

- Maximum switching voltage: 400 V AC
- Breaking capacity: (L/R=40 ms) at 220 V DC: 0.2 A, at 110 V DC: 0.3 A
- Breaking capacity max.: 2000 VA
- Short time carrying capacity: 1 s, 35 A
- Limiting making current, max. 4 s: 15 A (df = 10 %)
- Dielectric strength between open contacts, 1 min: 1000 V<sub>RMS</sub>
- Mechanical endurance: 10 × 10<sup>6</sup> cycles
- Circuit closing capability: typically 10 ms, maximally 22 ms, with SSR 0.5 ms.
- Bounce time: typically 6,5 ms, maximally 10 ms, with SSR 0.5 ms.
- Minimal switching requirement: 5 V
- *The signaling is also performed via a solid-state relay (SSR) channel on R4S+01 and R4S+16 module*

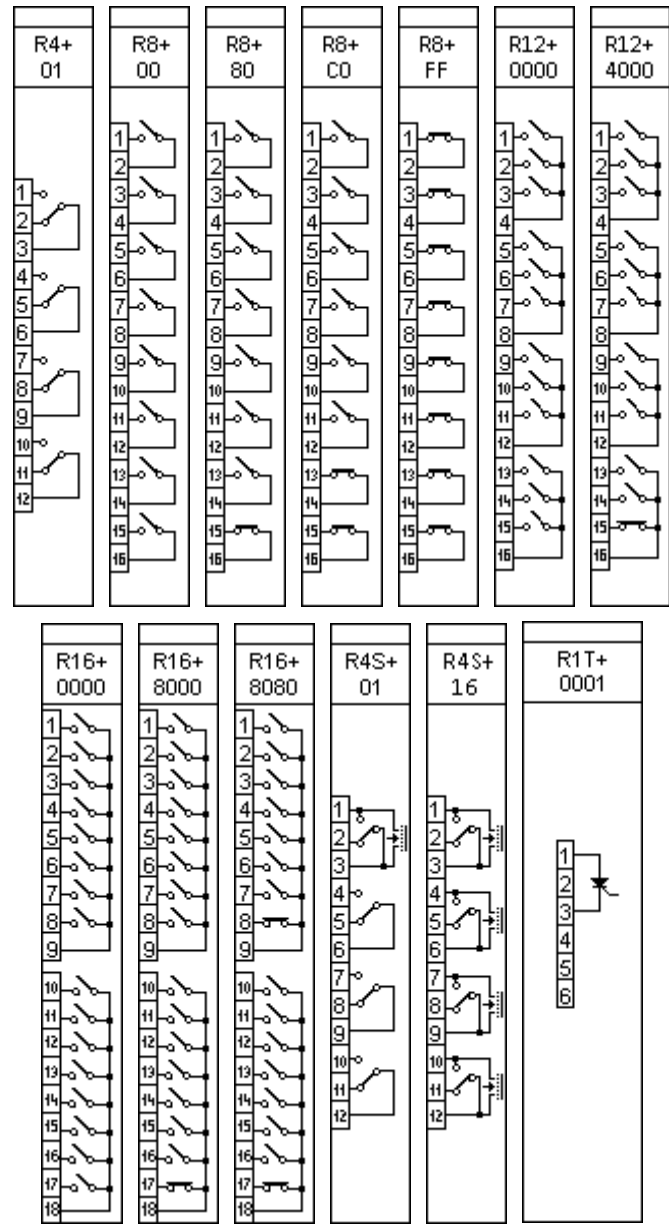


Figure 8-1 Signaling modules

## 1.1.10. Tripping module

The tripping module is a proprietary and patented solution that facilitates direct control of a circuit breaker.

### Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	TRIP+/4201	TRIP+1101*	TRIP+/2101	TRIP+/21F1**	TRIP+/2201
CHANNEL NUMBER	4	4	4	4	4
RATED VOLTAGE	24 V DC and 48 V DC	110 V DC	110 V DC	110 V DC	220 V DC
THERMAL WITHSTAND VOLTAGE	72 V DC	242 V DC	150 V DC	150 V DC	242 V DC
CONTINUOUS CARRY	8 A	8 A	8 A	8 A	8 A
MAKING CAPACITY	0.5 s, 30 A	0.5 s, 30 A	0.5 s, 30 A	0.5 s, 30 A	0.5 s, 30 A
BREAKING CAPACITY	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T

**\*Obsolete module. These modules are not recommended for new designs!**

**\*\*Without trip circuit supervision.**

### Main features:

- High-speed operation: with pre-trip 0.5 ms, without pre-trip typically 10 ms, maximally 22 ms.
- Trip circuit supervision for each trip contact, except TRIP+21F1
- With 2-wire wiring, the tripping output can be *dry* contact type, too

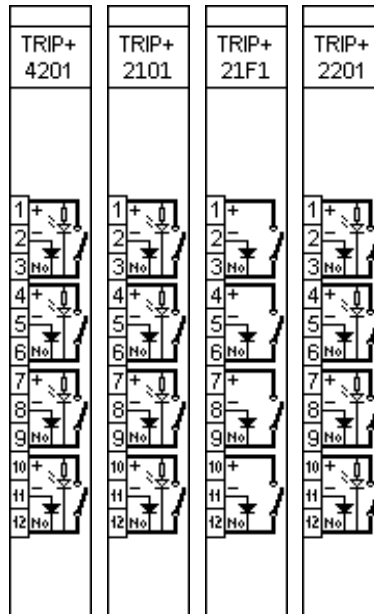


Figure 9-1 Tripping modules

### 1.1.10.1. TRIP+ module wiring

The tripping module provides tripping circuit supervision function (TCS). The wiring of these modules can be 2-wire or 3-wire. (TCS function is active for all wiring methods.)

The voltage of the "No" contact is maximized at 15 V by a Zener-diode. Make sure that the voltage caused by the resistance of the circuit breaker and the injected current from the TRIP+ module does not reach 10 V.

Our TRIP+ modules are improved to switch DC circuits. **Using reversed polarity or AC voltage can cause the damage of the internal circuits. Improper wiring might cause improper operation!**

#### 1.1.10.1.1. 3-wire TRIP+ wiring methods

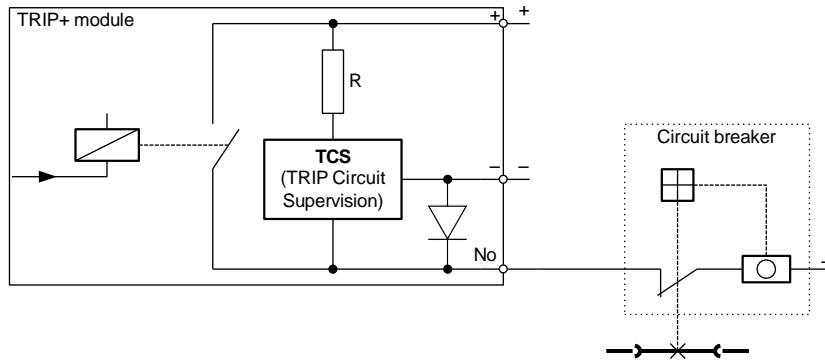


Figure 9-2 3-wire TRIP+ wiring

It is possible to use parallel connected TRIP+ modules. In this case the negative terminals must be common.

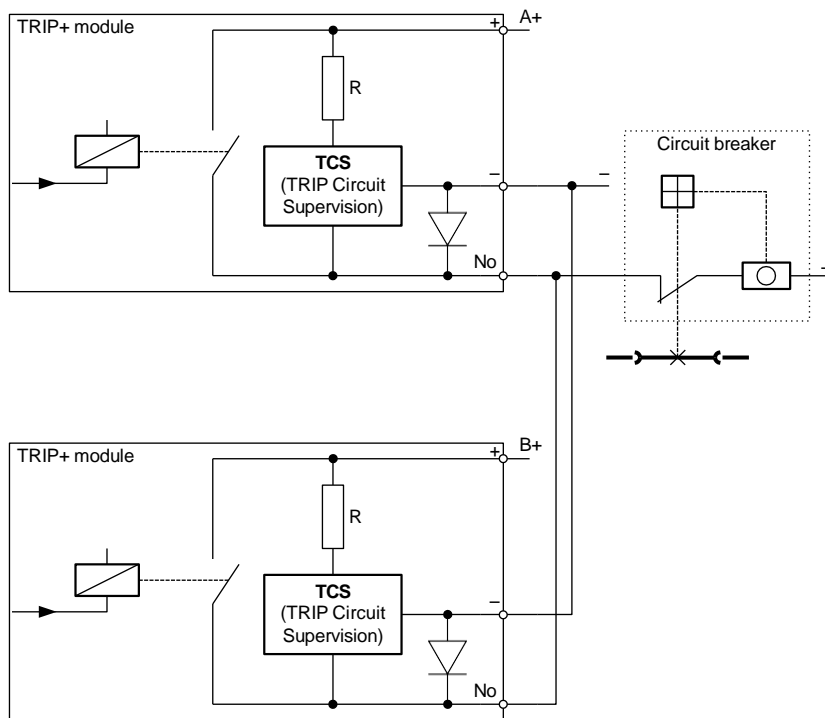


Figure 9-3 3-wire TRIP+ wiring using parallel connected TRIP+ modules

### 1.1.10.1.2. 2-wire TRIP+ wiring methods

If necessary, the TRIP+ modules can be wired using only the “+” and the “No” contacts.

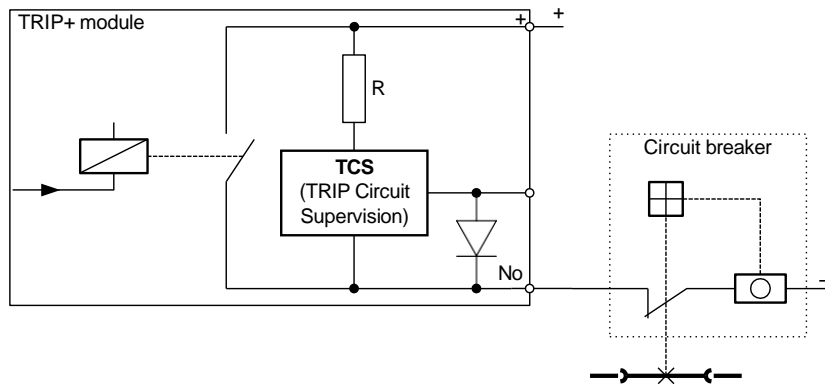


Figure 9-4 2-wire TRIP+ wiring

It is possible to use parallel connected TRIP+ modules.

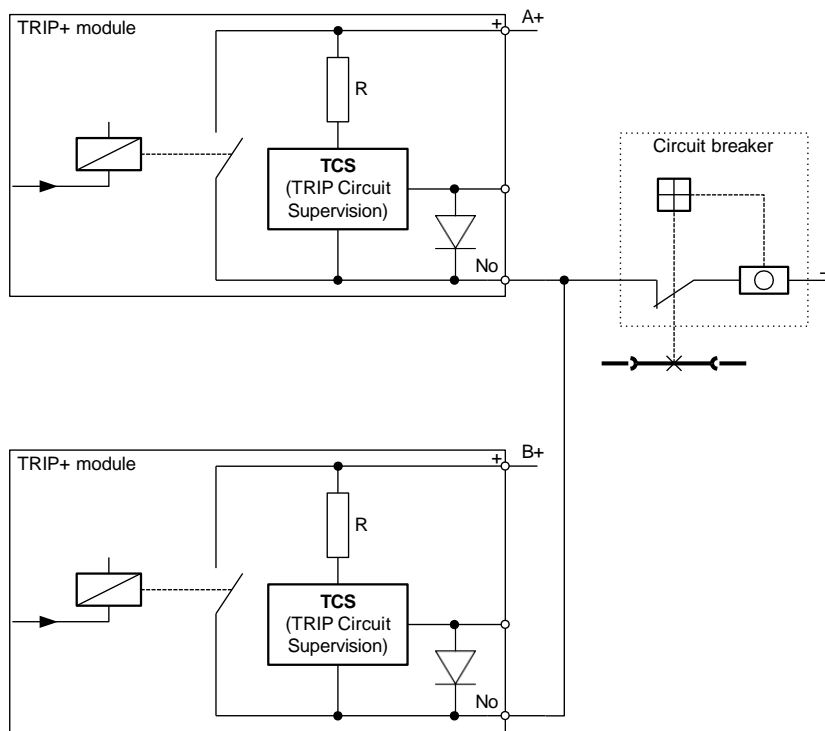


Figure 9-5 2-wire TRIP+ wiring using parallel connected TRIP+ modules

If the circuit breaker needs two-pole switching TRIP+ modules can be connected series as you can see in Figure 9–6.

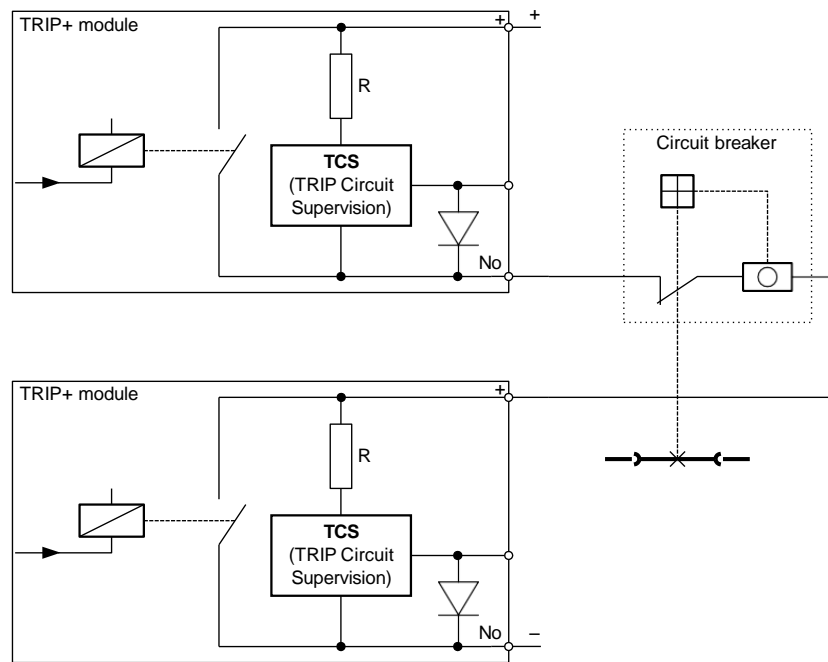


Figure 9-6 2-wire TRIP+ wiring using series connected TRIP+ modules

### 1.1.10.2. Trip Circuit Supervision (TCS)


Apart from the TRIP+/21F1, all TRIP modules have TCS. The feature is described in detail (tech. data, instructions, etc.) in a separate document:

[https://www.protecta.hu/downloads/tcs\\_en](https://www.protecta.hu/downloads/tcs_en)

The technical data of the TCS is shown here as well:

	MODULE TYPE	TRIP+/4201	TRIP+/2101	TRIP+/2201
	VALUE OF R RESISTOR ( $\pm 10\%$ )	10 k $\Omega$	73 k $\Omega$	130 k $\Omega$
	INJECTED CURRENT AT "NO" CONTACT	2.4 mA @ 24 V DC 4.8 mA @ 48 V DC	1.5 mA @ 110 V DC	1.7 mA @ 220 V DC
<b>MAXIMUM RESISTANCE OF THE TRIP COIL</b>	3-WIRE WIRING (MAX. 10 V)	11.8 k $\Omega$ @ 24 V DC 3.7 k $\Omega$ @ 48 V DC	9.7 k $\Omega$ @ 110 V DC 8.4 k $\Omega$ @ 125 V DC	8.1 k $\Omega$ @ 220 V DC
	3-WIRE WIRING WITH IN PARALLEL (MAX. 10 V)	5.9 k $\Omega$ @ 24 V DC 1.8 k $\Omega$ @ 48 V DC	4.8 k $\Omega$ @ 110 V DC 4.2 k $\Omega$ @ 125 V DC	4 k $\Omega$ @ 220 V DC
	2-WIRE METHOD (1 mA MIN. CURRENT)	14 k $\Omega$ @ 24 V DC 38 k $\Omega$ @ 48 V DC	37 k $\Omega$ @ 110 V DC 52 k $\Omega$ @ 125 V DC	90 k $\Omega$ @ 220 V DC



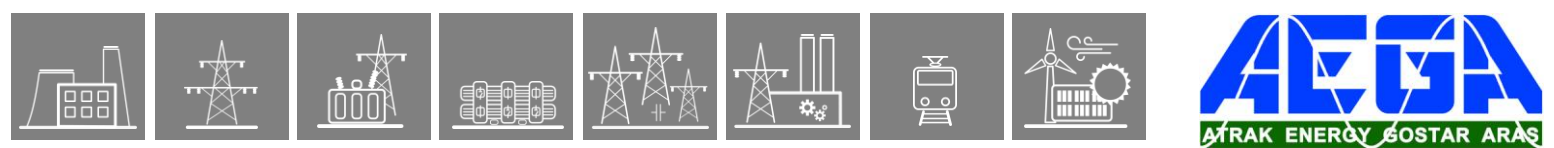

### **1.1.10.3. Relay output modules of the EuroProt+ system**

#### **1.1.10.3.1. Types of the relay output modules of the EuroProt+ system**

Basically there are two different types of relay output modules in the EuroProt+ devices: TRIP relay output module for high-speed operation of the circuit breakers Signal relay output module

#### **1.1.10.3.2. Operating modes of the relay contacts**

For operation of the relay output modules there are four different modes:

Application of TRIP relays for commands of fast protection functions

User application of the TRIP relays Fast operation of any relay contacts (TRIP relays or signal relays) Control of signal relay outputs.

The procedures of command processing are shown in. This document describes the details using the TRIP relay contacts as an example.

The left side of the Figure shows the available sources of the trip commands:

The functionblocks, configured in the device,

The communication channels to the SCADA system,

Commands generated using the front panel LCD of the device,

Any other binary signals, e.g. signals from the binary inputs of the device.

The right side of the Figure shows one of the TRIP relays symbolically.

The Figure provides a survey of the configured trip command processing methods. In the middle of the Figure, the locations indicated by "User" shows the possibilities for the user to modify the procedures. All other parts are factory programmed.


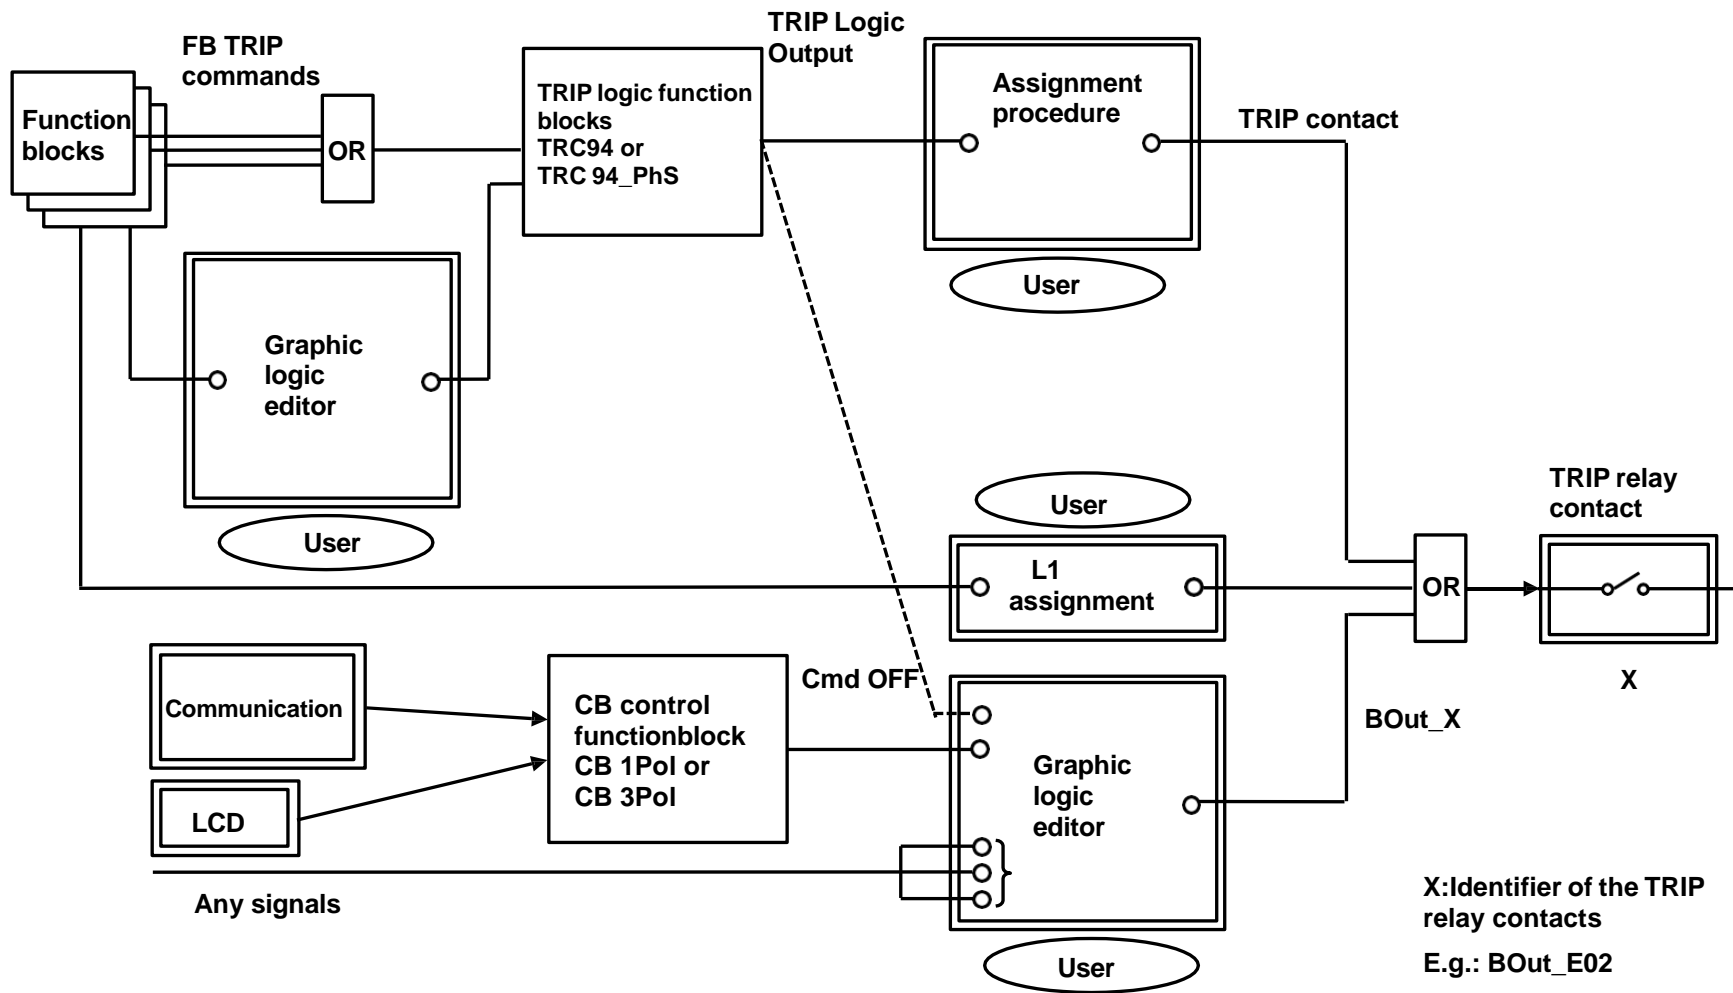


Figure 1-1 Principle of TRIP command processing

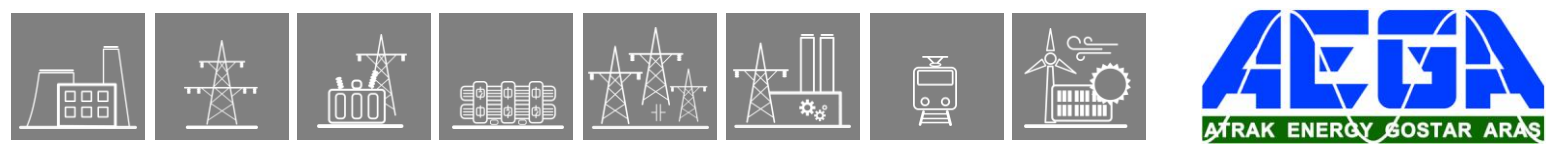

### **1.1.10.3.3. Application of TRIP relays for commands of fast protection functions**

#### **1.1.10.3.3.1. Aim of application of TRIP relays**

The main aim of application of TRIP relays is to bypass the time delay of the mechanical contacts. For this aim there is a „slow” mechanical contact and a „fast” electronic switch in serial connection.

#### **1.1.10.3.3.2. Control of the TRIP relays**

The operation of the TRIP relays is performed in two steps:  
Preparation of the circuit for the trip command  
Trip command generation

##### **1.1.10.3.3.2.1. Preparation of the circuit for the trip command**

At the time when a protection function detects violation of the setting value of the characteristic quantity, the preparation process closes the „slow” mechanical contact, preparing the circuit for command generation.

##### **1.1.10.3.3.2.2. The trip command generation**

At the moment when the fast protection function – after some repeated checks, i.e. the timeout of the internal time counter – decides to generate the trip command then the „fast” electronic switch performs the operation, generating the trip command to the circuit breaker. This command is generated via the „TRC94\_ PhS” or via the simplified „TRC94” trip logic functionblocks.

NOTE: If the TRIP command is not received within the expected time delay, then the command preparation resets after 50 ms. When the device is tested in the laboratory e.g. for measuring the limits of the distance protection characteristic, this can result a cyclic closing and opening of the mechanical contact and rattling can be heard. This does not mean faulty operation of the device!

##### **1.1.10.3.3.3. The factory programming for relay control**

For the trip command of protection functions, where the requirement is the fast operation (distance protection first zone, line differential protection, transformer differential protection, fast overcurrent stage, synchronous switching, etc.) the process of preparation and command generation is programmed in the form of „Fast logic”.


The alignment of the TRIP command is the task of the “TRIP logic functionblock”. All devices operating with TRIP binary output module, has a configured TRC 94 simplified, or a TRC 94\_PhS TRIP logic functionblock. This converts e.g. the trip command due to phase-to-phase fault to a three-phase trip command, or extends the duration of the command according to the parameter setting. All these are described in the dedicated document.

The fast TRIP commands are assigned to the TRIP relay output contacts according to the factory configuration, but the user has a possibility to modify or extend this assignment using the EuroCAP configuration software. The factory assignment is described in the user manual of the given device configuration.

To ensure fast operation, this „Fast logic” is performed in each sampling cycle (1ms).


### 1.1.10.3.3.4. Changing the TRIP command assignment

The user has a possibility to modify or extend the TRIP command assignment using the EuroCAP configuration software. The menu item to be started is shown in *Figure 2-1*.

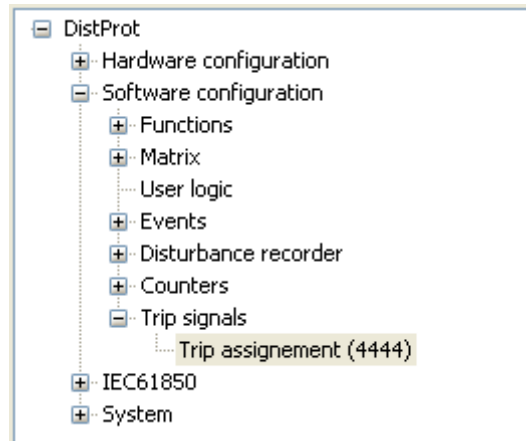

*Figure 2-1 Menu item for TRIP command assignment*

As *Figure 2-2* shows, the signal of type „TripLogic Output” (this is the command generated by the „TRIP logic functionblock”) can be assigned to a „Trip Contact” type relay output. The dialog window of the EuroCAP software selects these types of signals only; the available signals however can be assigned freely.

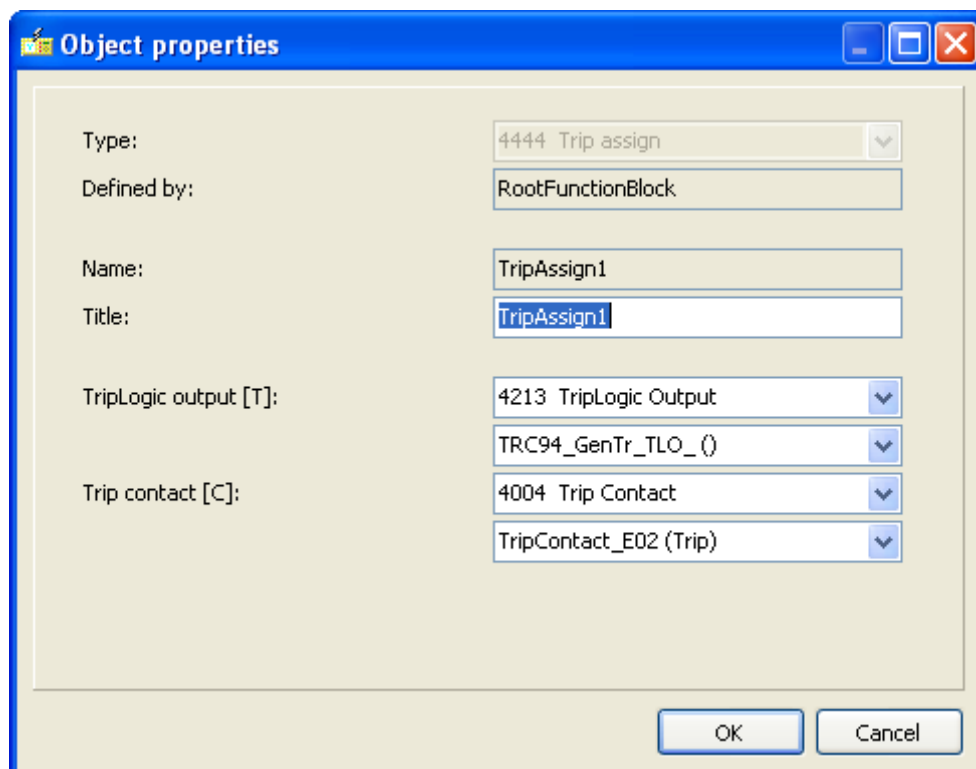


*Figure 2-2 Changing the TRIP command assignment*

The assigned signal is the input of an OR gate. As it is described below, several other signals can be directed to this OR gate. Using this method, also other TRIP modules extended by the user can be applied to operate the TRIP coil of the circuit breaker.

### 1.1.10.3.3.5. Fast operation of the relays

If the aim is to operate the contacts by a signal in each sampling cycle (1 ms), then the “Fast L1 contact option is to be applied. This option is provided by the EuroCAP configuration software in the menu „Hardware configuration/ IO signals/ Binary outputs/ Relay contacts/ Fast\_L1 contacts”.

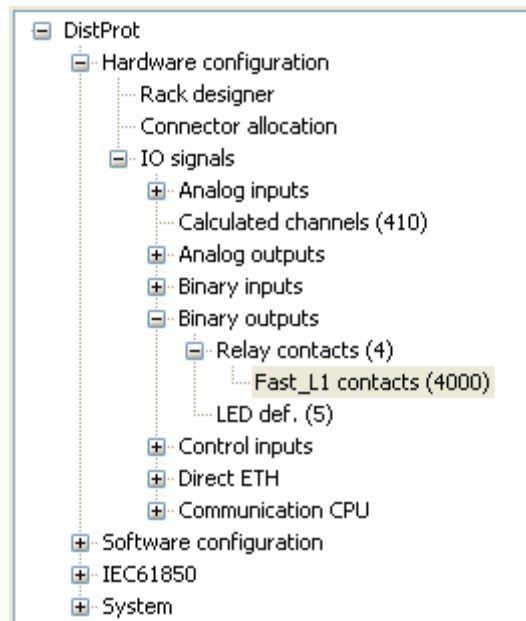

*Figure 2-3 Configuring Fast L1 contacts*

This menu offers the assignment of the appropriate binary signals to the relay contacts. As *Figure 2-4* shows, the signal can be of several types.

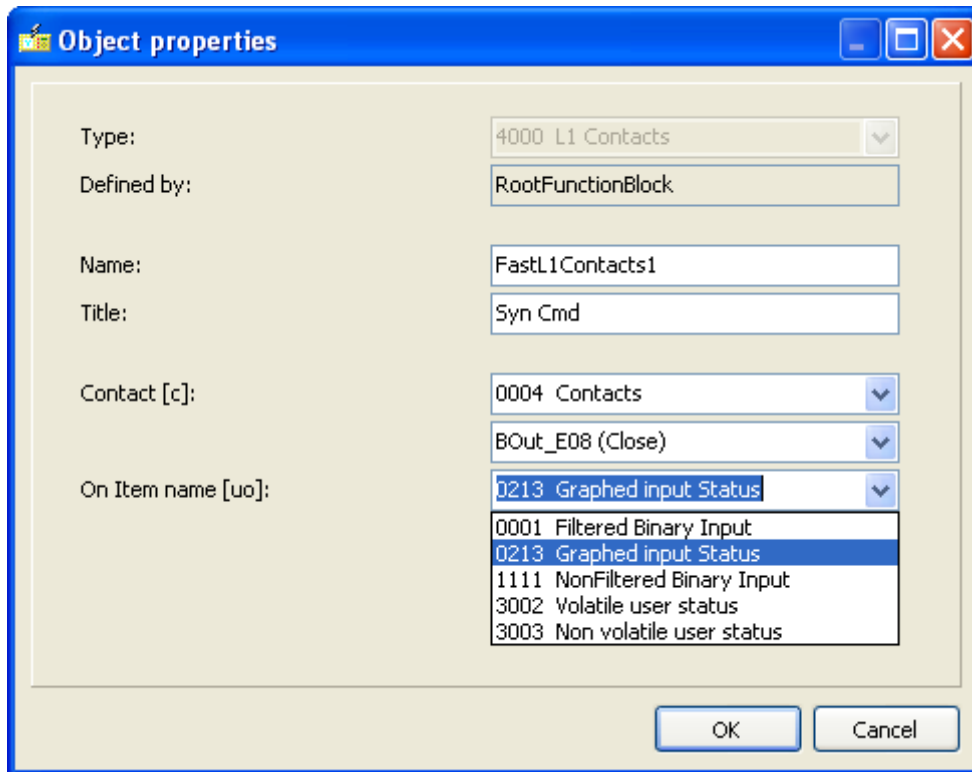


Figure 2-4 Fast L1 contact assignment

The processing of these fast signals is performed in a single step, the possibility for command preparation in the first step and additionally the TRIP command generation in the second step is not offered for the user. To perform this assignment, the application of the EuroCap configuration program in “Master” level is needed.

The selected signal is the input of an OR gate. To this gate additional other signals are connected, as it is described in the previous chapter, or in the description below.

**IMPORTANT NOTE:** The contacts of a TRIP hardware module are configured in the factory as “Fast L1 contacts”, the user does not need to define them additionally!

#### 1.1.10.3.4. User application of the TRIP relays

The contacts controlling the circuit breaker operation can be programmed also by the user. Additionally to the command of the factory configured protection functions the user can assign signals to the channels of the TRIP hardware module. The two steps for the command generation however, as it is described in the paragraph above, cannot be applied by the user.

In this case, the source of the signals can be:

- Pre-configured TRIP commands
  - Received from the SCADA system via communication channels,
  - Generated by the user, applying the front panel LCD of the device,
- Any additional binary signals, e.g. an external command received by the binary input module of the device.

The pre-configured TRIP commands are aligned by the “CB control functionblock”, the output of which is the “CmdOff” TRIP command. This one and several other



signals can be programmed by the user to the output TRIP contact of the device, using the graphic logic editor of the EuroCAP configuration software.

Additionally the output signals of the „TRC94\_PhS” trip logic or those of the „TRC94” simplified trip logic block can be programmed here. (These function-blocks are described in separate documents.) The output signal of the graphic logic editor is the „BOut\_X” logic variable, where X is the identifier of the relay module and the contact, e.g. BOut\_E02.

### **1.1.10.3.4.1. Graphic editor for the signal logic**

For the protection functions, the operation of which are not required being extreme fast (in the range of one network period), the trip command must be assigned to the trip contacts usually by the user. These logic assignments can be programmed also in the factory, but the user can modify or extend them according to the requirements. To do this, the graphic editor of the EuroCap configuration tool must be applied with „Master” access rights.

### **1.1.10.3.4.2. The process of command generation**

If a “simple” protection function generates a trip command then this logic signal is present on the dedicated output of the functionblock (see the description of the functionblocks).

The operation of the logic connections edited in the graphic editor is performed outside the sampling cycle, consequently, depending on the actual load of the processor a random time delay of additional 2-4 ms can be measured.

The contacts of the TRIP hardware modules are operated by several sources parallel:


The high-speed factory configured fast protection functions,  
The defined Fast L1 signals,  
The graphically edited logic connections (programmed in the factory and editable also by the user).

### **1.1.10.3.5. Control of signal relay outputs**

If there is no special requirement to generate the signal with high speed, i.e. a time delay of 2-4 ms can be tolerated between the intent to generate the signal and the closing of the output contact then it is sufficient to apply normal signal relay contacts. To perform this programming the graphic editor of the EuroCap configuration tool is to be applied. To perform the programming the „Master” access level is needed.

## 1.1.10.4. Examples

### 1.1.10.4.1. Application of the TRIP logic

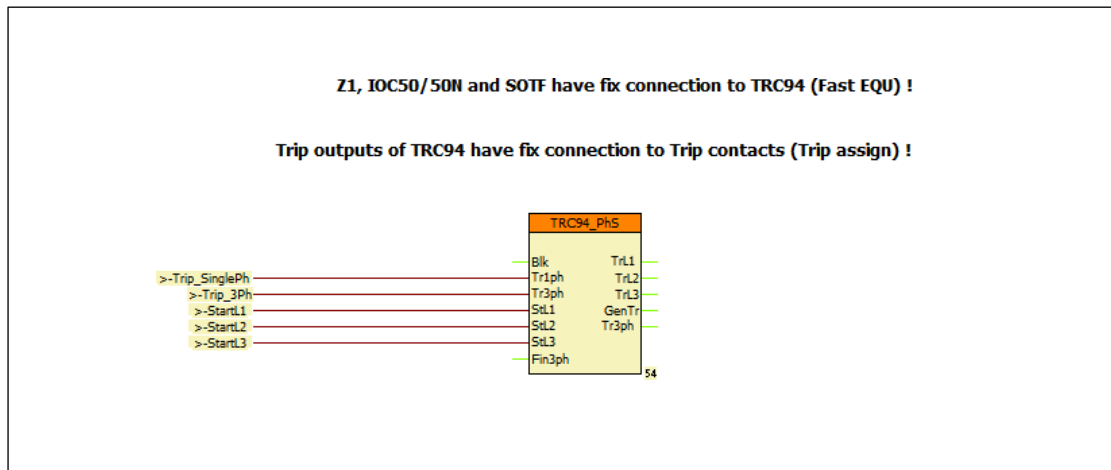

*Figure 5-1 Example: A simple configuration to trip the circuit breaker*

Figure 5-1 shows a simple configuration to trip the circuit breaker. In this Figure it is supposed that the fast protection functions operate according to the factory configuration and they control the TRIP contacts applying two steps of the preparation and command generation phases. This part of the program is not visible. (The description of the fast operating protection functions are listed in the configuration description of the devices.)

The outputs of the TRC94\_PhS trip logic block are assigned to the channels of the TRIP hardware module. This assignment, which can be modified also by the user, is made not here but in the “TRIP assignment” menu of the EuroCAP configuration software. Consequently the Figure is complete; related to the outputs, the user needs additional graphic programming only if e.g. the operation is to be visualized also by signal relays.

If the configuration includes protection functions blocks the trip command of which does not need fast contact operation then these commands must be additionally directed to the TRIP relay outputs. To do this, the user collects these commands (with OR connection) and connects them to the dedicated inputs of the TRC94\_PhS functionblock.

This Figure shows the collected signals (E.g. “Trip\_SinglePh”, “Trip\_3Ph”, etc.) only. As an example the „Trip\_3Ph” signal collects the commands of all (not fast operating) protection functions which can generate three-phase trip command. The detailed description of the inputs and operation of the “TRC94\_PhS” trip logic functionblock can be found in another document.



## 1.1.10.4.2. Application of circuit breaker control block


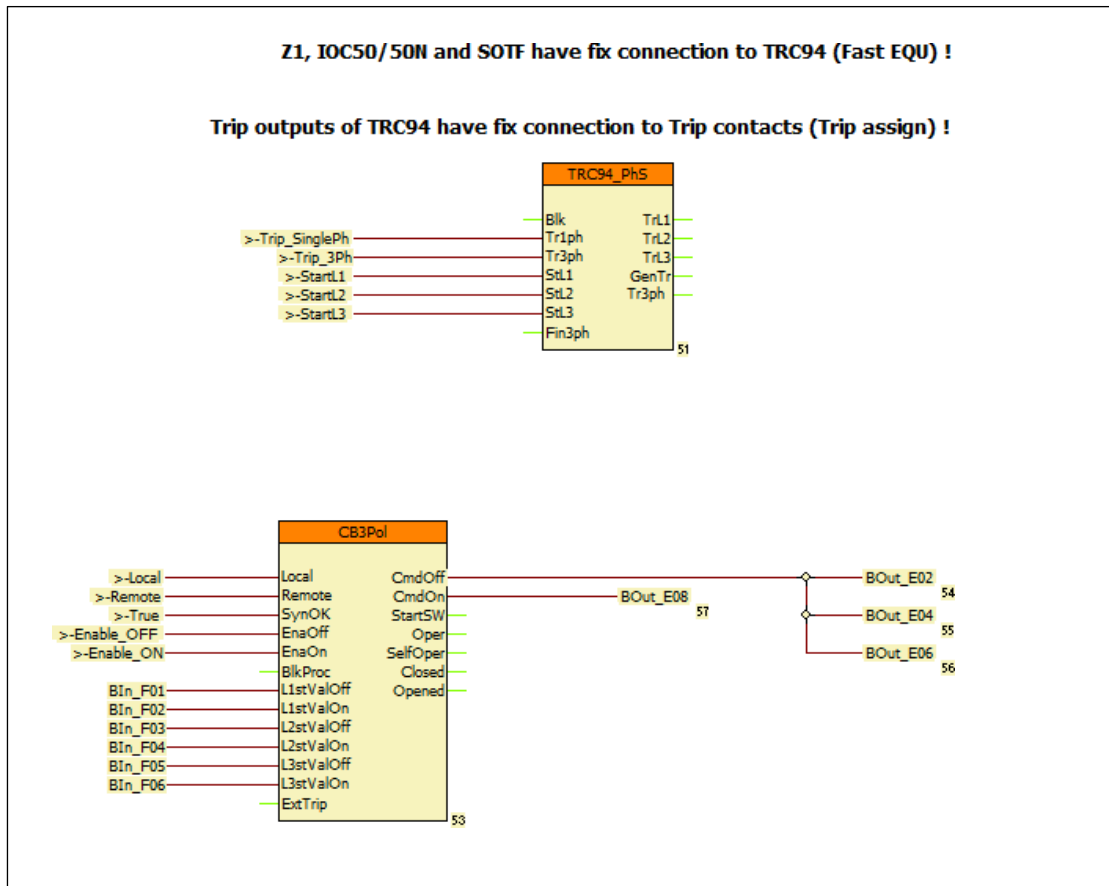


Figure 5-2 shows an example for the application of the circuit breaker control block “CB3Pol”. In this Figure it is supposed that the fast protection functions operate according to the factory configuration and they control the TRIP contacts applying two steps of the preparation and command generation phases. This part of the program is not visible. (The description of the fast operating protection functions are listed in the configuration description of the devices.)

The outputs of the TRC94\_PhS trip logic block are assigned to the channels of the TRIP hardware module. This assignment, which can be modified also by the user, is made not here but in the “TRIP assignment” menu of the EuroCAP configuration software. Consequently the Figure is complete; related to the outputs, the user needs additional graphic programming only if e.g. the operation is to be visualized also by signal relays.

If the configuration includes protection functions blocks the trip command of which does not need fast contact operation then these commands must be additionally connected to the TRIP relay outputs. To do this, the user collects these commands (with OR connection) and assigns them to the dedicated inputs of the TRC94\_PhS functionblock.

This Figure shows the collected signals (E.g. “Trip\_SinglePh”, “Trip\_3Ph”, etc.) only. As an example the „Trip\_3ph” signal collects the commands of all (not fast operating) protection functions which can generate three-phase trip command. The detailed description of the inputs and operation of the “TRC94\_PhS” trip logic functionblock can be found in another document.

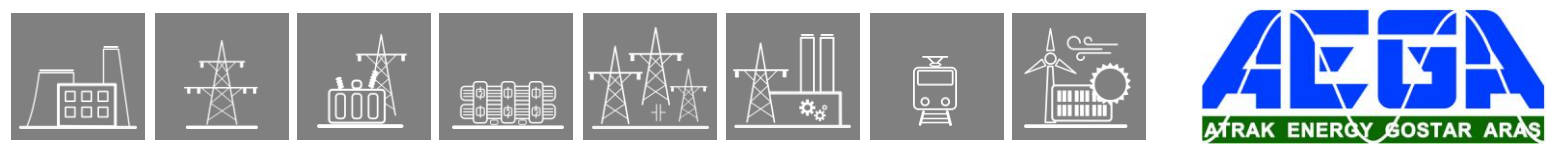

An extension to the example in *Figure 5-2* is that in this configuration also the „CB3pol” (circuit breaker control block) is applied. This block is needed if e.g. the front panel LCD of the device can display an active control scheme. For this purpose the signals „Bl<sub>n</sub>\_F...” in the *Figure* are the status signals of the circuit breaker poles, connected to the dedicated binary inputs of the device. The signals „Local”/”Remote” enable the local or remote control of the primary equipment. In the standard factory configurations these signals are programmed in the factory, but they can be modified also by the user.

If there is no synchro-check function activated in the device, connect the input „SynOK” of the “CB3Pol” to logic TRUE state. *Figure 5-2*, the local command issued via LCD of the device or the remote command received from the remote SCADA system is processed by the „CB3pol” functionblock (Output „CmdOff”). This control is programmed in the factory to “BOut\_xx” variables. The user can perform any modification in the graphic programming.

The close command is connected directly to a dedicated “BOut\_xx” variable. (This directs usually the fourth contact of the TRIP hardware module.)

The programming of the interlocking function must be performed by the user.

### 1.1.10.4.3. Automatic reclosing and circuit breaker control

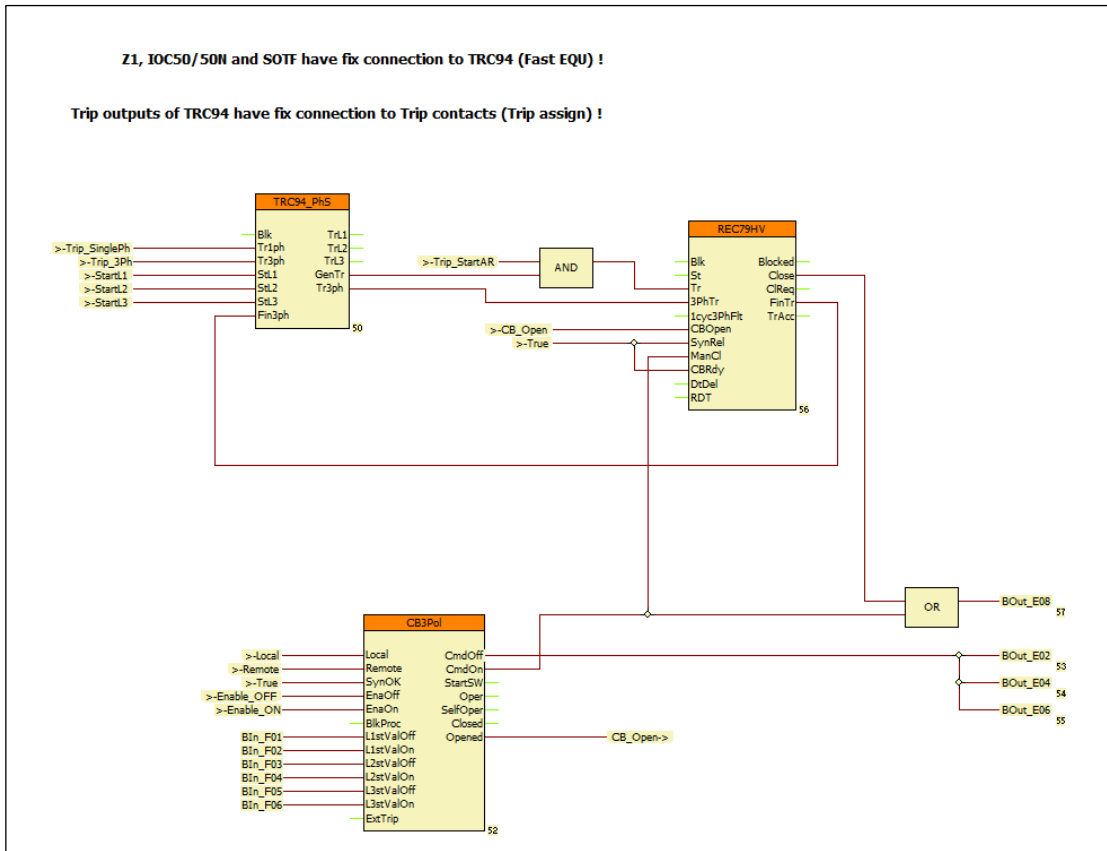



Figure 5-3 Example: Automatic reclosing and circuit breaker control

Figure 5-3 shows an example for the application of the automatic reclosing control block. In this Figure it is supposed that the fast protection functions operate according to the factory configuration and they control the TRIP contacts applying two steps of the preparation and command generation phases. This part of the program is not visible in “Master” level. (The description of the fast operating protection functions are listed in the configuration description of the devices.)

The outputs of the TRC94\_PhS trip logic block are assigned to the output channels of the TRIP hardware module. This assignment, which can be modified also by the user, is made not here but in the “TRIP assignment” menu of the EuroCAP configuration software. Consequently the Figure is complete; related to the outputs, the user needs additional graphic programming only if e.g. the operation is to be visualized also by signal relays.

If the configuration includes protection functions blocks the trip command of which does not need fast contact operation then these commands must be additionally assigned to the TRIP relay outputs. To do this, the user collects these commands (with OR connection) and assigns them to the dedicated inputs of the TRC94\_PhS functionblock.

This Figure shows the collected signals (E.g. “Trip\_SinglePh”, “Trip\_3Ph”, etc.) only. As an example the „Trip\_3ph” signal collects the commands of all (not fast operating) protection functions which can generate three-phase trip command. The detailed description of the inputs and operation of the “TRC94\_PhS” trip logic functionblock can be found in another document.

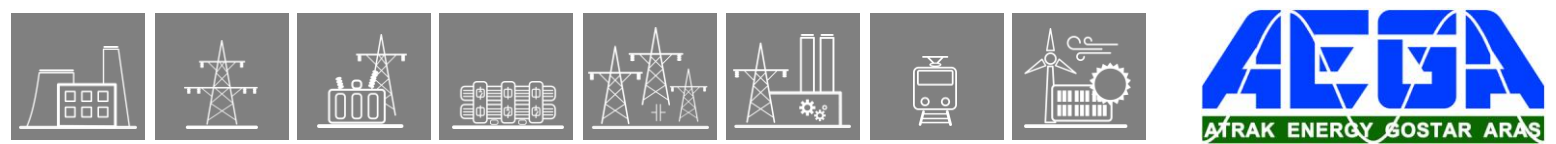

In this configuration also the „CB3pol” (circuit breaker control block) is applied. This block is needed if e.g. the front panel LCD of the device can display an active control scheme. For this purpose the signals „Bln\_F...” in the Figure are the status signals of the circuit breaker poles, connected to the dedicated binary inputs of the device. The signals „Local”/”Remote” enable the local or remote control of the primary equipment. In the standard factory configurations these signals are programmed in the factory, but they can be modified also by the user.

If there is no synchro-check function activated in the device, connects the input „SynOK” of the “CB3Pol” to logic TRUE state.

According to *Figure 5-3*, the local command issued via LCD of the device or the remote command received from the remote SCADA system is processed by the „CB3pol” functionblock (Output „CmdOff”). This control is programmed in the factory to “BOut\_xx” variables. The user can perform any modification in the graphic programming.

The close command is connected directly to a dedicated “BOut\_xx” variable. (This directs usually the fourth contact of the TRIP hardware module.)

In *Figure 5-3* the close command is connected directly to a dedicated output. (This is usually the fourth contact of the TRIP hardware module.)

The programming of the interlocking function must be performed by the user.

An extension to the example in *Figure 5-2* is the application of the „REC79\_HV” automatic reclosing function. The start signal „Trip\_StartAR” can be programmed by the user. The automatic reclosing function is started only if the preceding trip command was performed by the circuit breaker, i.e. for example that the function is not disabled. The AND gate on this Figure performs this checking.

The „REC79\_HV” automatic reclosing function needs the status signal indicating three-phase open state of the circuit breaker, connected to the „3PhTr” input of the „REC79\_HV” functionblock. This signal is generated by the „TRC94\_PhS” functionblock on the output „Tr3Ph”.

If the automatic reclosing is to be disabled after a fault caused by a manual close command, then the „CmdOn” output of the „CB3Pol” module must be connected to the „ManCl” input of the „REC79\_HV” automatic reclosing function.

If there is no synchro-check function configured in the device, connect the „SynRel” input of the „REC79\_HV” automatic reclosing function to logic TRUE state.

The evaluation of the status signals indicating the open state of the circuit breaker poles in OR gate is needed for the operation of the automatic reclosing function. According to the scheme of *Figure 5-3* the open state is indicated by at least one pole open state of the circuit breaker. (For simplicity, this Figure shows a realization without checking the FALSE signal of the closed states.)

*Figure 5-3* supposes that the CB ready signal is not connected to the device; accordingly the steady TRUE state signal is connected to the „CBRdy” input of the „REC79\_HV” automatic reclosing function. If the real signal is available, the signal must be connected similarly.

The close command of the „REC79\_HV” automatic reclosing function is connected via OR gate to the dedicated close contact.

## 1.1.10.4.4. Closing the circuit breaker with synchro-check

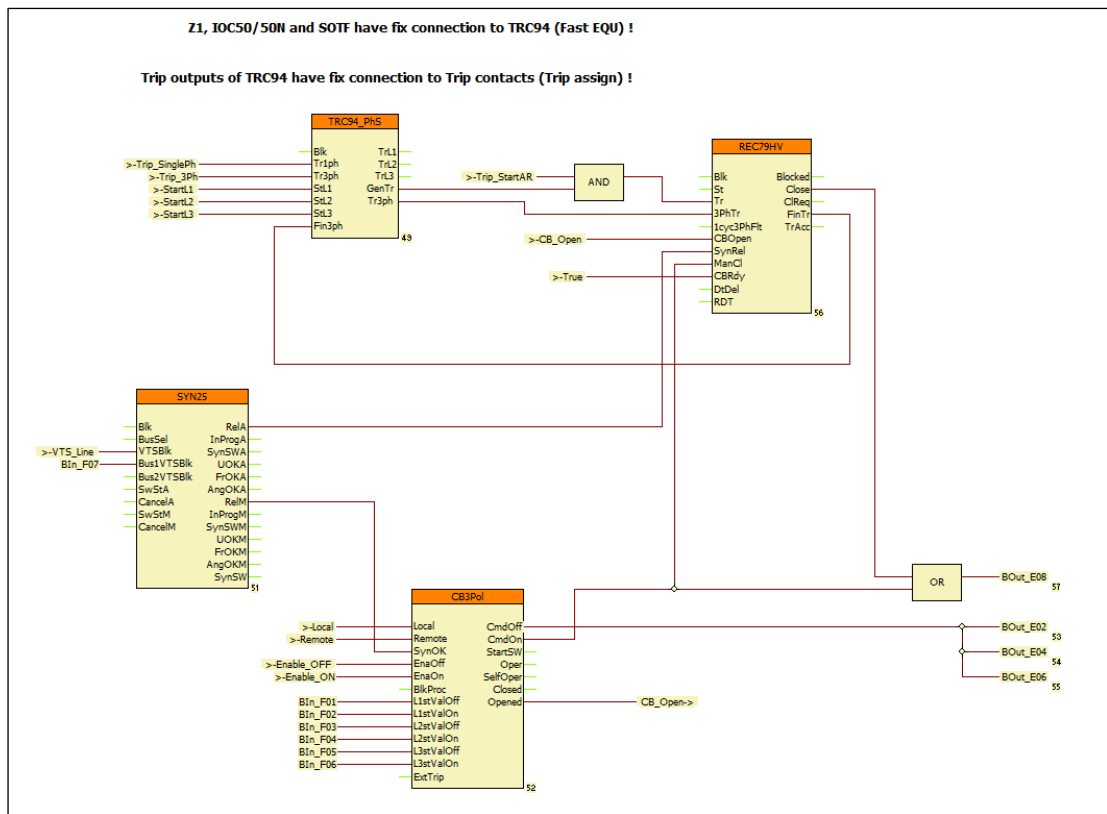



Figure 5-4 Example: closing the circuit breaker with synchro-check

Figure 5-4 shows an example for the application of “SYN25” synchro-check function block. In this Figure it is supposed that the fast protection functions operate according to the factory configuration and they control the TRIP contacts applying two steps of the preparation and command generation phases. This part of the program is not visible in “Master” level. (The description of the fast operating protection functions are listed in the configuration description of the devices.)

The outputs of the TRC94\_PhS trip logic block are assigned to the output channels of the TRIP hardware module. This assignment, which can be modified also by the user, is made not here but in the “TRIP assignment” menu of the EuroCAP configuration software. Consequently the Figure is complete; related to the outputs, the user needs additional graphic programming only if e.g. the operation is to be visualized also by signal relays.

If the configuration includes protection functions blocks the trip command of which does not need fast contact operation then these commands must be additionally assigned to the TRIP relay outputs. To do this, the user collects these commands (with OR connection) and assigns them to the dedicated inputs of the TRC94\_PhS function block.

This Figure shows the collected signals (E.g. “Trip\_SinglePh”, “Trip\_3Ph”, etc.) only. As an example the „Trip\_3ph” signal collects the commands of all (not fast operating) protection functions which can generate three-phase trip command. The detailed description of the inputs and operation of the “TRC94\_PhS” trip logic function block can be found in another document.

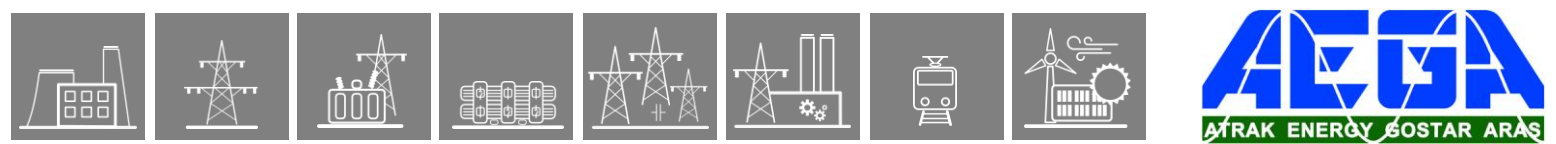

In this configuration also the „CB3pol” (circuit breaker control block) is applied. This block is needed if e.g. the front panel LCD of the device can display an active control scheme. For this purpose the signals „Bln\_F...” in the Figure are the status signals of the circuit breaker poles, connected to the dedicated binary inputs of the device. The signals „Local”/”Remote” enable the local or remote control of the primary equipment. In the standard factory configurations these signals are programmed in the factory, but they can be modified also by the user.

According to *Figure 5-4*, the local command issued via LCD of the device or the remote command received from the remote SCADA system is processed by the „CB3pol” functionblock (Output „CmdOff”). This control is programmed in the factory to “BOut\_xx” variables. The user can perform any modification in the graphic programming.

The close command is connected directly to a dedicated “BOut\_xx” variable. (This directs usually the fourth contact of the TRIP hardware module.)

In *Figure 5-4* the close command is connected directly to a dedicated output. (This is usually the fourth contact of the TRIP hardware module.)

The programming of the interlocking function must be performed by the user.

*Figure 5-4* includes the application of the „REC79\_HV” automatic reclosing function. The start signal „Trip\_StartAR” can be programmed by the user. The automatic reclosing function is started only if the preceding trip command was performed by the circuit breaker, i.e. for example that the function is not disabled. The AND gate on this Figure performs this checking.

The „REC79\_HV” automatic reclosing function needs the status signal indicating three-phase open state of the circuit breaker, connected to the „3PhTr” input of the „REC79\_HV” functionblock. This signal is generated by the „TRC94\_PhS” functionblock on the output „Tr3Ph”.

If the automatic reclosing is to be disabled after a fault caused by a manual close command, then the „CmdOn” output of the „CB3Pol” module must be connected to the „ManCl” input of the „REC79\_HV” automatic reclosing function.

The evaluation of the status signals indicating the open state of the circuit breaker poles in OR gate is needed for the operation of the automatic reclosing function. According to the scheme of *Figure 5-4* the open state is indicated by at least one pole open state of the circuit breaker. (For simplicity, this Figure shows a realization without checking the FALSE signal of the closed states.)

*Figure 5-4* supposes that the CB ready signal is not connected to the device; accordingly the steady TRUE state signal is connected to the „CBRdy” input of the „REC79\_HV” automatic reclosing function. If the real signal is available, the signal must be connected similarly.

The close command of the „REC79\_HV” automatic reclosing function is connected via OR gate to the dedicated close contact.

An extension to the example in *Figure 5-3* is the close command to the circuit breaker is generated by synchro-check. The enabling signal for the close command is generated by the „SYN25” software module. This module is described in details in a separate document. The needed input signals indicating the state of the voltage transformers („VTSBik” and „Bus1VTSBik”), must be programmed graphically.

The output signal „RelA” of the „SYN25” software module enables the closing operation of the „REC79\_HV” automatic reclosing function via its „SynRel” input.

For manual close commands the output signal „ReIM” of the „SYN25” software module enables the closing operation of the „CB3pol” via its „SynOK” input.

## 1.1.10.4.5. Closing the circuit breaker with synchro-check and synchro-switch

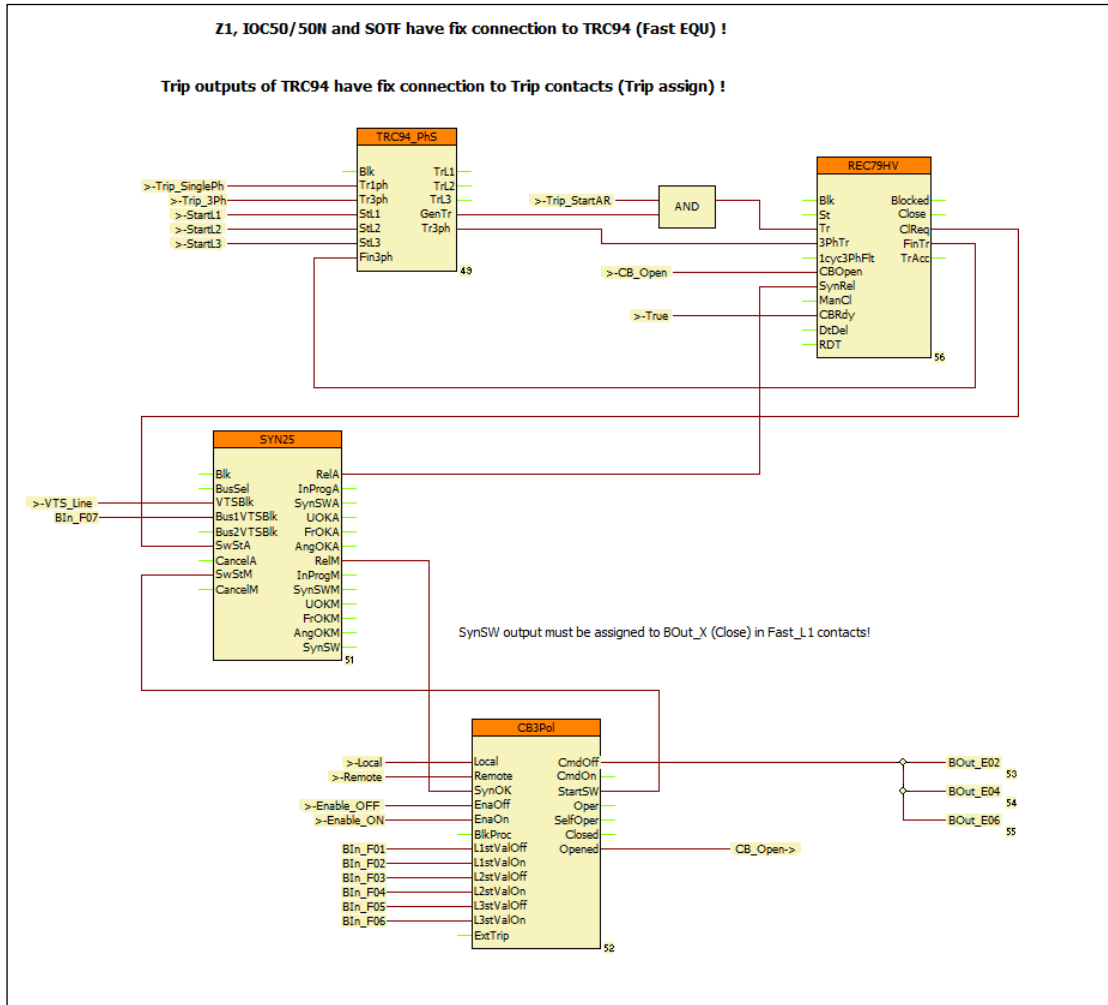


Figure 5-5 Example: closing the circuit breaker with synchro-check and synchro-switch

Figure 5-5 shows an example for the application of “SYN25” synchro-check function block with synchro switch extension. In this Figure it is supposed that the fast protection functions operate according to the factory configuration and they control the TRIP contacts applying two steps of the preparation and command generation phases. This part of the program is not visible in “Master” level. (The description of the fast operating protection functions are listed in the configuration description of the devices.)

The outputs of the TRC94\_PhS trip logic block are assigned to the output channels of the TRIP hardware module. This assignment, which can be modified also by the user, is made not here but in the “TRIP assignment” menu of the EuroCAP configuration software. Consequently the Figure is complete; related to the outputs, the user needs additional graphic programming only if e.g. the operation is to be visualized also by signal relays.

If the configuration includes protection functions blocks the trip command of which does not need fast contact operation then these commands must be additionally assigned to the TRIP relay outputs. To do this, the user collects these commands





(with OR connection) and assigns them to the dedicated inputs of the TRC94\_PhS functionblock.

This Figure shows the collected signals (E.g. “Trip\_SinglePh”, “Trip\_3Ph”, etc.) only. As an example the „Trip\_3ph” signal collects the commands of all (not fast operating) protection functions which can generate three-phase trip command. The detailed description of the inputs and operation of the “TRC94\_PhS” trip logic functionblock can be found in another document.

In this configuration also the „CB3pol” (circuit breaker control block) is applied. This block is needed if e.g. the front panel LCD of the device can display an active control scheme. For this purpose the signals „BIn\_F...” in the Figure are the status signals of the circuit breaker poles, connected to the dedicated binary inputs of the device. The signals „Local”/”Remote” enable the local or remote control of the primary equipment. In the standard factory configurations these signals are programmed in the factory, but they can be modified also by the user.

According to *Figure 5-5*, the local command issued via LCD of the device or the remote command received from the remote SCADA system is processed by the „CB3pol” functionblock (Output „CmdOff”). This control is programmed in the factory to “BOut\_xx” variables. The user can perform any modification in the graphic programming.

The close command is connected directly to a dedicated “BOut\_xx” variable. (This directs usually the fourth contact of the TRIP hardware module.)

In *Figure 5-5* the close command is connected directly to a dedicated output. (This is usually the fourth contact of the TRIP hardware module.)

The programming of the interlocking function must be performed by the user.

*Figure 5-5* includes the application of the „REC79\_HV” automatic reclosing function. The start signal „Trip\_StartAR” can be programmed by the user. The automatic reclosing function is started only if the preceding trip command was performed by the circuit breaker, i.e. for example that the function is not disabled. The AND gate on this Figure performs this checking.

The „REC79\_HV” automatic reclosing function needs the status signal indicating three-phase open state of the circuit breaker, connected to the „3PhTr” input of the „REC79\_HV” functionblock. This signal is generated by the „TRC94\_PhS” functionblock on the output „Tr3Ph”.

If the automatic reclosing is to be disabled after a fault caused by a manual close command, then the „CmdOn” output of the „CB3Pol” module must be connected to the „ManCl” input of the „REC79\_HV” automatic reclosing function.

If there is no synchro-check function configured in the device, then connect the „SynRel” input of the „REC79\_HV” automatic reclosing function to logic TRUE state.

The evaluation of the status signals indicating the open state of the circuit breaker poles in OR gate is needed for the operation of the automatic reclosing function. According to the scheme of *Figure 5-5* the open state is indicated by at least one pole open state of the circuit breaker. (For simplicity, this Figure shows a realization without checking the FALSE signal of the closed states.)

*Figure 5-5* supposes that the CB ready signal is not connected to the device; accordingly the steady TRUE state signal is connected to the „CBRdy” input of the „REC79\_HV” automatic reclosing function. If the real signal is available, the signal must be connected similarly.

The close command of the „REC79\_HV” automatic reclosing function is connected via OR gate to the dedicated close contact.

In this application the close command to the circuit breaker is generated by synchro-check. The enabling signal for the close command is generated by the „SYN25” software module. This module is described in details in a separate document. The





needed input signals indicating the state of the voltage transformers („VTSBIK” and „Bus1VTSBIK”), must be programmed graphically.

The output signal „RelA” of the „SYN25” software module enables the closing operation of the „REC79\_HV” automatic reclosing function via its „SynRel” input.

For manual close commands the output signal „RelM” of the „SYN25” software module enables the closing operation of the „CB3pol” via its „SynOK” input.

An extension to the example in *Figure 5-4* is the following: If there is no continuous synchron state because the frequency at one side of the circuit breaker is different to that of the other side, then the voltage vector of one side rotates continuously as compared to the other one. In this case a synchronous switching is attempted to restore the normal operation of the network.

The manual synchron switching mode is started by the signal on the „StSwM” input of the SYN25 functionblock. To do this the the „StartSW” output of the „CB3Pol” functionblock must be connected here.

For automatic synchron switching mode the „CIReq” output of the „Rec79HV” module must be connected to the „SwStA” input of the „SYN25” software module.

**IMPORTANT NOTE:** the close command is generated for both manual and automatic

switching at the output „SynSW” of the „SYN25” software module. It is advised not to connect this output using the „slow” graphic programming, but the contact assigned to the close command („BOutClose”) must be handled as fast operating „L1 contact”. The „SynSW” signal must be programmed to this contact. This assignment is performed using the EuroCap configuration tool in the menu „Hardware configuration/Binary outputs/Relay contacts/Fast\_L1 contacts”.

### 1.1.11. RTD input module

The RTD+1100 module is used to measure the temperature through the variation of resistance of temperature detectors. RTD+0200 and RTD+1200 are special modules for Petersen coil controllers (DRL) measuring the resistance of the potentiometer.

Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	RTD+/0200*	RTD+/1100	RTD+/1200*
CHANNEL NUMBER	1	4	1
MEASUREMENT METHOD	3 wire configuration	2, 3 or 4 wire configuration	3 wire configuration
ACCURACY	± 0.5 % ± 1 digit	± 0.5 % ± 1 digit	± 0.5 % ± 1 digit
SENSOR TYPE	Service-Ohm	Pt100/Ni100 Ni120/Ni120US Pt250/Ni250 Pt1000/Ni1000 Cu10 Service-Ohm (60 Ω ... 1.6 kΩ)	Service-Ohm
MEASUREMENT RANGES	2 Ω ... 200 Ω	- 50 °C – +150 °C	10 Ω ... 1000 Ω
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> -
RECOMMENDED APPLICATION	Arc suppression coil controller	General resistance-based temperature measurement	Arc suppression coil controller

\*Special module

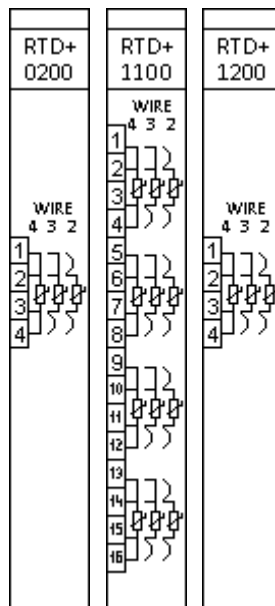


Figure 10-1 RTD input modules

### 1.1.11.1. RTD module wiring

If 2-wire wiring is used you have to make sure that the value of RA and RD resistors are set correctly in the “parameters” menu of the web server.

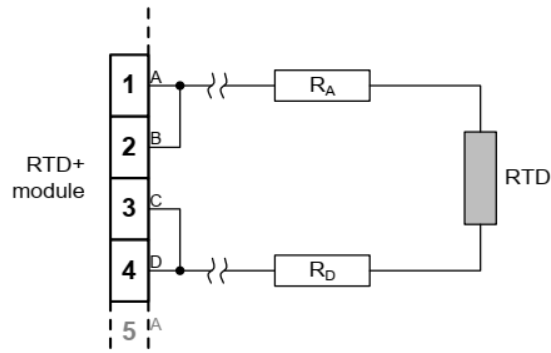


Figure 10-2 2-wire RTD wiring

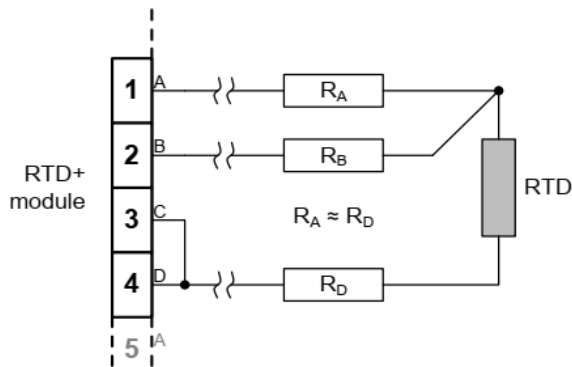


Figure 10-3 3-wire RTD wiring

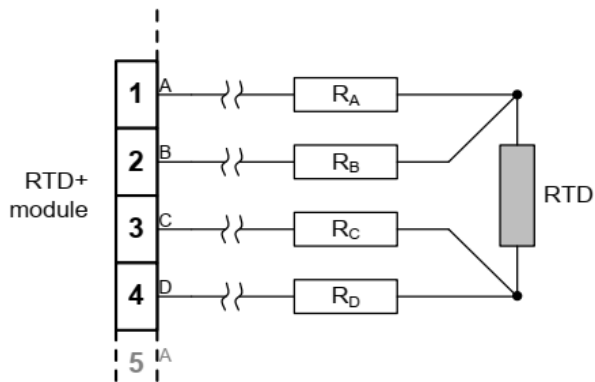


Figure 10-4 4-wire RTD wiring

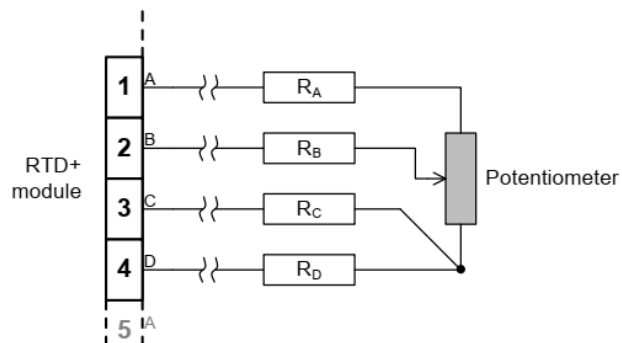


Figure 10-5 4-wire RTD wiring of potentiometer

## 1.1.12. Analog input module (AI)

The analog input module accepts transducers' current outputs. The AIC module can measure unipolar and bipolar current values in wide ranges.

Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	AIC+/0200*	AIC+/0201*	AIC+/0202
CHANNEL NUMBER	4	4	4
MEASUREMENT METHOD	2 wire inputs	2 wire inputs with optional 12 V excitation	2 wire inputs
RELATIVE ACCURACY	$\pm 0.5 \% \pm 1$ digit	$\pm 0.5 \% \pm 1$ digit	$\pm 0.5 \% \pm 1$ digit
MEASUREMENT RANGES	$\pm 20$ mA (typical 0-20, 4-20 mA) $R_{LOAD} = 56 \Omega$	$\pm 20$ mA (typical 0-20, 4-20 mA) $R_{LOAD} = 56 \Omega$	$\pm 20$ mA (typical 0-20, 4-20 mA) $R_{LOAD} = 56 \Omega$
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> F, T

\*Obsolete module. These modules are not recommended for new designs!


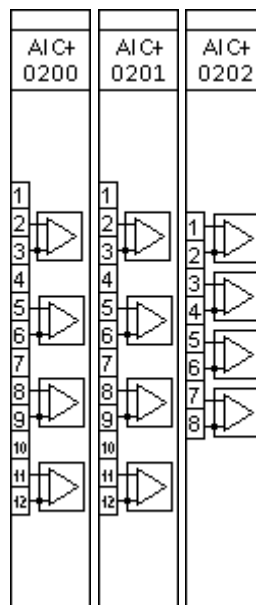


Figure 11-1 Analog input modules

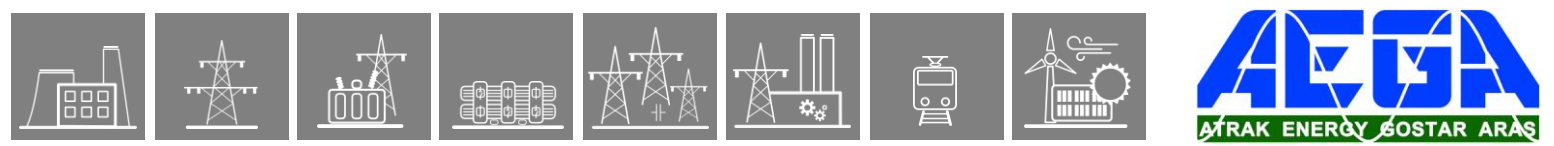

### 1.1.12.1. AI module wiring

The following wiring method can be applied.

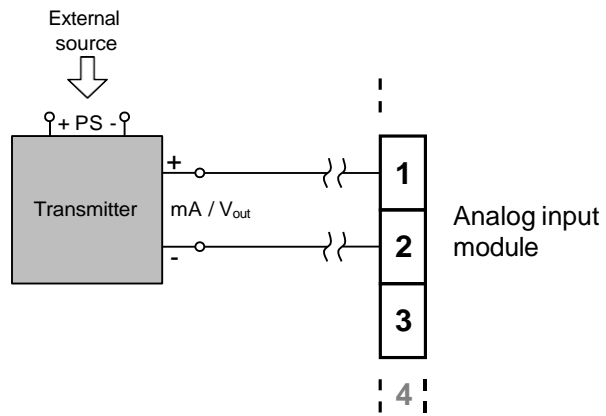


Figure 11-2 AI wiring

### 1.1.13. Analog output module (ATO)

The analog output module transmits current or voltage signals. The ATO module can be used in wide ranges in unipolar and bipolar mode.

Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	ATO+/0002	ATO+/0004
CHANNEL NUMBER	2	4
OUTPUT MODE	2 wire output	2 wire output
MAXIMUM LOAD ( $R_{\text{CABLE}} + R_{\text{RECEIVER}}$ )	500 $\Omega$	500 $\Omega$
OUTPUT RANGES	$\pm 20$ mA 0 - 20 mA 4 - 20 mA	$\pm 20$ mA 0 - 20 mA 4 - 20 mA
CONNECTOR TYPE	Default: BLA Options: T	Default: BLA Options: -


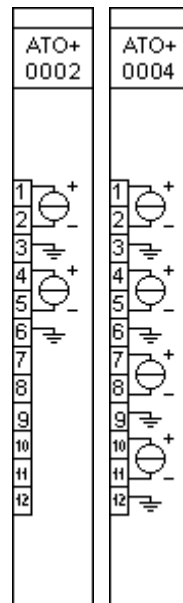


Figure 12-1 Analog output modules

### 1.1.13.1. ATO module wiring

The analog output module should be connected according to the following wiring diagram.

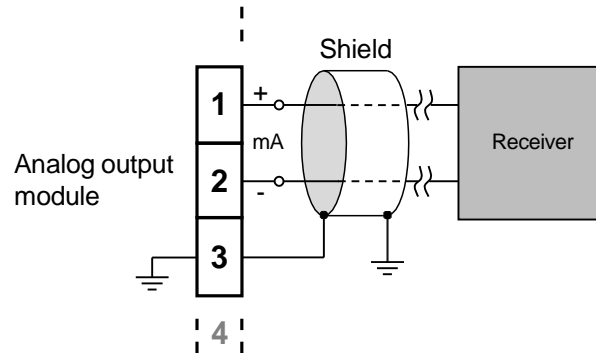

*Figure 12-2 Analog output module wiring diagram*

## 1.1.14. Sensor input module

The sensor modules receive low-level signals of current and voltage sensors (low-power instrument transformers).

### Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	CVS+/0001		CVSR+/0001		VS+/0031***
	4 U	4 I	4 U	4 I	
CHANNEL NUMBER	4 U	4 I	4 U	4 I	4 U
NOMINAL VALUES	3.25 V	0.225 V*	1.27 V	0.150 V**	3.25 V
CONTINUOUS VOLTAGE WITHSTAND	35 V DC		35 V DC		35 V DC
SHORT TIME OVERLOAD (1 s)	40 V AC / 56 V DC		40 V AC / 56 V DC		40 V AC / 56 V DC
MAX. MEASURED VALUE ( $\pm 10\%$ )	1.8 U <sub>N</sub>	50 I <sub>N</sub>	2.1 U <sub>N</sub>	50 I <sub>N</sub>	1.6 U <sub>N</sub>
ACCURACY	$\leq 0.5\%$ (0.1 U <sub>N</sub> – 1.2 U <sub>N</sub> )		$\leq 0.5\%$ (0.1 U <sub>N</sub> – 1.2 U <sub>N</sub> )		$\leq 0.5\%$ (0.1 U <sub>N</sub> – 1.2 U <sub>N</sub> )
FREQUENCY RANGE	DC – 1 kHz		DC – 1 kHz		DC – 1 kHz
INPUT RESISTANCE	200 k $\Omega$ $\pm 1\%$	21 k $\Omega$ $\pm 1\%$	10 M $\Omega$ $\pm 1\%$	1.1 M $\Omega$ $\pm 1\%$	200 k $\Omega$ $\pm 1\%$
INPUT CAPACITANCE	300 pF (1 kHz)	300 pF (1 kHz)	300 pF (1 kHz)	300 pF (1 kHz)	300 pF (1 kHz)
CONNECTOR TYPE	RJ45 – 8 pole, shielded connector, isolated shielding		RJ45 – 8 pole, shielded connector, grounded shielding		M8 3-pin connector <u>Receptacle:</u> Hirschmann ELST 3308 RV FM 8 05 <u>Plug:</u> Binder 768 99-3360-00-03

\*Voltage proportional to current

\*\*Voltage proportional to current change (Rogowski coil)

\*\*\***Obsolete module. These modules are not recommended for new designs!**

For more information about more available nominal values please contact our Application Team.  
([application@protecta.hu](mailto:application@protecta.hu))



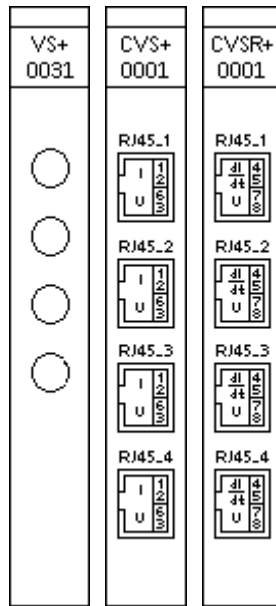


Figure 13-1 Voltage sensor modules


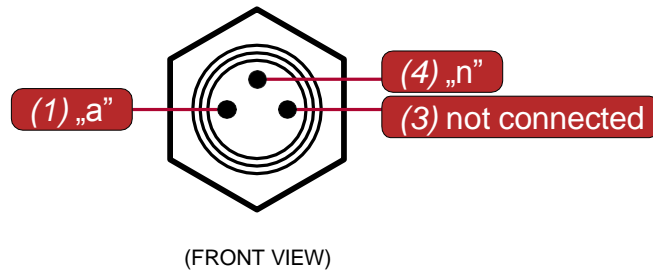


Figure 13-2 M8 connector pinout



- 1.: S1
- 2.: S2
- 3.: "a"
- 6.: "n"

Figure 13-3 CVS module connector pinout

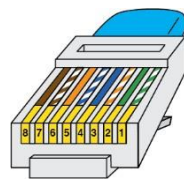

- 4.: S1
- 5.: S2
- 8.: "n"
- 7.: "a"

Figure 13-4 CVSR module connector pinout

### 1.1.15. INJ module

Complex module for controlling the Petersen coil, which contains an injector function for the measurements, an enabling and a blocking input, and a fault relay indicating if there is any fault in the injection circuit.

Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.

MODULE TYPE	INJ+/0005	INJ+/0015*
INJECTED CURRENT	2 A	4 A
ENABLING INPUT CLAMP VOLTAGE	85 V AC	Not available function
BLOCKING INPUT CLAMP VOLTAGE	200 V AC	200 V AC
ADDITIONAL RESISTANCE FOR VOLTAGE INPUT	Not available function	265 kΩ ± 1%
CONNECTOR TYPE	Default: STVS6, BLA10 Options: -	
RECOMMENDED APPLICATION	Arc suppression coil controller	Network compensation level measurement on resonant grounded networks

\*Special module

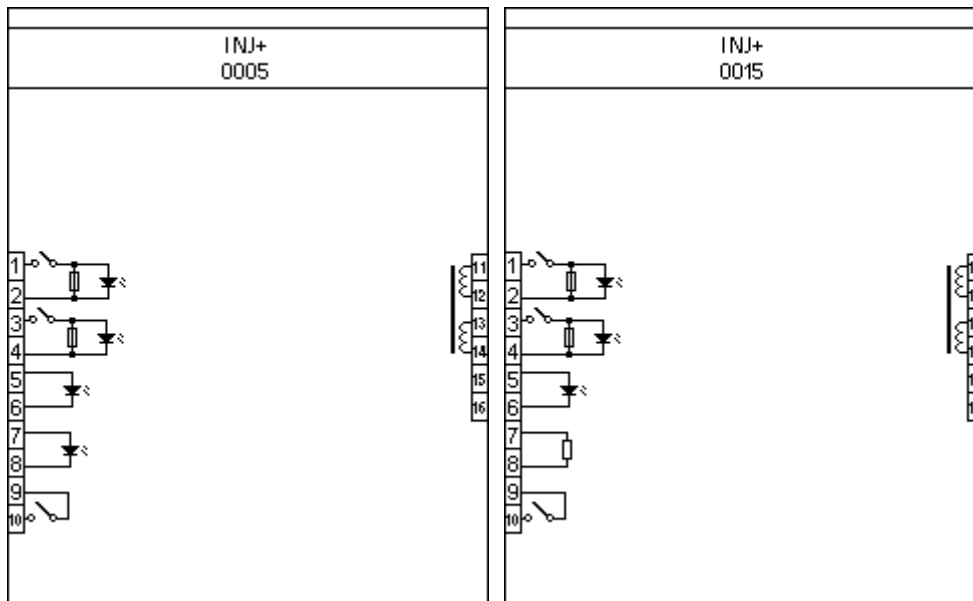


Figure 14-1 INJ modules

### 1.1.16. Generator protection modules

Special generator protection modules whose system measures and produces the necessary analog signals.

Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

MODULE TYPE	RAI+/01	RAI+/11	RINJ+/21
NOMINAL VOLTAGE	-	-	110 V / 220 V
INPUT VOLTAGE RANGE	-	-	88 - 264 V DC 80 - 250 V AC
OUTPUT VOLTAGE	-	-	100V DC $\pm$ 2 %
MEASUREMENT RANGE	$\pm$ 20 mA	$\pm$ 20 mA	-
THERMAL WITHSTAND CONTINUOUS: 30 SEC:	15 mA 20 mA	10 mA 20 mA	20 mA
CONNECTOR TYPE	<u>Default:</u> STVS8 <u>Options:</u> -	<u>Default:</u> STVS8 <u>Options:</u> T*	<u>Default:</u> STVS8 <u>Options:</u> T*
RECOMMENDED APPLICATION	Rotor earth-fault protection of middle-grounded rotors	Rotor earth-fault protection of ungrounded (isolated) rotors	Rotor earth-fault protection of ungrounded (isolated) rotors

\*By choosing this option, the connector remains the same, only the handle is changed

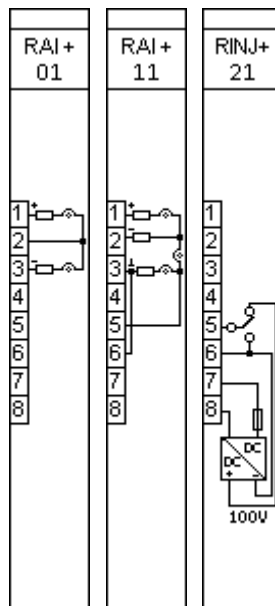


Figure 15-1 Generator protection modules

### 1.1.16.1. Auxiliary boxes for rotor earth fault protection

These DIN-rail mounted external boxes serve as couplings between the rotor (exciter circuit) of the generator and the corresponding RAI module of the protection device.

Note: the data about the resistances and capacitors provided here does not tell the actual time constants of the measured values, as those can be determined on-site only, when the rotor earth fault protection is being tested on the actual generator itself.

MODULE TYPE	RAI+01 BOX	RAI+11 BOX BASE	RAI+11 BOX EXTENSION*
MAXIMUM INPUT VOLTAGE	200 V, 300 V, 400 V, 500 V**	600 V	1200 V
SERIES RESISTANCE ON SIDES	10 kΩ, 15 kΩ, 20 kΩ, 25 kΩ**	35 kΩ	30 kΩ
FILTER CAPACITORS	4x10 μF	2x1 μF	-
CONNECTOR TYPE	Default: STVS6 Options: -	Default: STVS6 Options: -	Default: STVS6 Options: -
RECOMMENDED APPLICATION	Middle-grounded rotors	Ungrounded (isolated) rotors	Ungrounded (isolated) rotors

\*This extension module can only be used together with RAI+11 BOX BASE module

\*\*According to the chosen wiring

#### 1.1.16.1.1. Use of auxiliary boxes

- Ungrounded (isolated) rotors:**

If the excitation voltage is lower than 600 V, then it is enough to use the RAI+11 BOX BASE auxiliary box. If the excitation voltage is higher than 600 V, the RAI+11 BOX EXTENSION auxiliary box shall be used *additionally*, so the protection can connect to up to 1200 V excitation voltage.

- Middle-grounded rotors**

Front drawings near the connectors on the box itself indicate the available maximum voltages. The choice from these shall be made according to the excitation voltage. Wiring shall be done according to the chosen voltage.

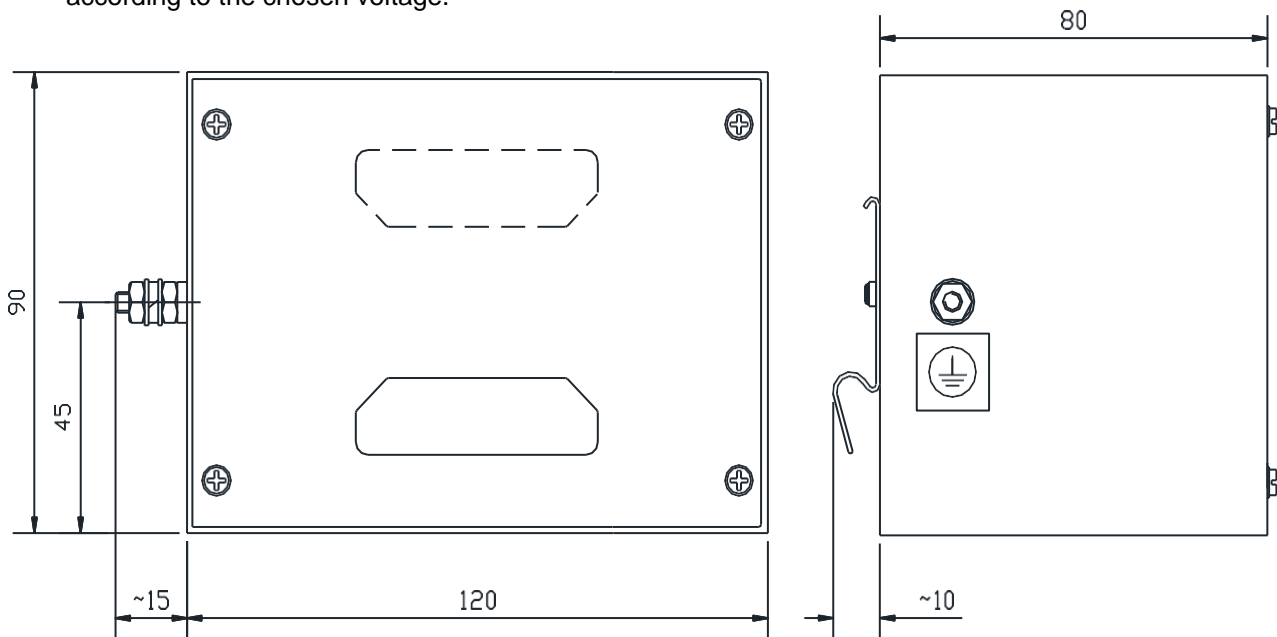


Figure 15-2 Size of the auxiliary boxes

### 1.1.16.2. Wiring of the rotor earth fault protection modules

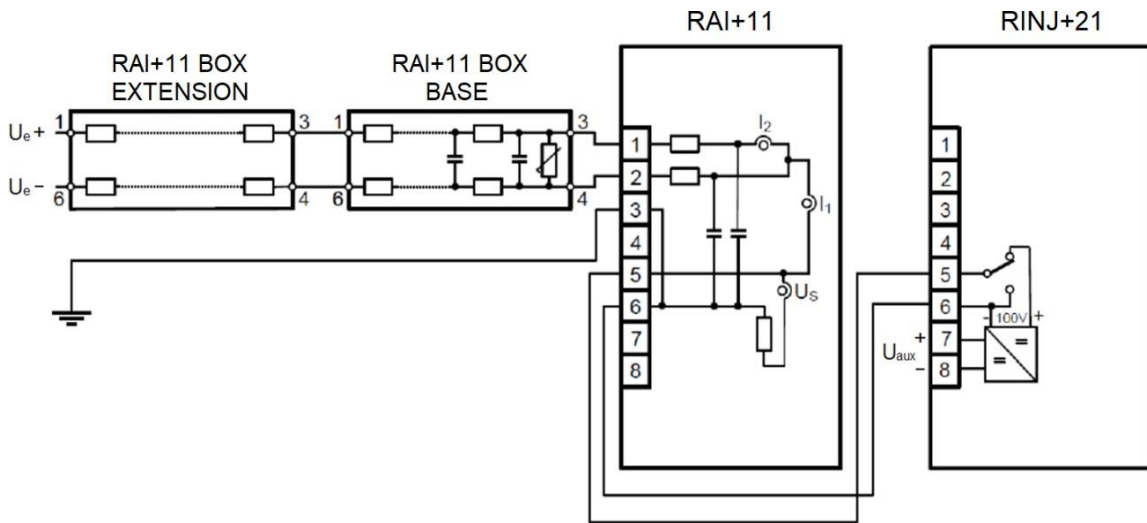


Figure 15-3 Wiring for ungrounded (isolated) rotors


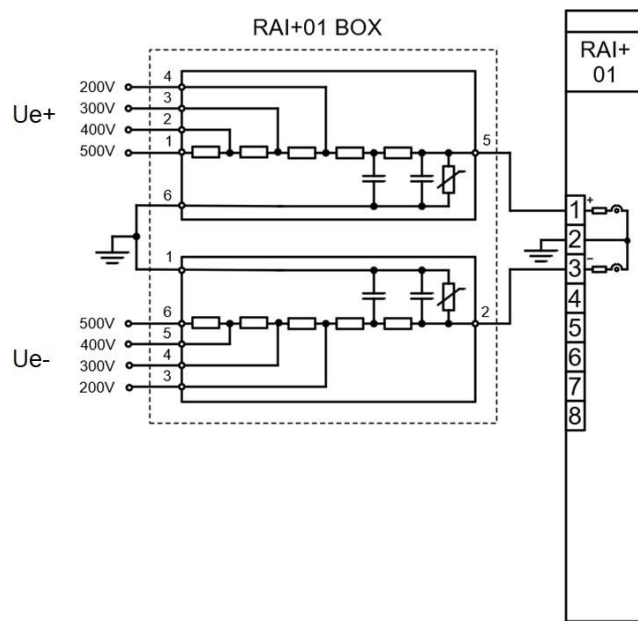


Figure 15-4 Wiring for middle-grounded rotors

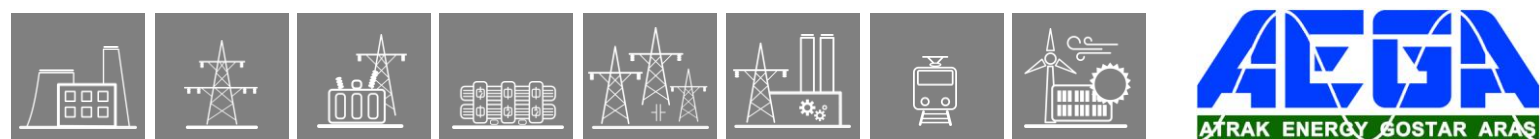

## 1.1.17. Power supply module

The power supply module converts primary AC and/or DC voltage to required system voltages. In most applications, one power supply module is sufficient to provide the required power to the system. Redundant power supply modules extend system availability in case of the outage of any power source.

### IMPORTANT

Depending on the hardware configuration, the power consumption of the devices can be different. We reserve the right to make the decision about which PS+ module must be used.

For most applications where the power consumption does not reach 20 W, a 4 HP wide PS+ module shall be installed.

### Connector types:

- *The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.*

MODULE TYPE	PS+/4201 (4 HP wide)	PS+/2101 (4 HP wide)
RATED VOLTAGE	24 V DC / 48 V DC / 60 V DC	110 V DC / 220 V DC
INPUT VOLTAGE OPERATIVE RANGE	19.2 - 72 V DC	88 - 264 V DC 80 - 250 V AC
NOMINAL POWER	20 W	20 W
VOLTAGE DIP WITHSTAND AT 80% UN → 0% INPUT VOLTAGE CHANGE (IEC 60255-26)	50 ms	100 ms
INTERNAL FUSE	3.15A/250V	3.15A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> F, T

**IMPORTANT**

Devices with 20W or higher power consumption shall be equipped with an 8 HP wide PS module.

MODULE TYPE	PS+/1301	PS+/1303**	PS+/2301	PS+/2303**	PS+/1030*
RATED VOLTAGE	110 V DC	110 V DC	220 V DC	220 V DC	110 V DC / 220 V DC
INPUT VOLTAGE OPERATIVE RANGE	88 - 132 V DC 85 - 130 V AC	88 - 150 V DC 85 - 130 V AC	176 - 264 V DC 160 - 250 V AC	176 - 264 V DC 160 - 250 V AC	88 - 264 V DC 85 - 250 V AC
MAX. CONTINUOUS POWER OUTPUT	30 W	30 W	30 W	30 W	25 W
VOLTAGE DIP WITHSTAND AT 80% UN → 0% INPUT VOLTAGE CHANGE (IEC 60255-26)	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>20 ms</b> 100 ms at 100%Un → 0%
INTERNAL FUSE	2.5A/250V	2.5A/250V	2.5A/250V	2.5A/250V	2.5A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> F, T


\*Special module, available only in custom configurations.

\*\*Can be connected in parallel.

MODULE TYPE	PS+/1060*	PS+/1601	PS+/1602*	PS+/2601	PS+/4301***
RATED VOLTAGE	110 V DC / 220 V DC	110 V DC	110 V DC	220 V DC	48 V DC
INPUT VOLTAGE OPERATIVE RANGE	88 - 264 V DC	88 - 132 V DC 95 - 130 V AC	88 - 132 V DC 95 - 130 V AC	176 - 264 V DC 160 - 250 V AC	38.4 - 57.6 V DC
MAX. CONTINUOUS POWER OUTPUT	60 W	60 W	60 W	60 W	25 W
VOLTAGE DIP WITHSTAND AT 80% UN → 0% INPUT VOLTAGE CHANGE (IEC 60255-26)	<b>20 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>50 ms</b> 100 ms at 100%Un → 0%	<b>20 ms</b> 30 ms at 100%Un → 0%
INTERNAL FUSE	3.15A/250V	2.5A/250V	2.5A/250V	2.5A/250V	3.15A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> -	<u>Default:</u> BLA <u>Options:</u> F	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> -

\*Special module, available only in custom configurations. PS+1602 supports **auxiliary voltage measurement**. The module is calibrated to DC voltage measurement.

\*\*\*Obsolete module. These modules are not recommended for new designs!

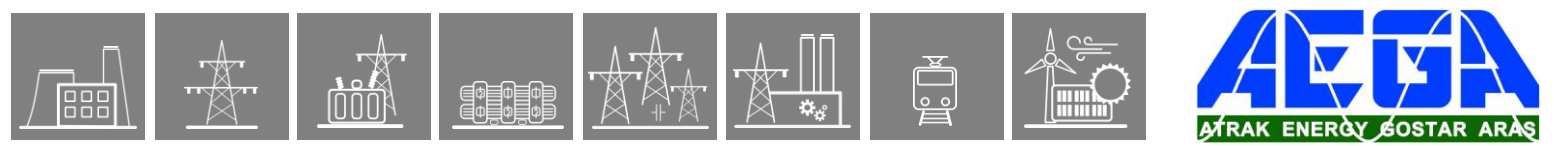

MODULE TYPE	PS+/2161*	PS+/2164**	PS+/4261*	PS+/4264**
RATED VOLTAGE	110 V DC / 220 V DC	110 V DC / 220 V DC	24 V DC / 48 V DC / 60 V DC	24 V DC / 48 V DC / 60 V DC
INPUT VOLTAGE OPERATIVE RANGE	88 - 264 V DC	88 - 264 V DC	19.2 - 72 V DC	19.2 - 72 V DC
MAX. CONTINUOUS POWER OUTPUT	60 W	60 W	60 W	60 W
VOLTAGE DIP WITHSTAND AT 80% UN → 0% INPUT VOLTAGE CHANGE (IEC 60255-26)	40 ms	40 ms	40 ms	40 ms
INTERNAL FUSE	3.15A/250V	3.15A/250V	8A/250V	8A/250V
CONNECTOR TYPE	<u>Default:</u> BLT <u>Options:</u> -	<u>Default:</u> BLT <u>Options:</u> -	<u>Default:</u> BLT <u>Options:</u> -	<u>Default:</u> BLT <u>Options:</u> -

**\*Can be connected in parallel.\*\*Can be connected in parallel and supports auxiliary voltage measurement.**

MODULE TYPE	PS+/4401**	PS3F+/1001*
RATED VOLTAGE	48 V DC / 60 V DC	3x100 V AC (line voltage)
INPUT VOLTAGE OPERATIVE RANGE	38.4 - 72 V DC	80 - 120 V AC
MAX. CONTINUOUS POWER OUTPUT	30 W	20 W
VOLTAGE DIP WITHSTAND AT 80% UN → 0% INPUT VOLTAGE CHANGE (IEC 60255-26)	20 ms 30 ms at 100%Un → 0%	50 ms 100 ms at 100%Un → 0%
INTERNAL FUSE	3.15A/250V	2.5A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> -

**\*Special module.** At least 2 healthy phase voltages are needed for the operation of the PS3F+1001 module. LEDs on the front of the module indicate the presence of healthy phase voltages. For the correct internal signals connect the common point of the supplying 3 phase voltage to the 4<sup>th</sup> connector ("N").

**\*\*Can be connected in parallel.**

Main features:

- Fault relay contacts (NC and NO): device fault contact and also assignable to user functions. All the three relay contact points are accessible to users.
- Redundant applications (nominal power and reliability can be increased by using parallel power supplies)
- On-board self-supervisory circuits: temperature and voltage monitors
- Short-circuit-protected outputs
- Efficiency: > 70 %, power consumption = nominal power / efficiency
- Passive heatsink



- Early power failure indication signals to the CPU for the possibility of power outage, thus the CPU has enough time to save the necessary data to non-volatile memory
- Inrush current (until 0.1 s): < 10 A for all types excluding PS+4401 which has < 21 A inrush current.
- Common features for internal fuses:
  - 5 mm x 20 mm (0.20" x 0.79")
  - TT characteristics (very inverse time-lag)
  - 35 A @ 250 V AC rated breaking capacity
- Recommended external protection: miniature circuit breaker, 6 A (C char.)

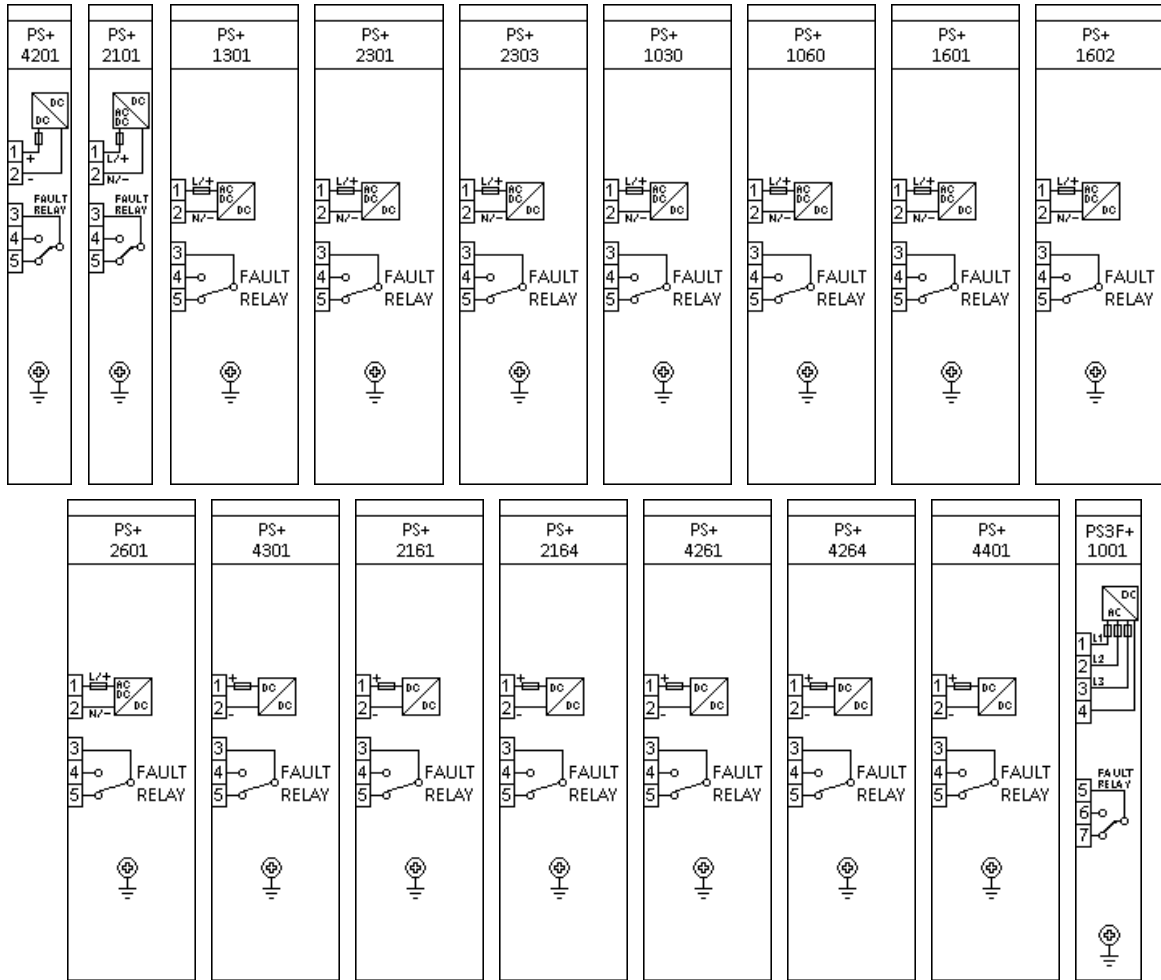


Figure 16-1 Power supply modules

## 1.1.18. Sampling synchronization module

The IED sampling system is synchronized via this module to an external source (IRIG-B) in PMU (Phasor Measurement Unit) applications. The PLL of the module handles the setting of the phase and frequency if valid IRIG-B signal is received. Note that the sampling signal is generated even if the IRIG-B signal is not present, however in that case, it runs independently.

MODULE TYPE	TSYNC+/0071
IRIG-B TYPE	B000 (unmodulated)
INPUT TYPE	BNC (coaxial)
SIGNAL THRESHOLD	5 VDC CMOS max. 5.5 VDC
MAX. CABLE LENGTH	50 m
CLAMP VOLTAGES	falling 1.7 VDC rising 3.1 VDC
SAMPLING ACCURACY*	< 100 ns
IRIG SYNCH. TIME	max. 1 minute
HOLDOVER TIME**	30 s
SAMPLING FREQUENCY	2 kHz @ 50 Hz 2.4 kHz @ 60 Hz
SAMPLING ACCURACY IN INDEPENDENT MODE***	< 1 ppm

\*max. time difference between synchronized systems connecting to different GNSS (e.g. GPS)

\*\*the sampling accuracy stays below the given value during this time if the IRIG-B signal is lost

\*\*\*the accuracy of the 2/2.4 kHz sampling signal if an IRIG-B signal is not present

 


Figure 17-1 Sampling synchronization module

## 1.1.19. Mixed function modules

### 1.1.19.1. PSTP+ module

#### IMPORTANT

PSTP+ modules can be used only if the power consumption of the device does not reach 20 W and maximum 2 TRIP contacts are needed. If the application does not meet any of these two requirements, it is not allowed to use these cards. In this case separate PS+ (Chapter 16) and TRIP+ (Chapter 9) modules must be used.

#### Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

Note for the following tables:

- Thermal withstand voltage:** continuous with 60 % of the input channels are energized.

MODULE TYPE	PSTP+/2101	PSTP+/2102*	PSTP+/2131**
POWER SUPPLY CHARACTERISTICS			
RATED VOLTAGE	110 V / 220 V	110 V / 220 V	110 V / 220 V
INPUT VOLTAGE OPERATIVE RANGE	88 - 264 V DC 80 - 250 V AC	88 - 264 V DC 80 - 250 V AC	88 - 264 V DC 80 - 250 V AC
MAXIMUM CONTINUOUS POWER OUTPUT	20 W	20 W	20 W
VOLTAGE DIP DURATION AT 0% RESIDUAL VOLTAGE (IEC 60255-26)	<b>min. 100 ms</b> in the specified input voltage range	<b>min. 100 ms</b> in the specified input voltage range	<b>min. 100 ms</b> in the specified input voltage range
INTERNAL FUSE	3.15A/250V	3.15A/250V	3.15A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> T
TRIPPING CHARACTERISTICS			
CHANNEL NUMBER	2	2	2
RATED VOLTAGE	110 V DC and 220 V DC or dry contacts	110 V DC and 220 V DC or dry contacts	110 V DC and 220 V DC or dry contacts
THERMAL WITHSTAND VOLTAGE	242 V DC	242 V DC	242 V DC
CONTINUOUS CARRY	8 A	8 A	8 A
MAKING CAPACITY	0.5 s, 30 A	0.5 s, 30 A	0.5 s, 30 A
BREAKING CAPACITY	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> BLA <u>Options:</u> T

\***Special module** that supports **auxiliary voltage measurement**. The module is calibrated to DC voltage measurement.

\*\***Without trip circuit supervision**

MODULE TYPE	PSTP+/4201	PSTP+/4202*
	POWER SUPPLY CHARACTERISTICS	
RATED VOLTAGE	24 V / 48 V / 60 V	24 V / 48 V / 60 V
INPUT VOLTAGE OPERATIVE RANGE	19.2 - 72 V DC	19.2 - 72 V DC
MAXIMUM CONTINUOUS POWER OUTPUT	20 W	20 W
VOLTAGE DIP DURATION AT 0% RESIDUAL VOLTAGE (IEC 60255-26)	<b>50 ms</b> at nominal input voltages min. <b>40 ms</b> in the specified input voltage range	<b>50 ms</b> at nominal input voltages min. <b>40 ms</b> in the specified input voltage range
INTERNAL FUSE	3.15A/250V	3.15A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T
	TRIPPING CHARACTERISTICS	
CHANNEL NUMBER	2	2
RATED VOLTAGE	24 V DC and 48 V DC or dry contacts	24 V DC and 48 V DC or dry contacts
THERMAL WITHSTAND VOLTAGE	72 V DC	72 V DC
CONTINUOUS CARRY	8 A	8 A
MAKING CAPACITY	0.5 s, 30 A	0.5 s, 30 A
BREAKING CAPACITY	L/R = 40 ms: 4 A DC	L/R = 40 ms: 4 A DC
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T

\***Special module** that supports **auxiliary voltage measurement**. The module is calibrated to DC voltage measurement.

Main features:

- High-speed operation: with pre-trip 0.5 ms, without pre-trip typically 10 ms, maximally 22 ms.
- Trip circuit supervision for each trip contact
- 1 unit wide (4 HP) modules
- Inrush current (until 0.1 s): < 10 A
- Common features for internal fuses:
  - 5 mm x 20 mm (0.20" x 0.79")
  - TT characteristics (very inverse time-lag)
  - 35 A @ 250 V AC rated breaking capacity
- Recommended external protection: miniature circuit breaker, 6 A (C char.)

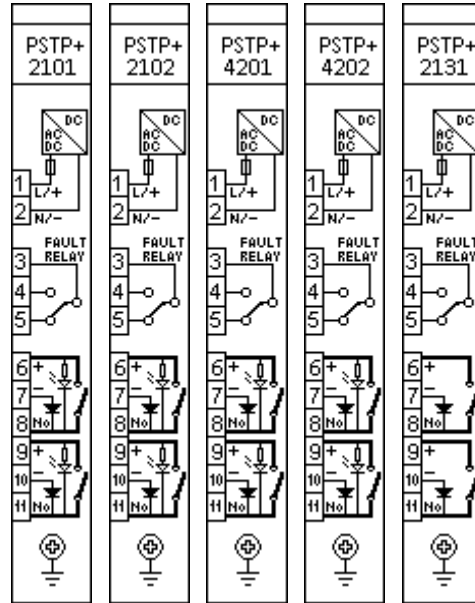


Figure 18-1 Power supply with 2 Ch. TRIP modules

### 1.1.19.1.1. Trip Circuit Supervision (TCS) in PSTP modules

Apart from the PSTP+/2131, all PSTP modules have TCS.

The technical data of the TCS in PSTP modules:

	MODULE TYPE	PSTP+/4201 PSTP+/4202	PSTP+/2101 PSTP+/2102
	INJECTED CURRENT AT "NO" CONTACT	1.5 mA	1.5 mA
MAXIMUM RESISTANCE OF THE TRIP COIL	3-WIRE WIRING (1 mA CURRENT)	8 kΩ (max. 8 V)	13 kΩ (max. 13 V)
	3-WIRE WIRING IN PARALLEL	4 kΩ (max. 8 V)	6.5 kΩ (max. 13 V)
	2-WIRE METHOD (1 mA MIN. CURRENT)	24 kΩ @ 24 V DC 48 kΩ @ 48 V DC 60 kΩ @ 60 V DC	110 kΩ @ 110 V DC 220 kΩ @ 220 V DC

**IMPORTANT**

PSR2+ modules can be used only if the power consumption of the device does not reach 20 W and maximum 2 contacts are needed. If the application does not meet any of these two requirements it is not allowed to use these cards. In this case separate PS+ (Chapter 16) and Signaling (Chapter 8) modules must be used.

### 1.1.19.2. PSR2+ module


Connector types:

- The default and optionally available connector types are indicated for each module in the table below. See Chapter 20.2 for details about each type.


MODULE TYPE	PSR2+/2101
POWER SUPPLY CHARACTERISTICS	
RATED VOLTAGE	110 V / 220 V
INPUT VOLTAGE OPERATIVE RANGE	88 - 264 V DC 80 - 250 V AC
MAXIMUM CONTINUOUS POWER OUTPUT	20 W
VOLTAGE DIP DURATION AT 0% RESIDUAL VOLTAGE (IEC 60255-26)	min. 100 ms in the specified input voltage range
INTERNAL FUSE	3.15A/250V
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T
SIGNALING RELAY CHARACTERISTICS	
CHANNEL NUMBER	2
RATED VOLTAGE	250 V AC/DC
CONTINUOUS CARRY	8 A
MAKING CAPACITY	0.5 s, 30 A
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T

Main features (according to IEC 60255-26):

- Maximum switching voltage: 400 V AC
- Breaking capacity: (L/R=40 ms) at 220 V DC: 0.2 A, at 110 V DC: 0.3 A
- Breaking capacity max.: 2000 VA
- Short time carrying capacity: 1 s, 35 A
- Limiting making current, max. 4 s: 15 A (df = 10 %)
- Dielectric strength between open contacts, 1 min: 1000 V<sub>RMS</sub>
- Mechanical endurance: 10 × 10<sup>6</sup> cycles
- Circuit closing capability: typically 10 ms, maximally 22 ms.
- Bounce time: typically 6,5 ms, maximally 10 ms.
- Minimal switching requirement: 5 V

 

*Figure 18-2 Power supply with 2 Ch. signaling modules*

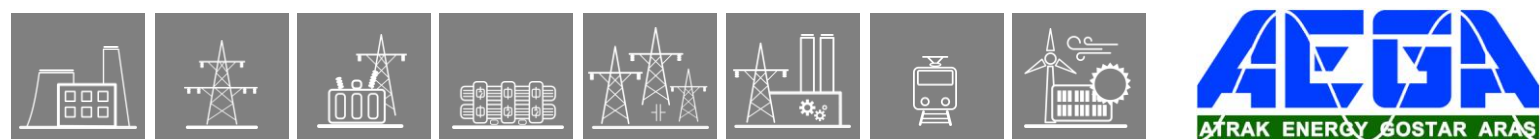

### 1.1.19.3. O6R5+ module

The O6R5+ module contains 6 binary input channels in one grounding group, and 5 relay outputs with 2 × 2 NO contacts and one CO contact.

Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

Notes for the following table:

- **Thermal withstand voltage:** continuous with 60 % of the input channels are energized.
- **Clamp voltage:** these are the guaranteed values; the actual ones might differ from those provided here (falling and rising around 0.66  $U_N$  and 0.77  $U_N$ , respectively)

MODULE TYPE	O6R5+/2101	O6R5+/4201
<b>BINARY INPUT CHARACTERISTICS</b>		
CHANNEL NUMBER	6	6
RATED VOLTAGE	110 V / 220 V user selectable on channel basis by jumpers	24 V / 48 V user selectable on channel basis by jumpers
TIME SYNCHRONIZATION	configured by EuroCAP	configured by EuroCAP
THERMAL WITHSTAND VOLTAGE	320 V	72 V
CLAMP VOLTAGE	falling 0.64 $U_N$ rising 0.8 $U_N$	falling 0.64 $U_N$ rising 0.8 $U_N$
COMMON GROUPS	1 × 6 common	1 × 6 common
<b>RELAY OUTPUT CHARACTERISTICS</b>		
RATED VOLTAGE	250 V AC/DC	250 V AC/DC
CONTINUOUS CARRY	8 A	8 A
CONTACT VERSIONS	4 NO, 1 CO	4 NO, 1 CO
GROUP ISOLATION	2 × 2 common, 1 independent	2 × 2 common, 1 independent
CONNECTOR TYPE FOR BOTH BINARY INPUT AND RELAY OUTPUT	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> T



Main features for binary inputs:

- Digitally filtered per channel
- Current drain:
  - max. 1.6 mA per channel at 220 V DC
  - max. 1.8 mA per channel at 110 V DC
  - max. 2 mA per channel at 48 V DC
  - max. 3 mA per channel at 24 V DC
- In such applications where the input voltage is 60 V the modules with 48 V rated voltage can be used.
- Input voltage type can be either DC or AC voltage. If AC voltage is used make sure that the type and the parameters of the binary inputs are configured properly in EuroCap tool.

Main features for signaling outputs:

- Maximum switching voltage: 400 V AC
- Breaking capacity, (L/R=40 ms) at 220 V DC: 0.1 A, at 110 V DC: 0.2 A
- Breaking capacity max.: 2000 VA
- Short time carrying capacity: 1 s, 35 A
- Limiting making current, max. 4 s: 15 A (df = 10 %)
- Initial dielectric strength between open contacts, 1 min: 1000 V<sub>RMS</sub>
- Circuit closing capability: typically 10 ms, maximally 22 ms.
- Bounce time: typically 6,5 ms, maximally 10 ms.
- Mechanical endurance: 10 × 10<sup>6</sup> cycles
- Circuit closing capability


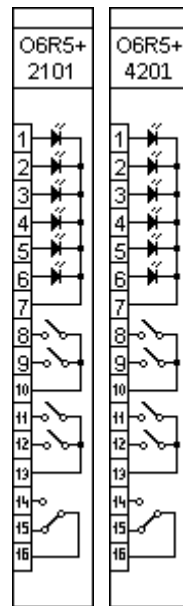


Figure 18-3 Binary input/output modules

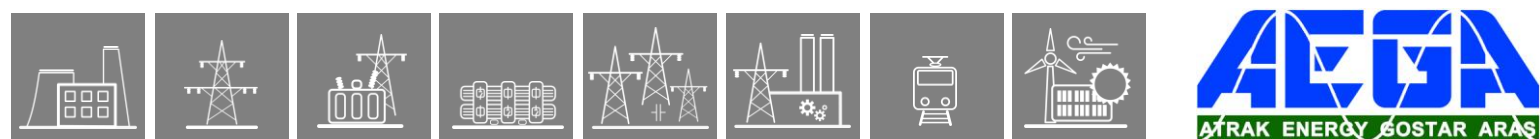

### 1.1.19.4. Binary input module with time synchronization

The inputs are galvanically isolated and the module converts high-voltage signals to the voltage level and format of the internal circuits. This module is also used as an external IRIG-B synchronization (**IRIG-B000, unmodulated**), PPM or PPS input. Dedicated synchronization input is used for this purpose.


Connector types:

- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

Notes for the following table:

- **Thermal withstand voltage:** continuous with 60 % of the input channels are energized.
- **Clamp voltage:** these are the guaranteed values; the actual ones might differ from those provided here (falling and rising around  $0.66 U_N$  and  $0.77 U_N$ , respectively)

MODULE TYPE	O9S+/2111	O9S+/2121	O9S+/4221
CHANNEL NUMBER	9	9	9
SYNCHRON CHANNEL TYPE AND NUMBER	1 isolated BNC connector	1 850 nm multimode fiber with ST connector	1 850 nm multimode fiber with ST connector
RATED VOLTAGE	110 V DC / 220 V DC user selectable by jumpers	110 V DC / 220 V DC user selectable by jumpers	24 V DC / 48 V DC user selectable by jumpers
THERMAL WITHSTAND VOLTAGE	320 V	320 V	72 V
WITHSTAND VOLTAGE FOR SYNC. INPUT	35 V <sub>PEAK</sub>	-	-
CLAMP VOLTAGE	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$	falling $0.64 U_N$ rising $0.8 U_N$
COMMON GROUPS	9 (3 × 3 common)	9 (3 × 3 common)	9 (3 × 3 common)
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> T	<u>Default:</u> BLA <u>Options:</u> F, T	<u>Default:</u> - <u>Options:</u> F, T

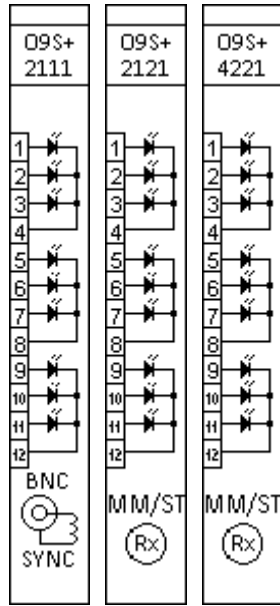

*Figure 18-4 Binary input modules with time synchronization*

## 1.1.19.5. Externally driven trip module

The R4MC+01 is a special TRIP module, which can be operated from the connector side. It also has two diode inputs with cathodes which are connected and led to the connector side.

### Connector types:


- The default and optionally available connector types are indicated for each module in the tables below. See Chapter 20.2 for details about each type.

Module type	R4MC+/01*
CHANNEL NUMBER	2
RATED VOLTAGE	110 V DC
THERMAL WITHSTAND VOLTAGE	132 V DC
CONTINUOUS CARRY	8 A
MAKING CAPACITY	0.5 s, 30 A
BREAKING CAPACITY	L/R = 40 ms: 4 A DC
DIODE PROPERTIES	1 A, 1000 V DC
CONNECTOR TYPE	<u>Default:</u> BLA <u>Options:</u> F

\*Special module



Figure 18-5 Externally driven TRIP module

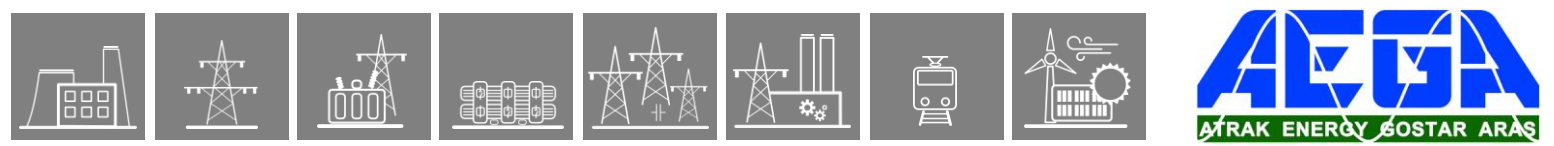

### 1.1.20. General data

- Storage temperature: - 40 °C ... + 70 °C
- Operation temperature: - 20 °C ... + 55 °C
- Humidity: 10 % ... 93 %
- Altitude: up to 2000 m
- Atmospheric pressure: 86 ... 106 kPa

## 1.1.20.1. Standard conformance


- Electrostatic discharge immunity (ESD), IEC-EN 60255-26:2013, Level 4
  - Test voltages: 15 kV air discharge, 8 kV contact discharge
- Radiated, radio-frequency, electromagnetic field immunity, IEC-EN 60255-26:2013 Level 3
  - Test field strength: 10 V/m
- Electrical fast transient/burst immunity (EFT/B), IEC-EN 60255-26:2013, Level 4
  - Test voltage: 4 kV
- Surge immunity test, IEC-EN 60255-26:2013
  - Test voltages: 4 kV line-to-earth, 2 kV line-to-line
- Immunity to conducted disturbances, induced by radio-frequency fields, IEC-EN 60255-26:2013, Level 3
  - Test voltage: 10 V
- Damped oscillatory wave immunity test, IEC-EN 60255-26:2013
  - Test frequency: 1 MHz
  - Test voltage: 2.5 kV in common mode, 1 kV in differential mode
- Voltage dips, short interruptions and voltage variations immunity, IEC-EN 60255-26:2013
  - Voltage dips: 40 % (200 ms), 70 % (500 ms), 80 % (5000 ms)
- Ripple on d.c. input power port immunity, IEC-EN 60255-26:2013
  - Level 4, 15 % of rated d.c. value
- Power frequency magnetic field immunity test, IEC-EN 60255-26:2013, Level 5
  - Test field strength: 100 A/m continuous, 1000 A/m for 3 s
- Power frequency immunity test on the binary inputs, IEC-EN 60255-26:2013, Class A
  - Test voltages: 300 V in common mode, 150 V in differential mode
- Insulation tests, IEC-EN 60255-27:2013
  - Impulse voltage test
    - Test levels: 5 kV (1 kV for transducer and temperature measuring inputs)
  - Dielectric test
    - Test levels: 2 kV AC 50 Hz (0.705 kV DC for transducer inputs)
  - Insulation resistance
    - Insulation resistance > 15 GΩ
- Radiated emission, IEC-EN 60255-26:2013
 

Limits:

  - 30 MHz to 230 MHz: 50 dB(μV/m) quasi peak, 3 m
  - 230 MHz to 1 000 MHz: 57 dB(μV/m) quasi peak, 3 m
  - 1 GHz to 3 GHz: 76 dB(μV/m) peak, 3 m
  - 3 GHz to 6 GHz: 80 dB(μV/m) peak, 3 m
- Conducted emission, IEC-EN 60255-26:2013
 

Limits:

  - 0,15 MHz to 0,50 MHz: 79 dB(μV) quasi peak, 66 dB(μV) average
  - 0,5 MHz - 30 MHz: 73 dB(μV) quasi peak, 60 dB(μV) average
- Vibration, shock, bump and seismic tests on measuring relays and protection equipment
  - Vibration tests (sinusoidal), Class I, IEC 60255-21-1:1988
  - Shock and bump tests, Class I, IEC 60255-21-2:1988
  - Seismic tests, Class I, IEC 60255-21-3:1993

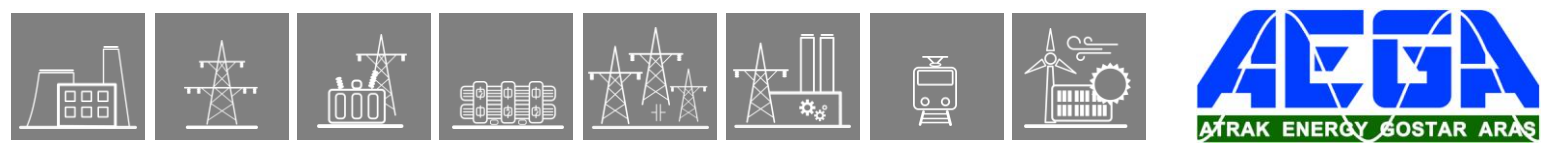

## 1.1.21. Mechanical data

### 1.1.21.1. General mechanical data

- Construction: chromate aluminum surface with built-in EMC accessories
  - If the power consumption of a 84 HP or 42 HP device does not exceed 30 W (84 HP) or 14 W (42 HP), the construction will be built with solid top and bottom cover panels.
  - If the power consumption exceeds 30 W (84 HP) or 14 W (42 HP), the construction will be built with (honeycomb) perforated top and bottom cover panels.
- EMC rack protects against electromagnetic environmental influences and protects the environment from radiation from the interior
- IP protection:
  - 24 HP panel instrument case: IP4x; optionally IP54 (front)
  - 84 HP and 42 HP (including double) rack: IP4x from front side, IP2x from rear side; optionally IP54 (front)
- Size:
  - 19" (84 HP), 3 U, single rack
  - ½ 19" (42 HP), 3 U, single rack
  - ½ 19" (42 HP), 6 U, double rack
  - 24 HP, panel instrument case
- Weight:
  - 84 HP: max. 8 kg
  - 42 HP, 3 U: max. 4.5 kg
  - 42 HP, 6 U: max. 8 kg
  - 24 HP: max. 3 kg

## 1.1.21.2. Connectors

Optionally, certain modules can be equipped with different terminals for different connectors. The available choices are listed among each module's technical data with their *short ID* (see the first column of the table below).

The type of the used terminal is indicated on the module's label with its *short ID* (see the following example). The actual type of the connector is chosen according to the number of the available pins of the module.

**Example:** the *VT+/2211* module may have four types of connectors. In its description (Chapter 6), these are indicated with their ID:


- The default terminal is indicated with nothing attached (*VT+/2211*), only its name (BLA) is mentioned. Since it has 8 pins, the type is BLA 8/180
- The flanged terminal's *short ID* is **F**, so the module's label will be "*VT+/2211F*", if it is equipped with this terminal (BLA 8B/180)
- Top-screw terminal: **T**, the label becomes "*VT+/2211T*" (BLT 5.08HC/08/180F)
- Ring-lug terminal: **R**, so the module's label shall be "*VT+/2211R*"

CONNECTOR NAME (SHORT ID)	CONNECTOR TYPES	STRIP LENGTH [MM]	CONDUCTOR AREA [MM <sup>2</sup> ]	CONDUCTOR DIAMETER [MM]	TIGHTENING TORQUE [Nm]	MINIMUM BEND RADIUS*
<b>BLA (-)</b>	Weidmüller BLA 2/180, BLA 3/180, BLA 4/180, BLA 6/180, BLA 8/180, BLA 10/180, BLA 12/180, BLA 13/180, BLA 16/180	7	0.2 – 1.5 solid: 0.2 – 2.5	0.5 – 1.4 solid: 0.5 – 1.8	0.4 – 0.5	3 × OD**
<b>BL 3.5 (-)</b>	Weidmüller BL 3.5/05/180 BL 3.5/09/180	6	0.2 – 1.5	0.5 – 1.4	0.2 – 0.25	3 × OD**
<b>FLANGED (F)</b>	Weidmüller BLA 2B/180, BLA 3B/180, BLA 4B/180, BLA 6B/180, BLA 8B/180, BLA 10B/180, BLA 12B/180, BLA 16B/180	7	0.2 – 1.5 solid: 0.2 – 2.5	0.5 – 1.4 solid: 0.5 – 1.8	0.4 – 0.5	3 × OD**
<b>TOP-SCREW (T)</b>	Weidmüller BLT 5.08HC/06/180F, BLT 5.08HC/08/180F, BLT 5.08HC/12/180F, BLT 5.08HC/16/180F	13	0.2 – 1.5 solid: 0.2 – 2.5	0.5 – 1.4 solid: 0.5 – 1.8	0.4 – 0.5	3 × OD**
<b>RING-LUG (R)</b>	TE Connectivity BC6-Q308-08	-	0.33 – 3.31	0.65 – 2.05	0.79	3 × OD**

• Bend radius is measured along the inside curve of the wire or wire bundles.

\*\* OD is the outer diameter of the wire or cable, including insulation.



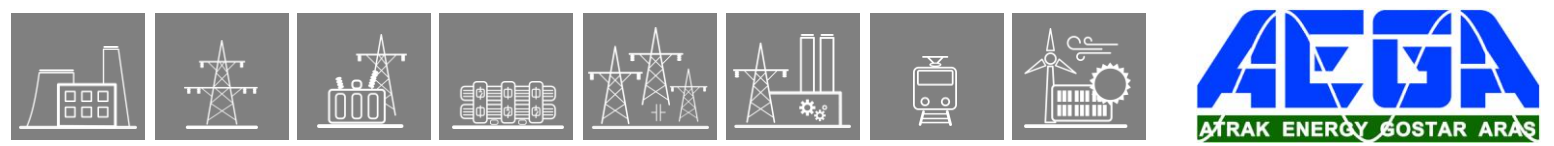

CONNECTOR NAME (SHORT ID)	CONNECTOR TYPES	STRIP LENGTH [MM]	CONDUCTOR AREA [MM <sup>2</sup> ]	CONDUCTOR DIAMETER [MM]	TIGHTENING TORQUE [Nm]	MINIMUM BEND RADIUS*
<b>STVS (-)</b>	Weidmüller STVS 6 SB, STVS 8 SB	9	0.5 – 4	0.8 – 2.3	0.5 – 0.6	3 × OD**
<b>B2L 3.5</b>	Weidmüller B2L 3.5	7	0.2 – 1	0.5 – 1.1	tension clamp connection	3 × OD**
<b>ST/FC/LC</b>	Bayonet/Screw/Snap Fiber Optic	-	-	-	-	30 mm
<b>PE FASTON TERMINAL</b>	TE Connectivity 6.3x0.8	7	min. 4	min. 2.3	-	3 × OD**

- Bend radius is measured along the inside curve of the wire or wire bundles.
- \*\* OD is the outer diameter of the wire or cable, including insulation.

The tightening torque of the screw for protective earth connection and the wall mounting must be approx. 5 Nm.

The tightening torque of the screw for fastening the STVS connector must be approx. 1 Nm.

The minimum distance between an EP+ device and its wire channel must be at least 3 cm.

The minimum distance between two EP+ devices must be at least 10 cm.

During the installation make sure that the shortest possible length for PE (Protective Earth) cable routing is applied.

## 1.1.22. Mounting methods

- Flush mounting
  - 84 HP single rack
  - 42 HP single rack
  - 42 HP double rack
  - 24 HP panel instrument case
  - Remote HMI
- Rack mounting
  - 84 HP single rack
  - 42 HP single rack
  - Remote HMI
- Semi-flush mounting
  - 84 HP single rack
  - 42 HP single rack
  - 24 HP panel instrument case
  - Remote HMI
- Wall mounting (with terminals)
  - 84 HP single rack
  - 42 HP single rack
- Din rail mounting
  - 24 HP panel instrument case
- IP54 rated mounting
  - 84 HP single rack
  - 42 HP single rack
  - 24 HP panel instrument case (original frame with additional gasket)
- Fold-down mounting (with optional terminals)
  - 84 HP single rack
  - 42 HP single rack
- No mounting
  - 84 HP single rack
  - 42 HP single rack

MOUNTING METHOD	84 HP SINGLE RACK	42 HP SINGLE RACK	42 HP DOUBLE RACK	24 HP PANEL INSTRUMENT CASE	REMOTE HMI
FLUSH MOUNTING	X	X	X	X	X
RACK MOUNTING	X	X			X
SEMI-FLUSH MOUNTING	X	X		X	X
WALL MOUNTING (WITH TERMINALS)	X	X			
DIN RAIL MOUNTING				X	
IP54 RATED MOUNTING	X	X		X*	
FOLD-DOWN MOUNTING	X	X			

\*additional gasket inserted into the original front panel frame




It is recommended to leave at least 80 mm free space for the wiring at the back of the IED in case of Flush mounting, Rack mounting, and Semi-flush mounting.

### 1.1.22.1. Flush mounting

Flush mounting can be used for all size of racks (84 HP, 42 HP, double 42 HP) including the 24 HP panel instrument case and the remote HMI devices. When this type of mounting alternative is used the 84 HP, 42 HP, double 42 HP and remote HMI devices have got a cover profile fit on and the 24 HP devices have got a mounting frame fit on.

The dimensions of the cut-outs for the 84 HP and 42 HP devices are also applicable for the same sized remote HMI devices.

#### 1.1.22.1.1. Flush mounting of 84 HP and 42 HP single rack

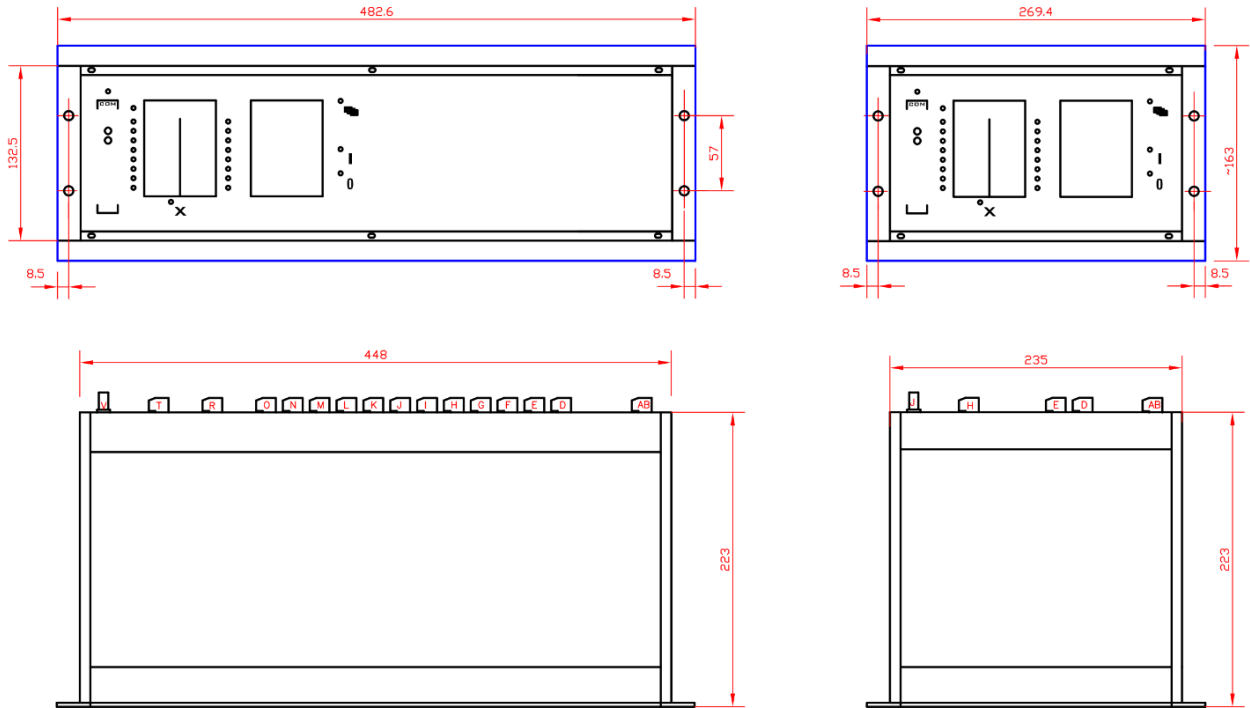

#### PANEL CUT-OUT

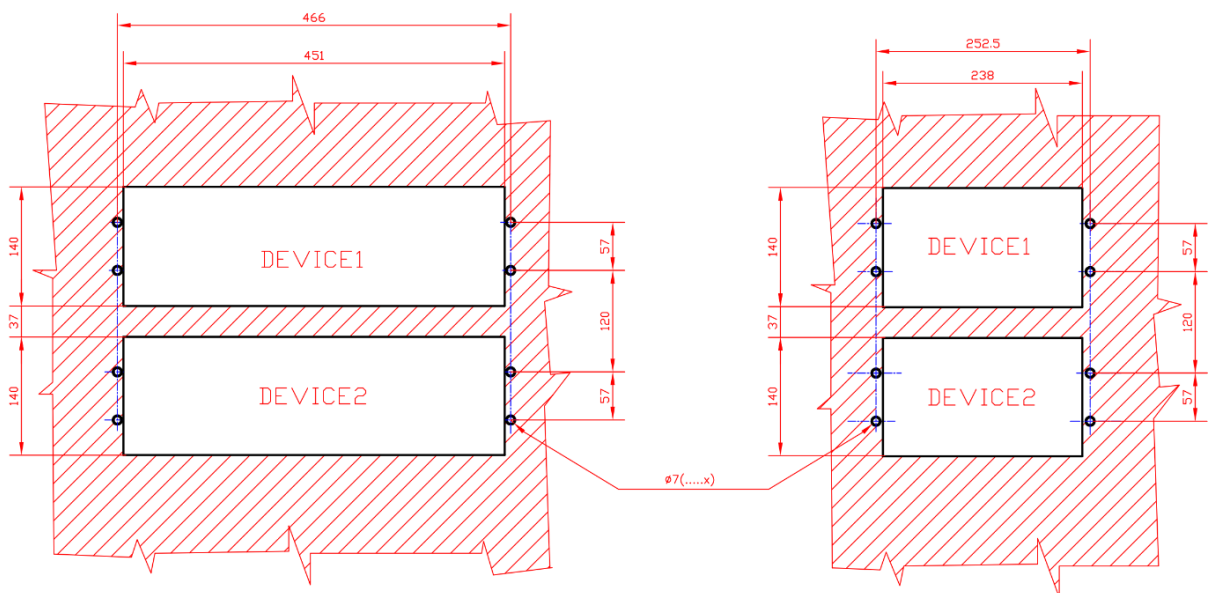


Figure 21-1 Dimensions for flush mounting of 84 HP and 42 HP single rack

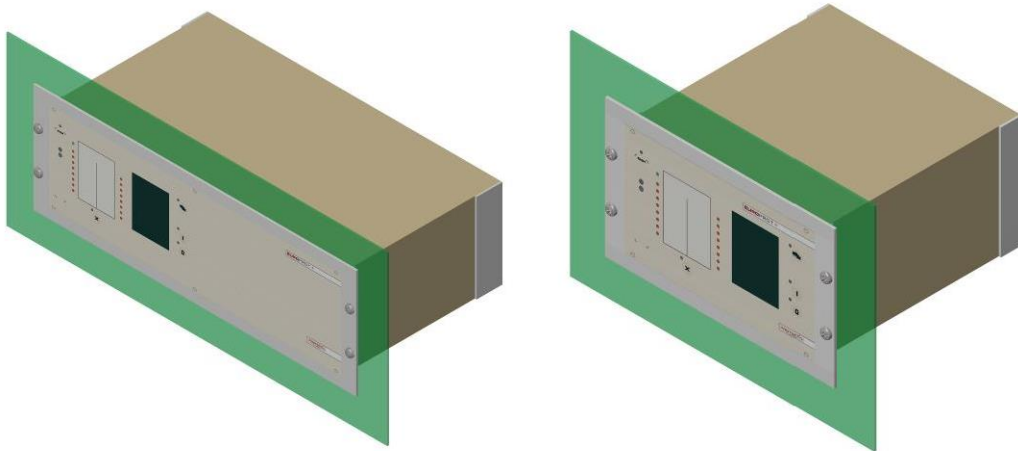


Figure 21-2 3D illustration for flush mounting of 84 HP and 42 HP devices

### 1.1.22.1.2. Flush mounting of 42 HP double rack

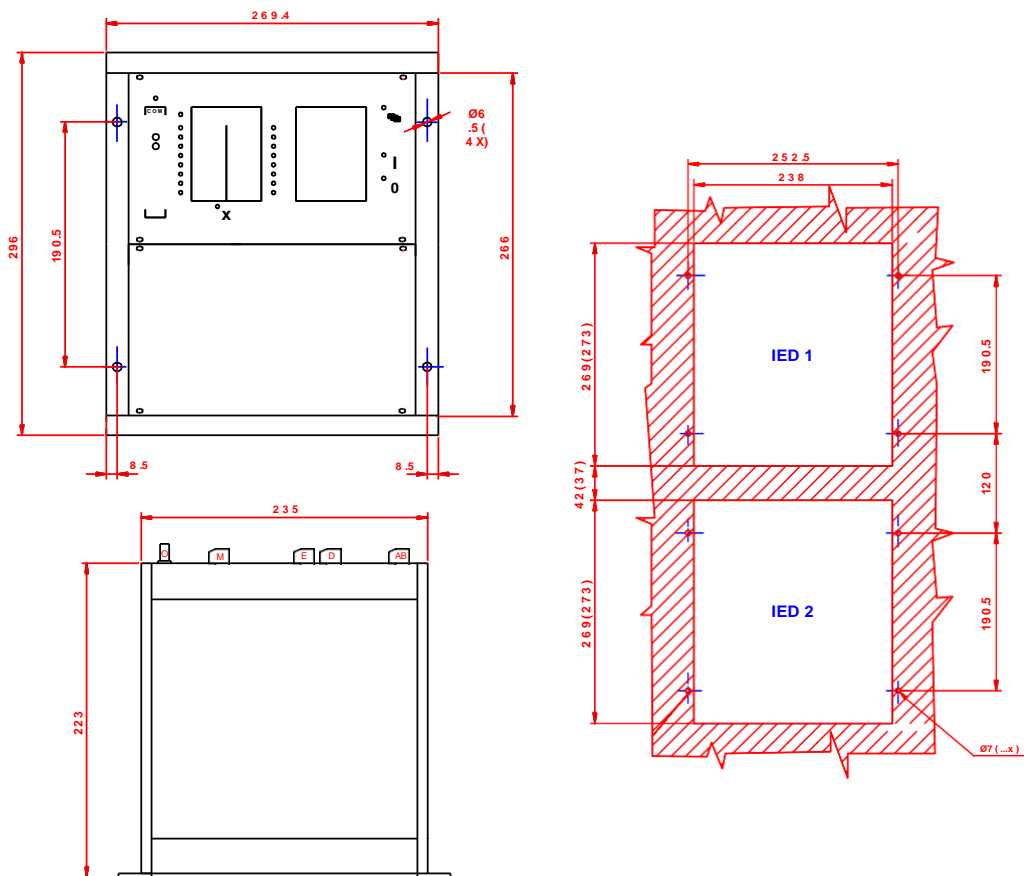


Figure 21-3 Dimensions for flush mounting of 42 HP double rack

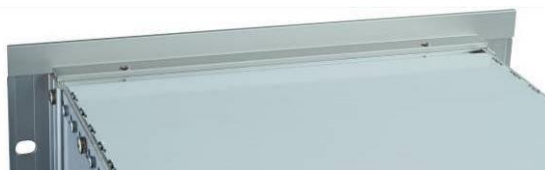


Figure 21-4 42 HP wide cover profile

### 1.1.22.1.3. Flush mounting of 24 HP panel instrument case

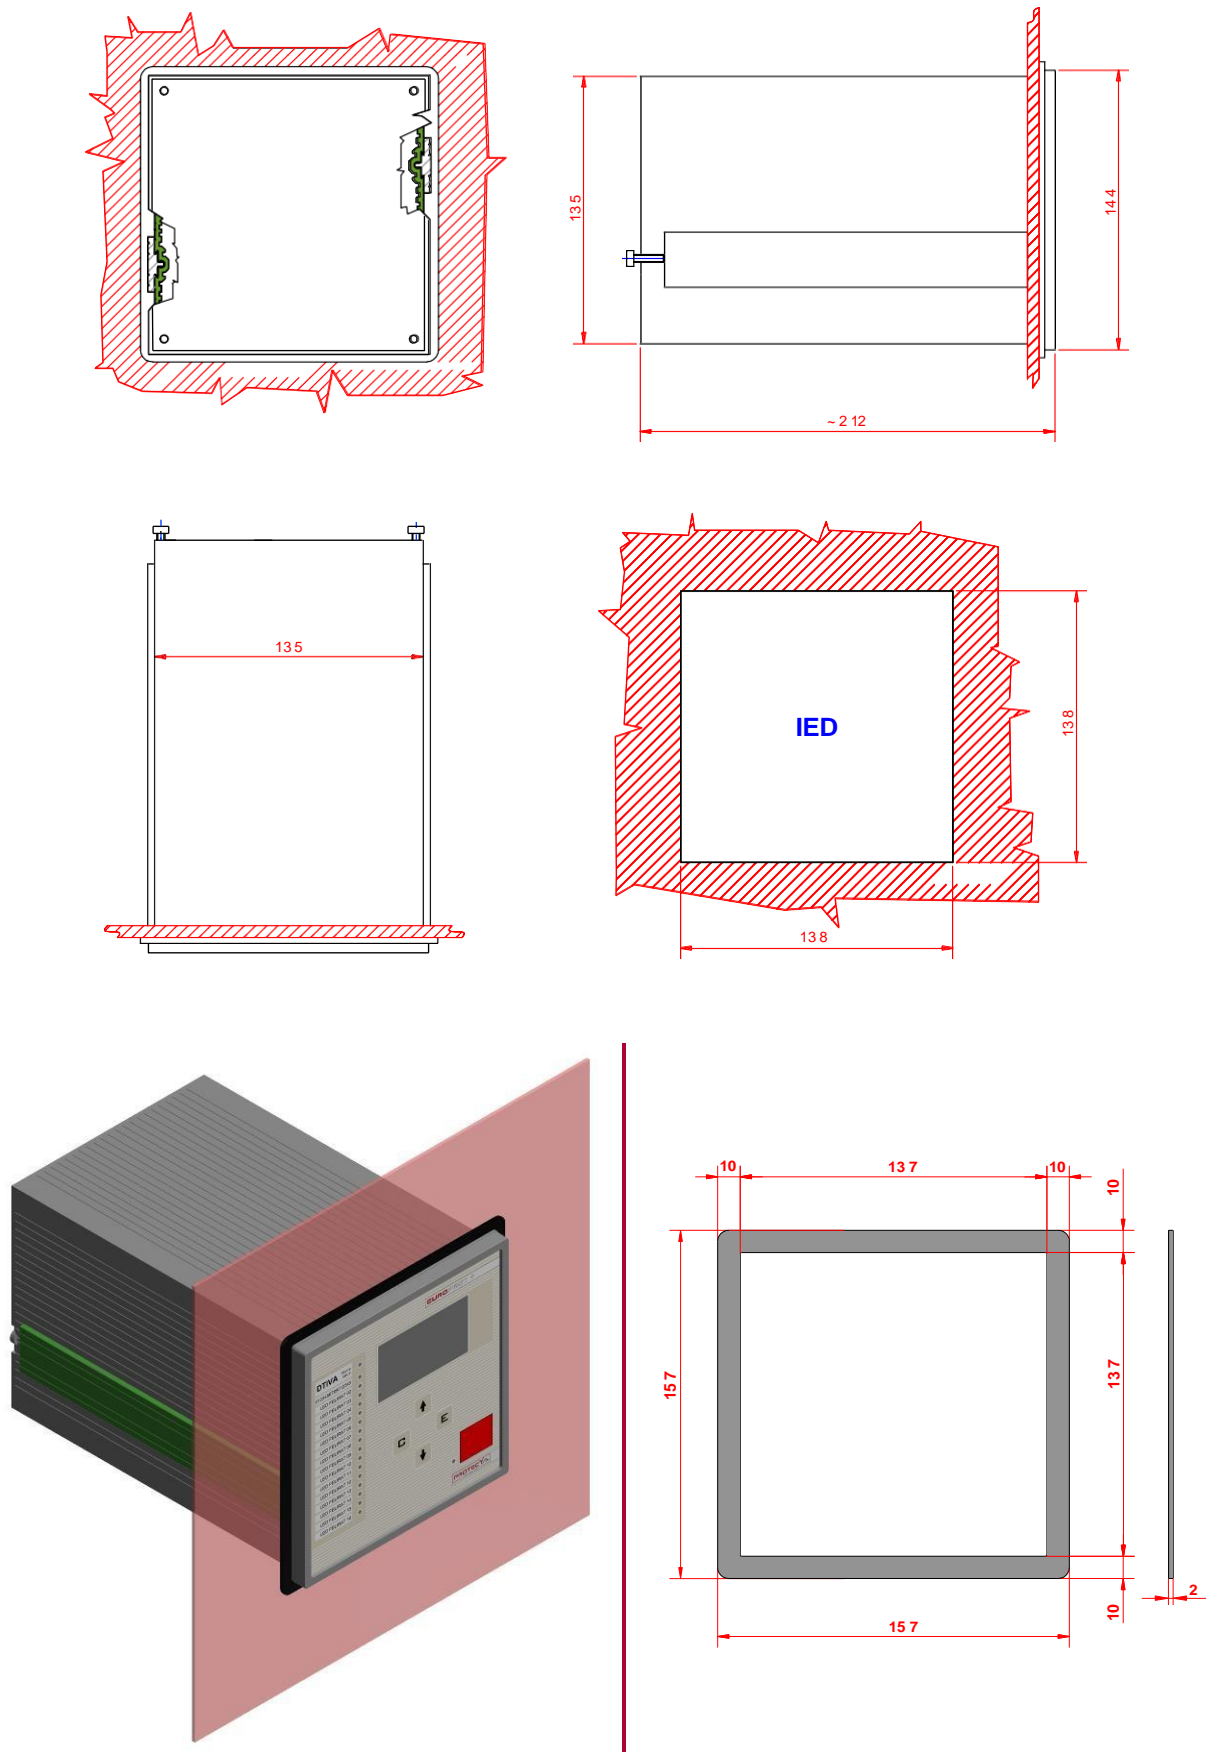


Figure 21-5 Dimensions for flush mounting of 24 HP panel instrument case with 3D illustration

## 1.1.22.2. Rack mounting

When rack mounting is used, the devices do not have a cover profile fit on, so it is possible to mount them in a 19" rack.

### 1.1.22.2.1. Rack mounting of 84 HP and 42 HP single rack

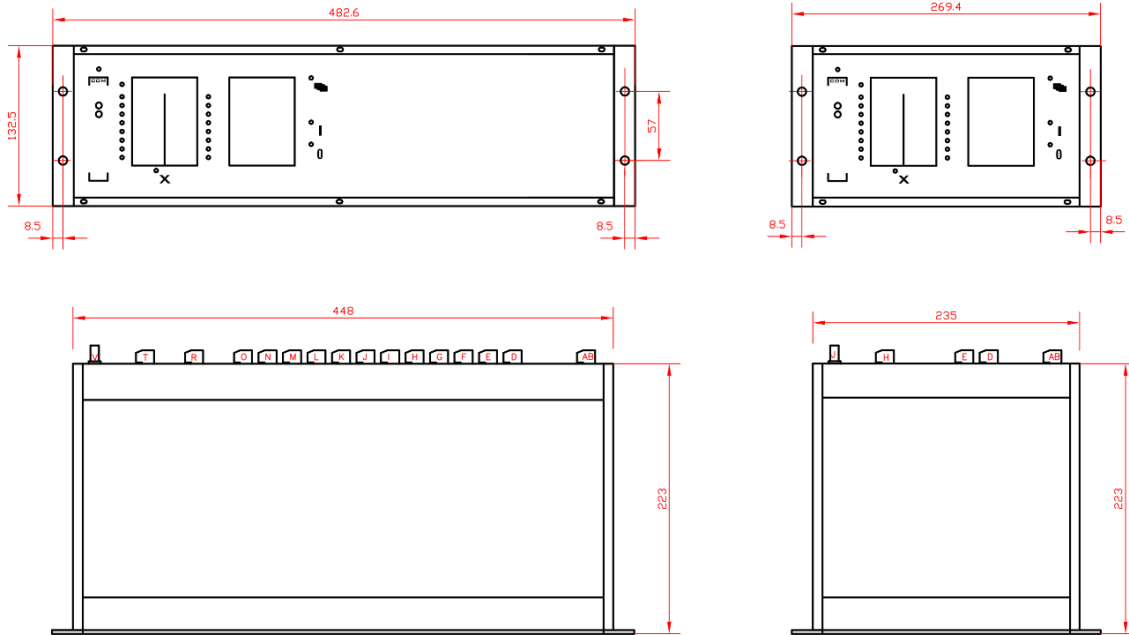


Figure 21-6 Dimensions for rack mounting of 84 HP and 42 HP single rack

Note that rack mounting type devices can also be mounted in a cut-out (e.g. on a switchgear door). It is possible to mount them from the front or from the back of the cut-out. The dimensions for rack mounting cut-outs are in the figure below. Dimensions in brackets are applicable in case of mounting from the back.



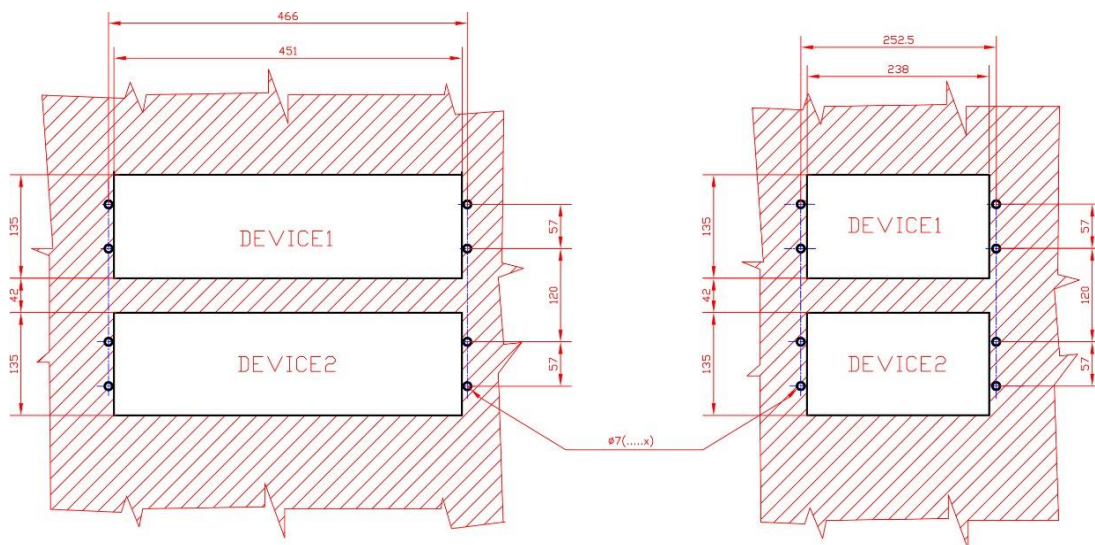


Figure 21-7 Dimensions of rack mounting cut-outs

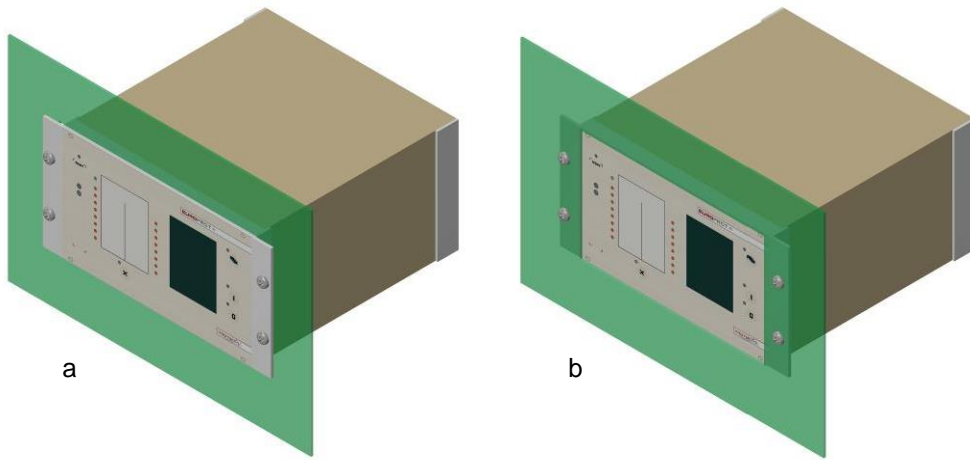

*Figure 21-8 3D illustration for rack mounting of 42 HP device  
(a - from the front; b - from the back)*

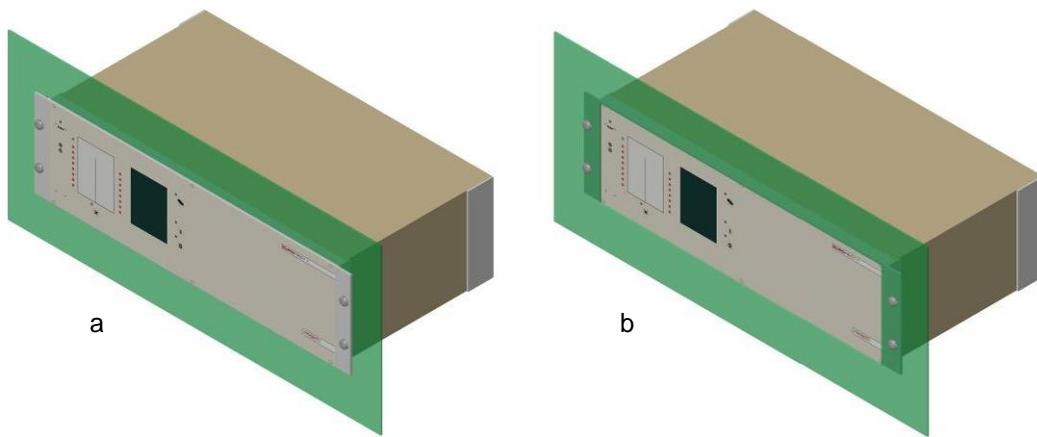

*Figure 21-9 3D illustration for rack mounting of 84 HP device  
(a - from the front; b - from the back)*



### 1.1.22.2. Rack mounting of 42 HP double rack

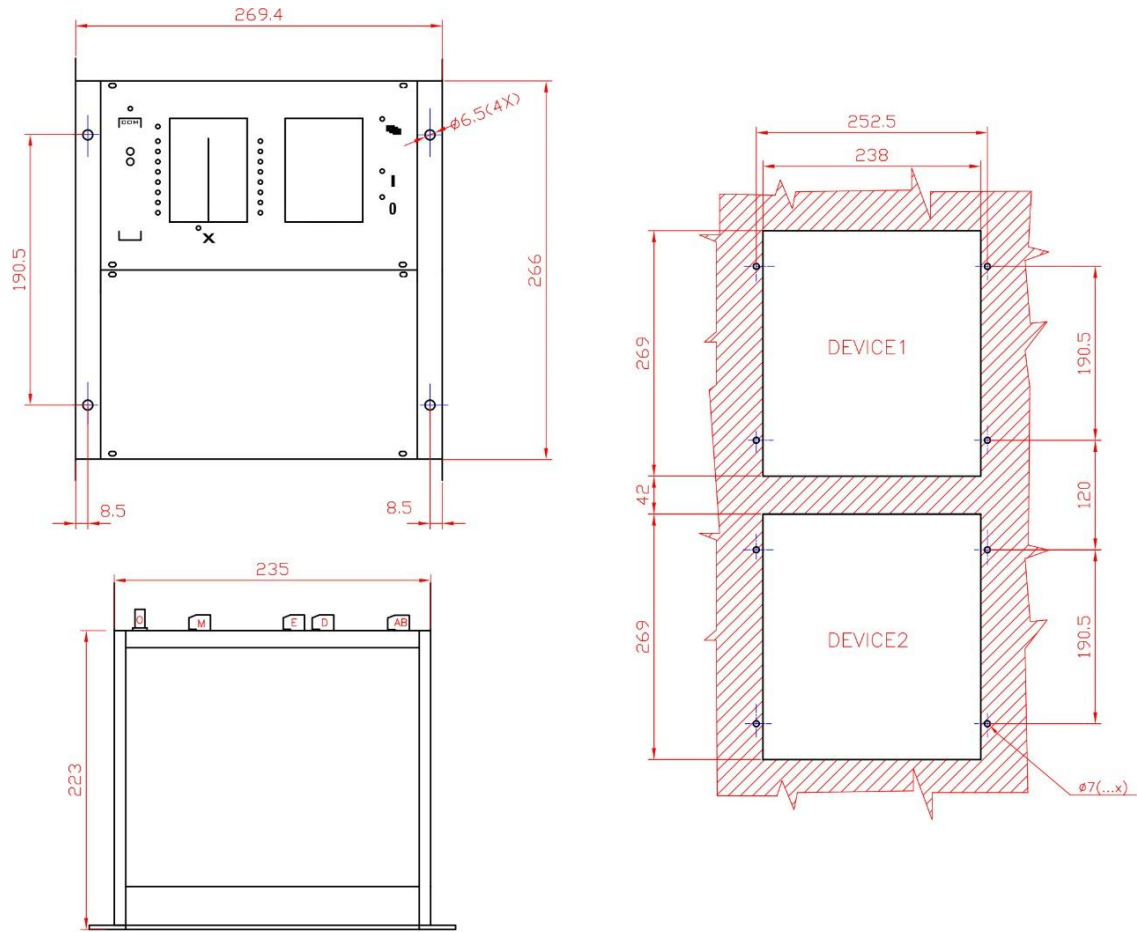


Figure 21-10 Dimensions for rack mounting of 42 HP double rack



### 1.1.22.3. Semi-flush mounting

Semi-flush mounting can be used for 84 HP and 42 HP single racks, for 24 HP panel instrument cases and for remote HMI devices. The purpose of this type of mounting alternative is to reduce the depth of the devices in the switchgear/rack if there is not enough space in that direction. To achieve this, a special mounting collar must be fit on the rack type devices. The default color of the mounting collar is grey (RAL 7035).

*The dimensions of the special mounting collars and the cut-outs for the 84 HP and 42 HP devices are also applicable for the same sized remote HMI devices.*

#### 1.1.22.3.1. Semi-flush mounting of 84 HP single rack

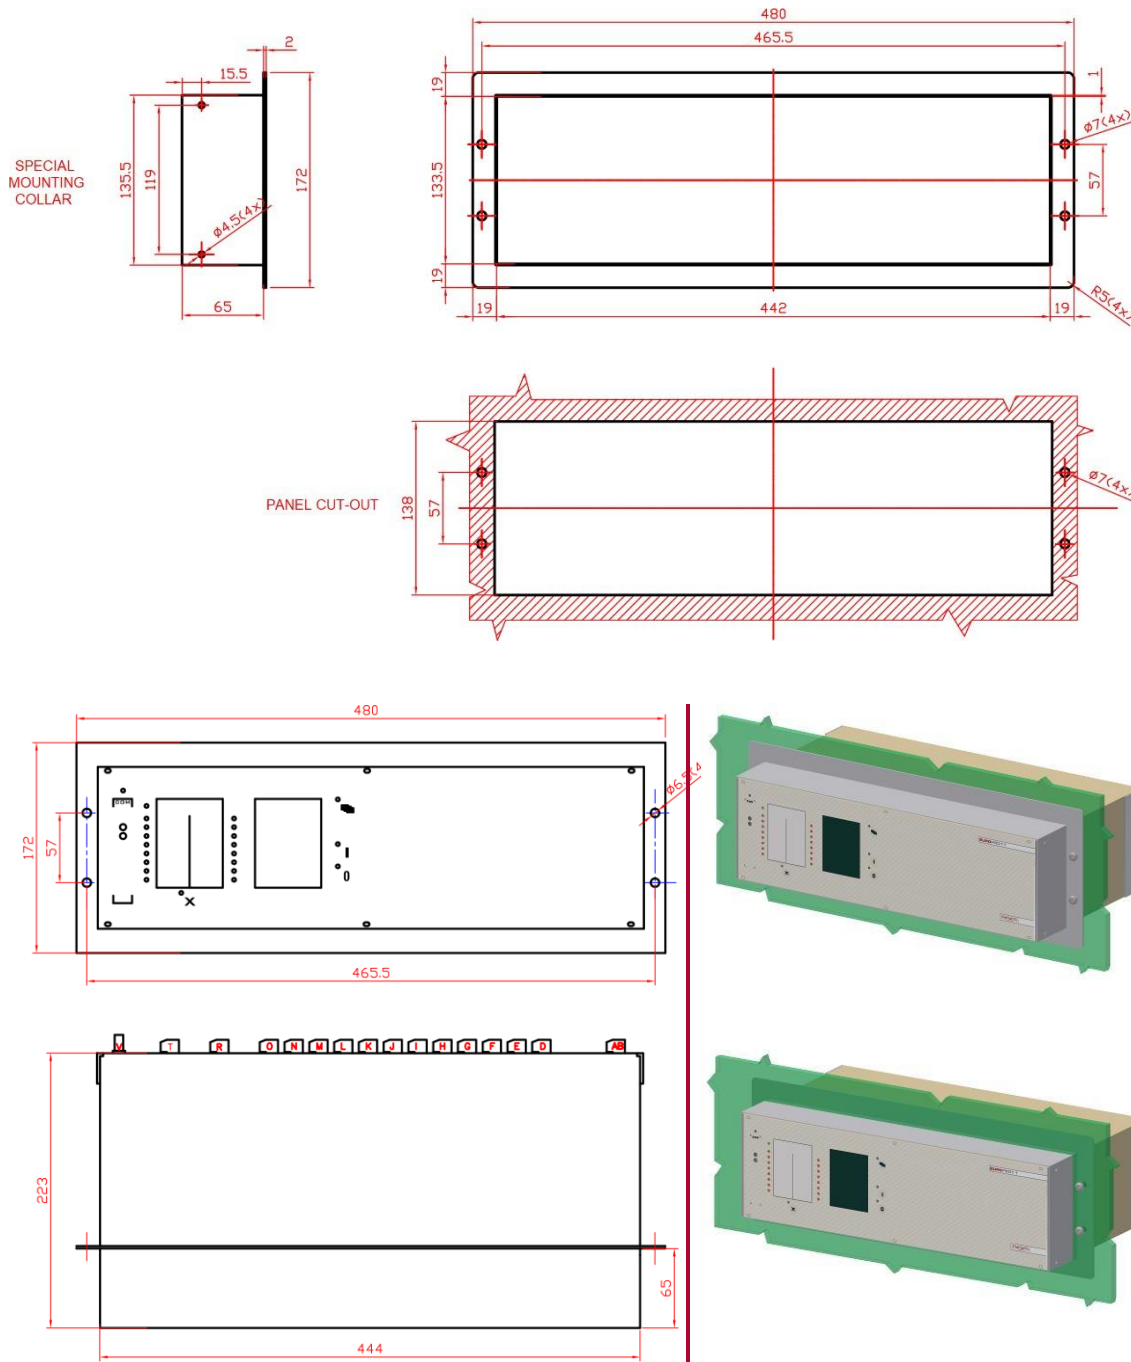


Figure 21-11 Dimensions for semi-flush mounting of 84 HP single rack with 3D illustration

### 1.1.22.3.2. Semi-flush mounting of 42 HP single rack


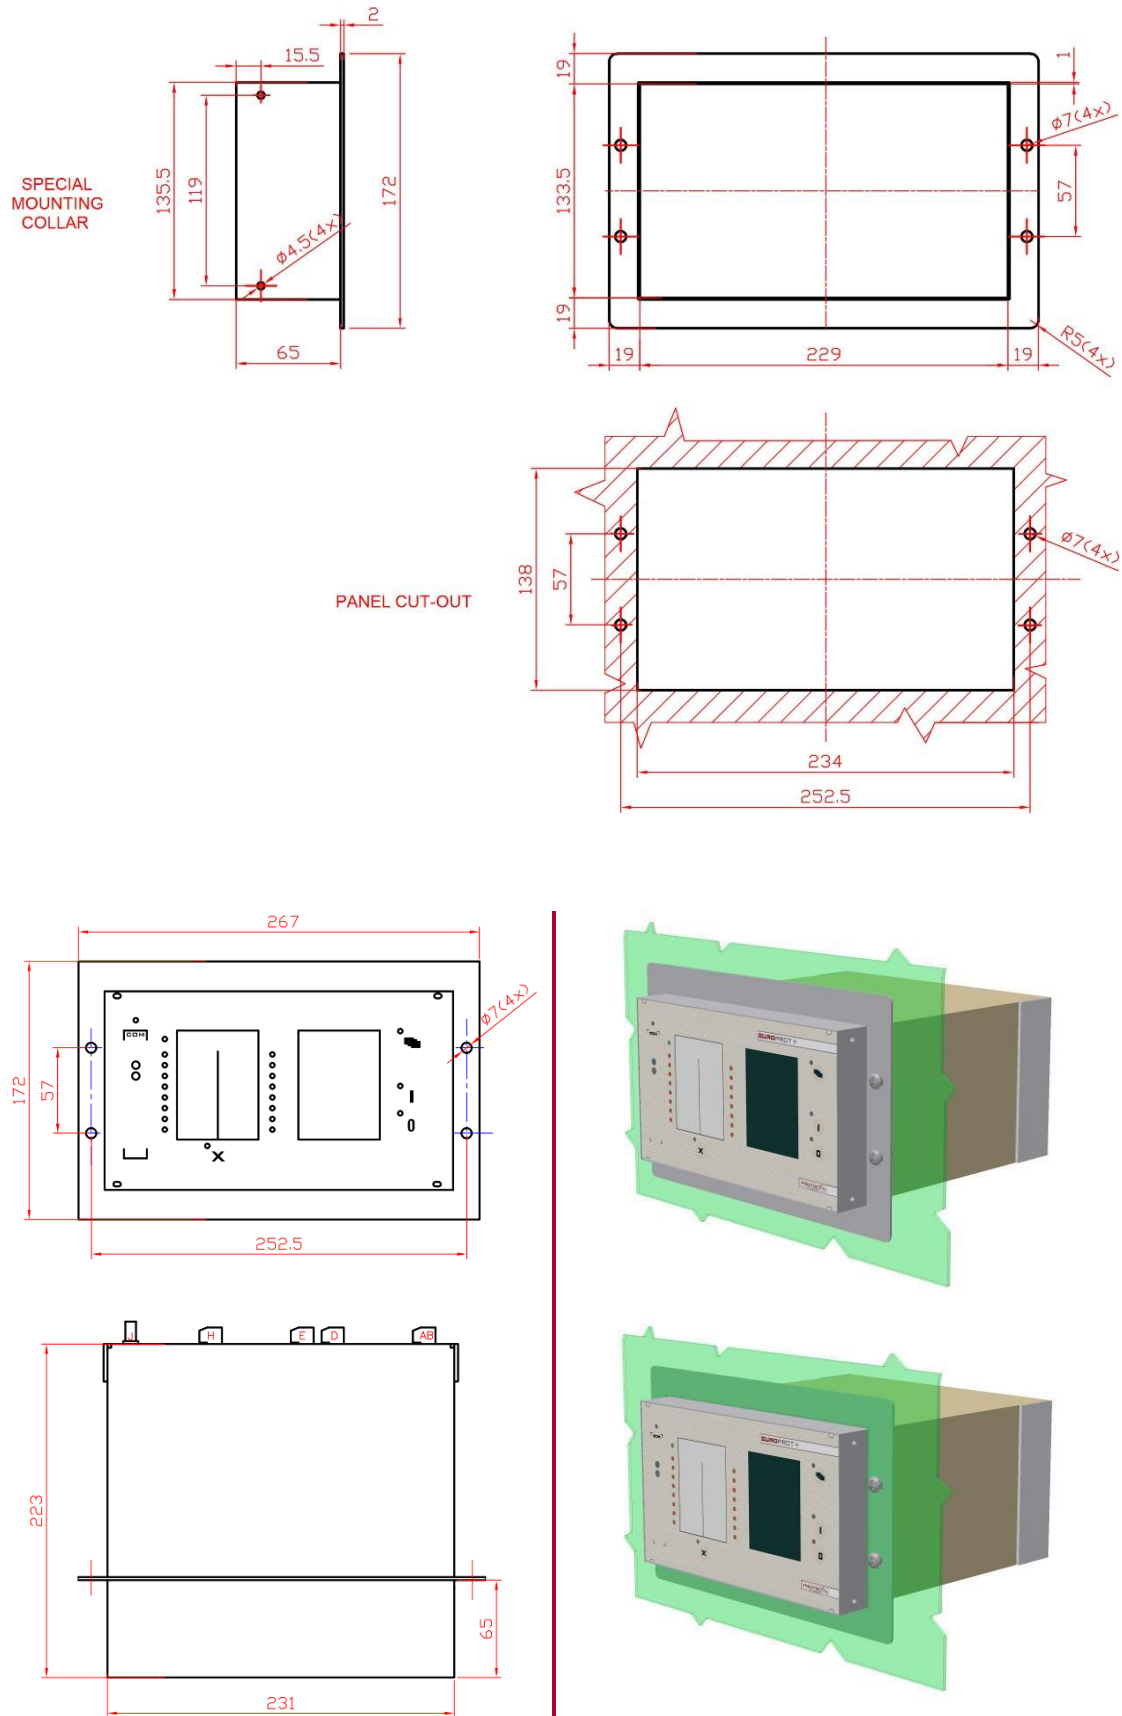


Figure 21-12 Dimensions for semi-flush mounting of 42 HP single rack with 3D illustration

### 1.1.22.3.3. Semi-flush mounting of 24 HP panel instrument case

The dimensions of the panel cut-out for this type of mounting method are the same as in case of flush mounting (138 mm x 138 mm). For semi flush mounting, it is enough to cut in two the fixing elements (with green colour in the 3D illustration below) and to make the assembly as shown in the pictures below.

Note that the IP54 front panel option cannot be utilized with this type of mounting.

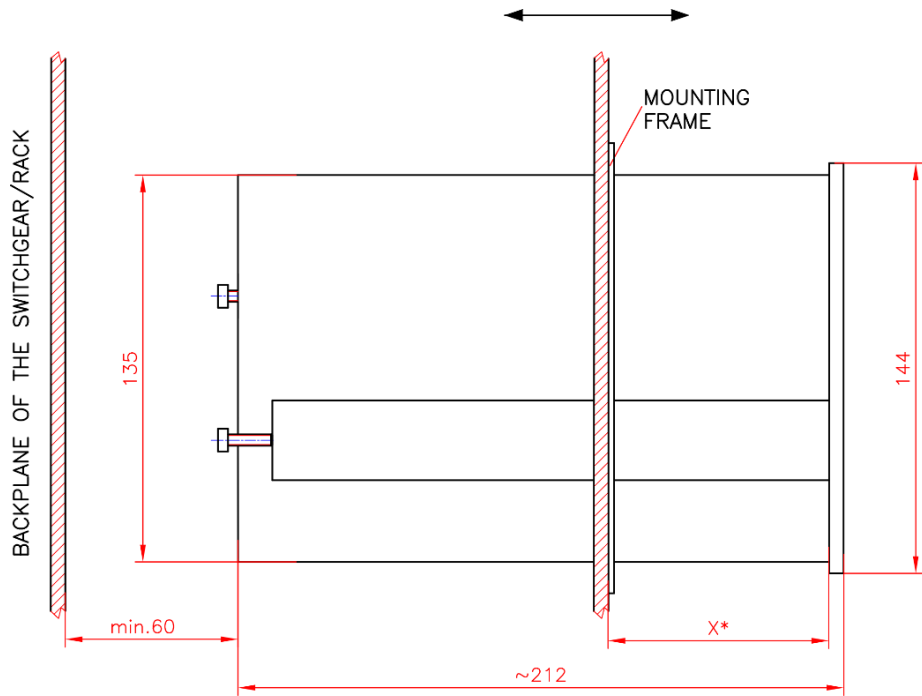

\*X: depending on the position of the cutting, the frame can be placed freely

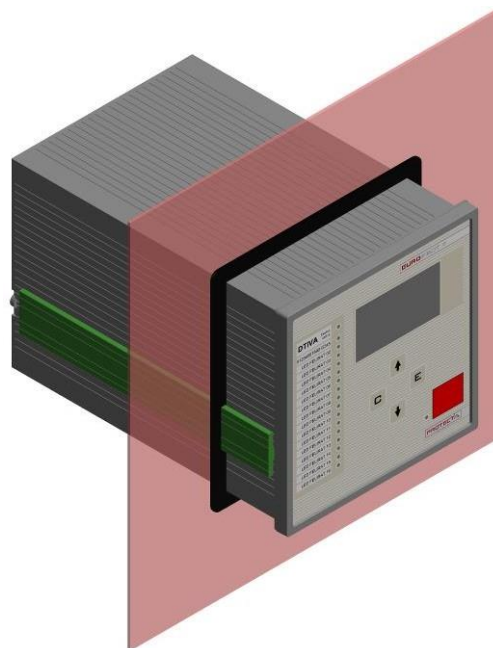


Figure 21-13 Dimensions for semi-flush mounting of 24 HP panel instrument case with 3D illustration

### 1.1.22.4. Wall mounting of 42 HP and 84 HP devices

Depending on the amount of the terminal contacts, it is possible to use both upper and lower terminals.

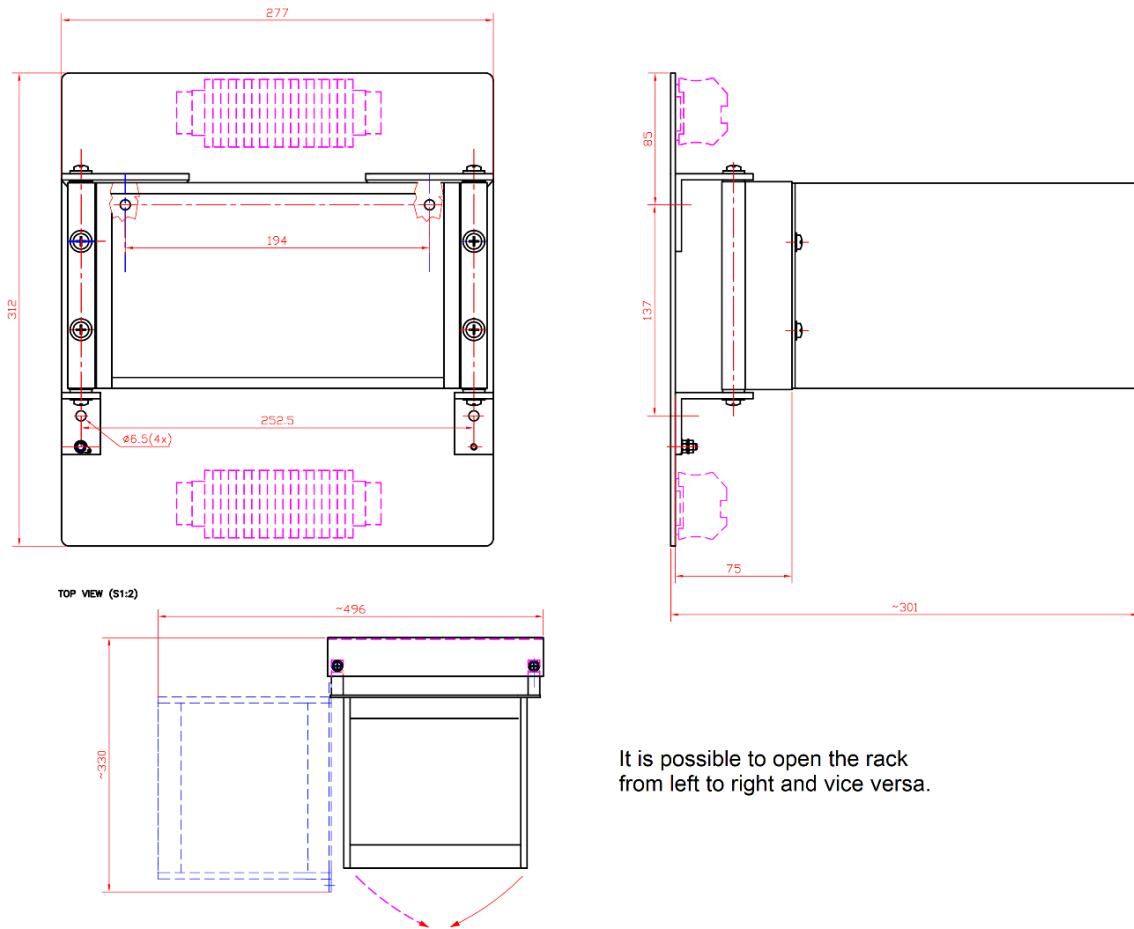


Figure 21-14 Dimensions for wall mounting of 42 HP devices (upper and lower terminals)

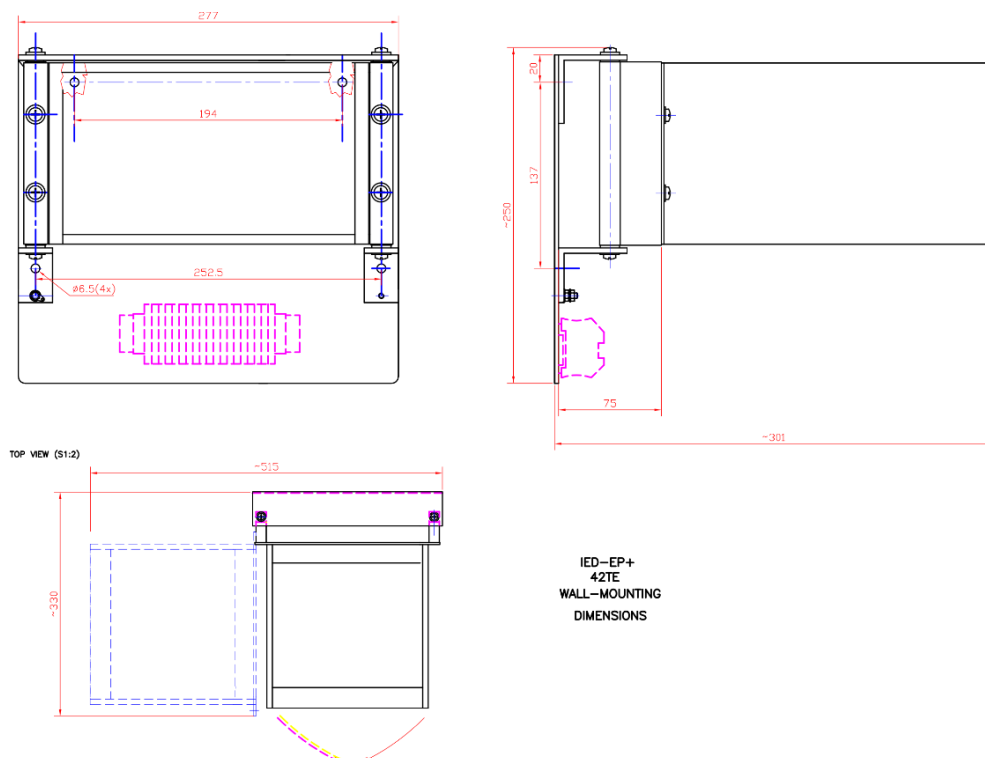


Figure 21-15 Dimensions for wall mounting of 42 HP devices (lower terminal only)

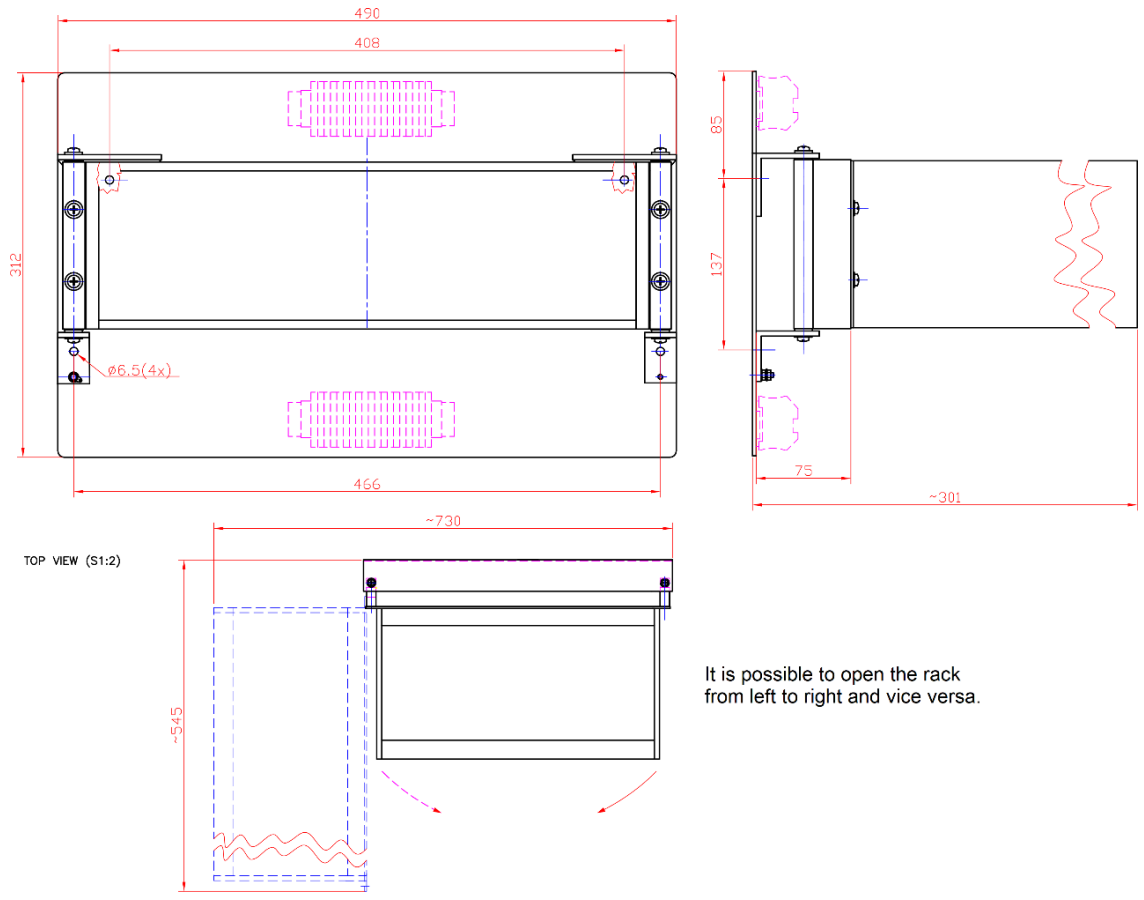


Figure 21-16 Dimensions for wall mounting of 84 HP devices (upper and lower terminals)

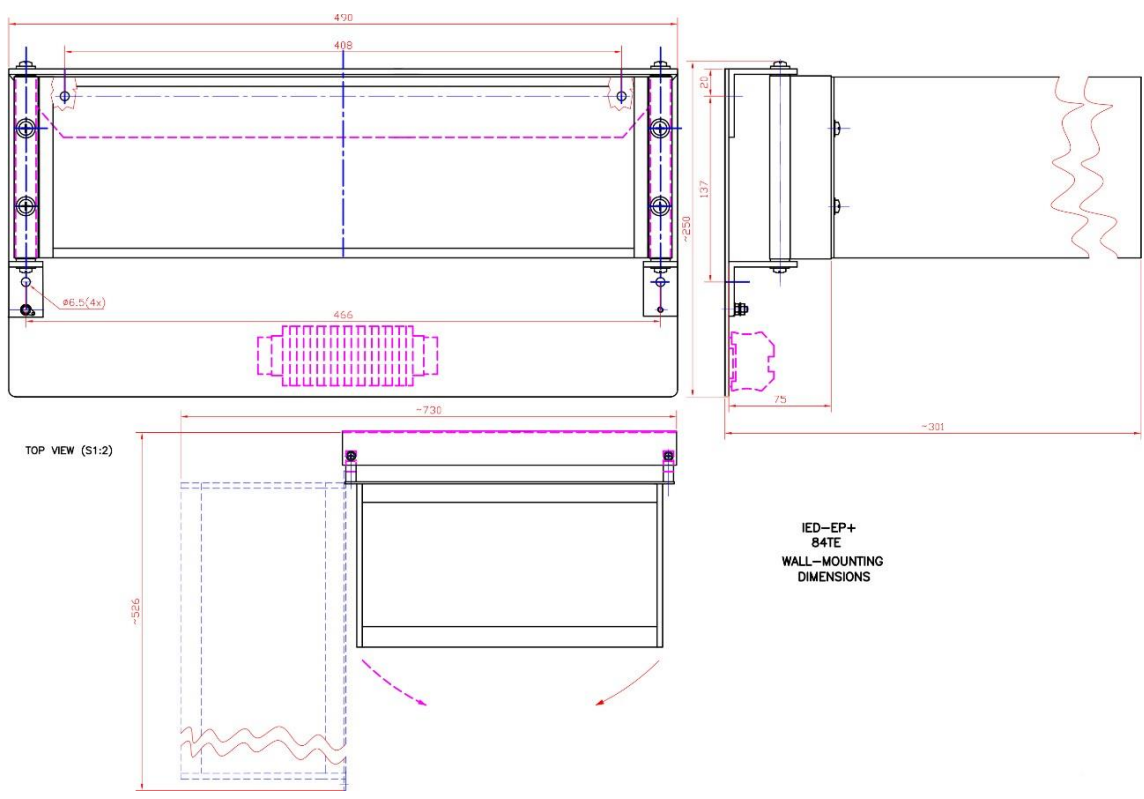


Figure 21-17 Dimensions for wall mounting of 84 HP devices (lower terminals only)

### 1.1.22.5. Din rail mounting of 24 HP panel instrument case

Note that the IP54 front panel option cannot be utilized with this type of mounting.


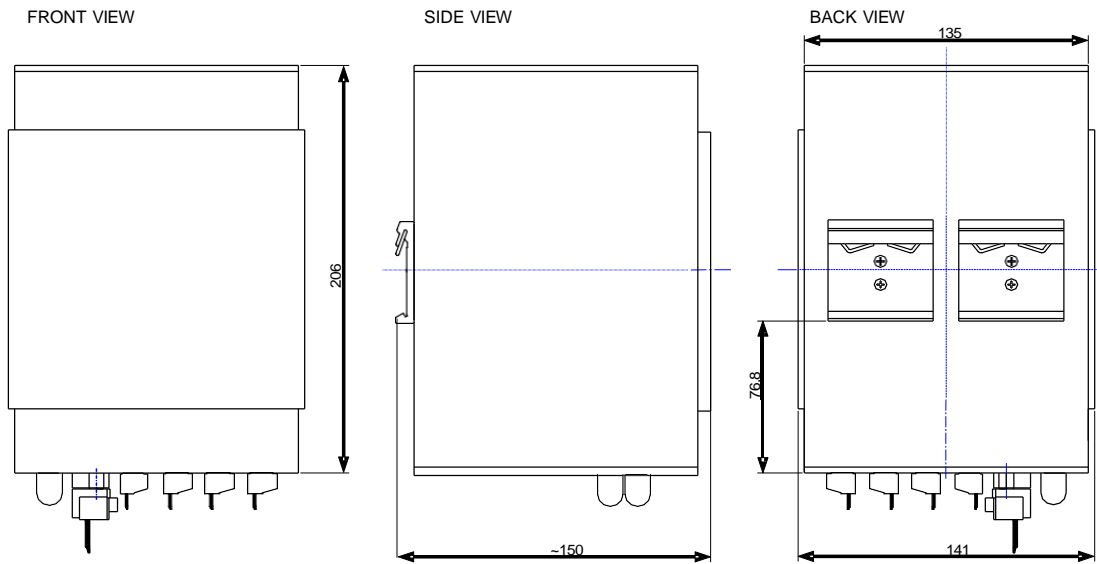


Figure 21-18 Dimensions for din rail mounting of 24 HP panel instrument case

### 1.1.22.6. IP54 rated mounting kit

The IP frame seen below provides IP54 protection from front side for 84HP and 42HP devices.

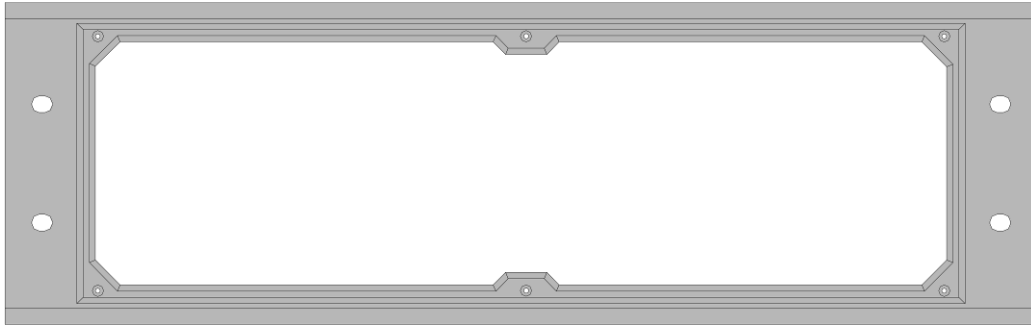


*Figure 21-19 84 HP IP frame front view*




*Figure 21-20 42 HP IP frame front view*

#### **S24 devices**

The S24 devices' front panel *does not differ from the normal front panel on the outside*, as there is IP54 gasket applied within the frame itself. Devices ordered with this option must be mounted by *flush mounting*; with other types of mountings (e.g. semi-flush), the IP54 protection is not guaranteed!

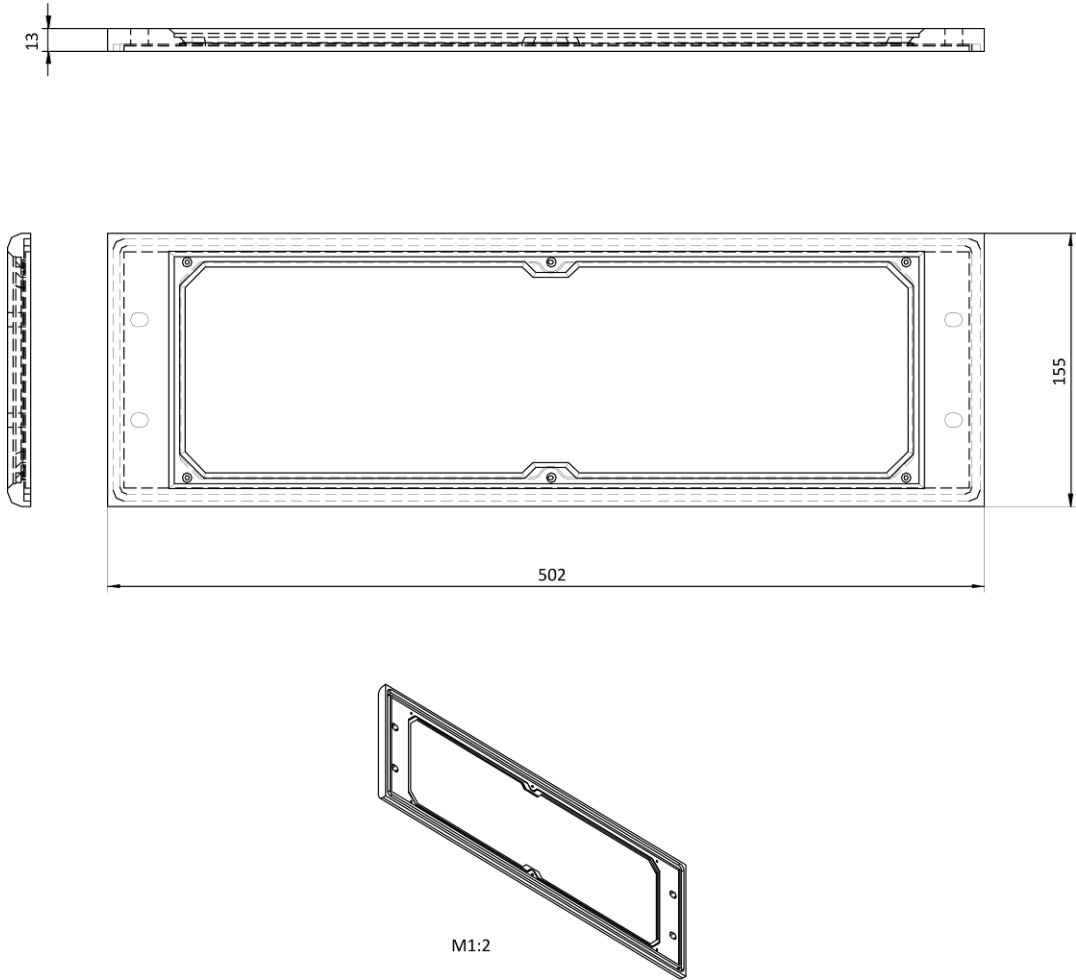

*Figure 21-21: 84 HP IP frame dimensions*

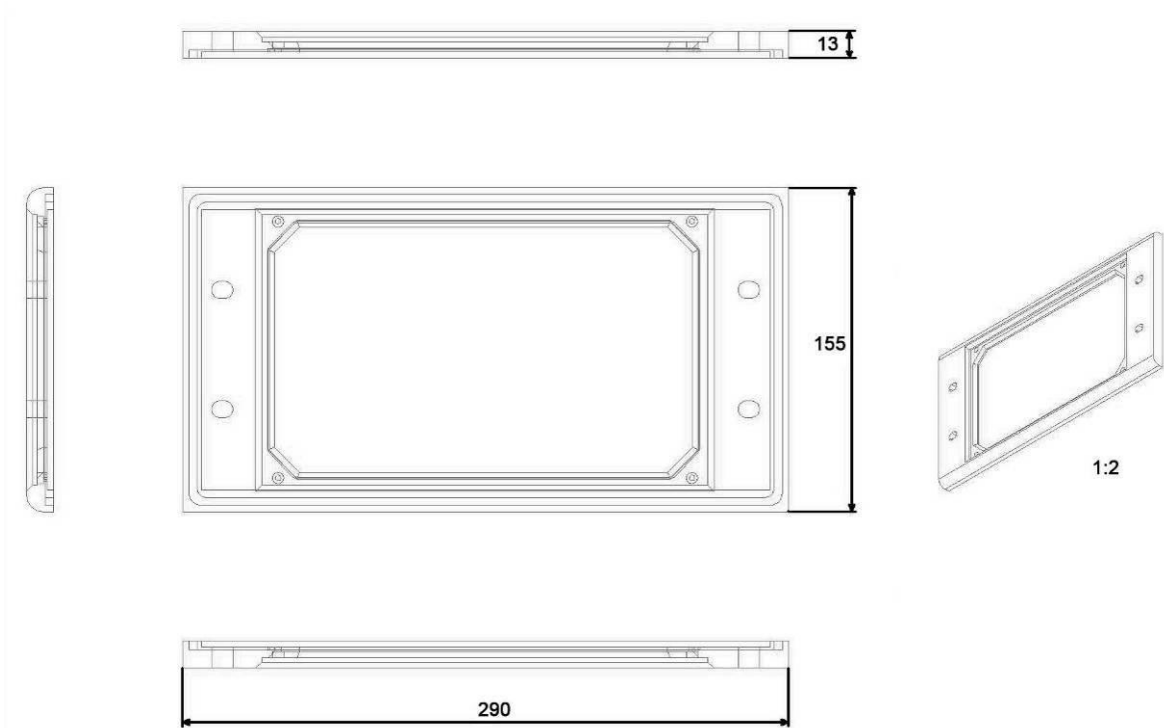

*Figure 21-22 42 HP IP frame dimensions*



## 1.1.22.7. Fold-down mounting

### 1.1.22.7.1. Fold-down mounting without terminals

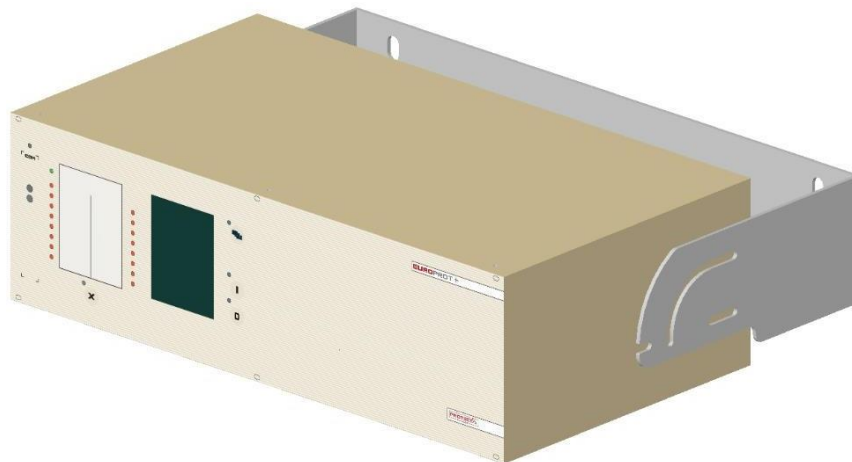
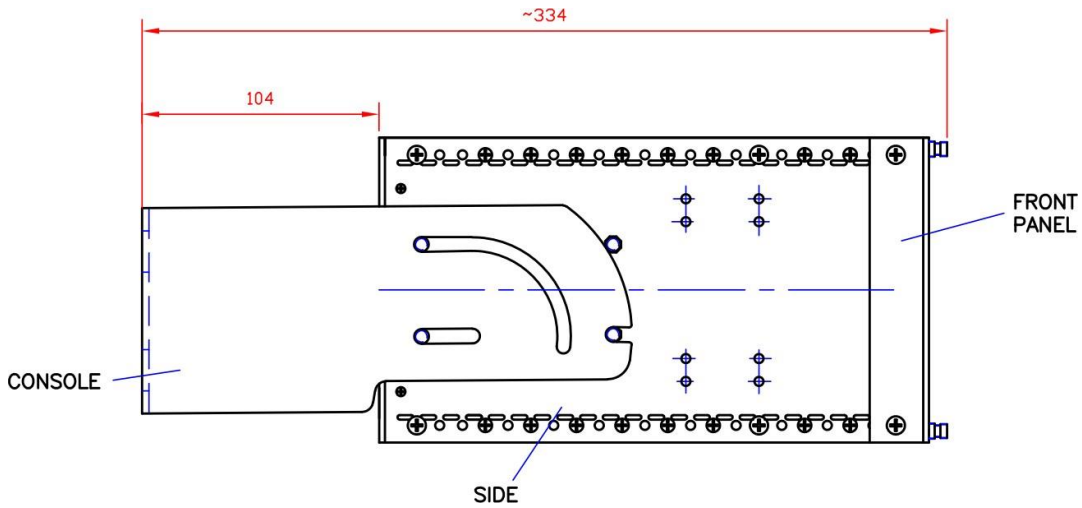
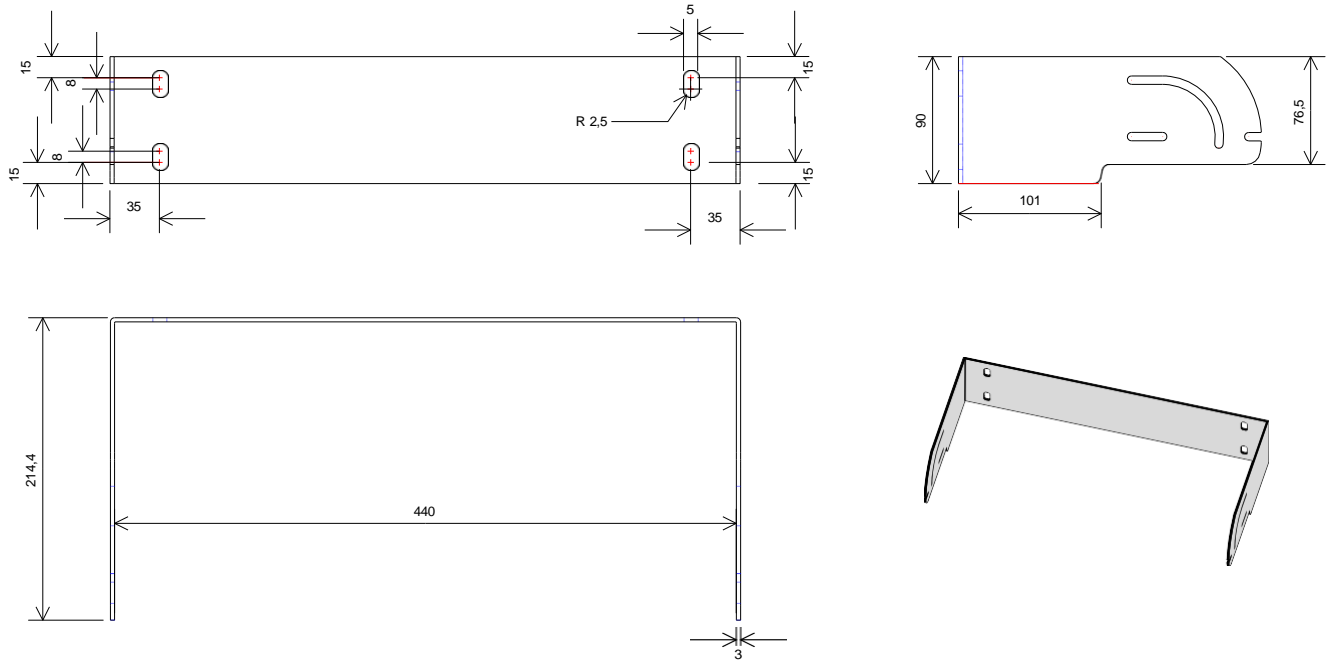


Figure 21-23 84 HP fold-down mounting

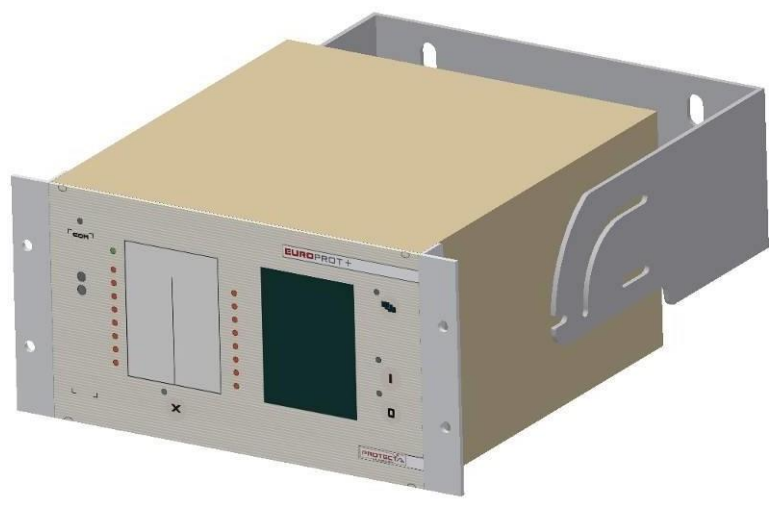
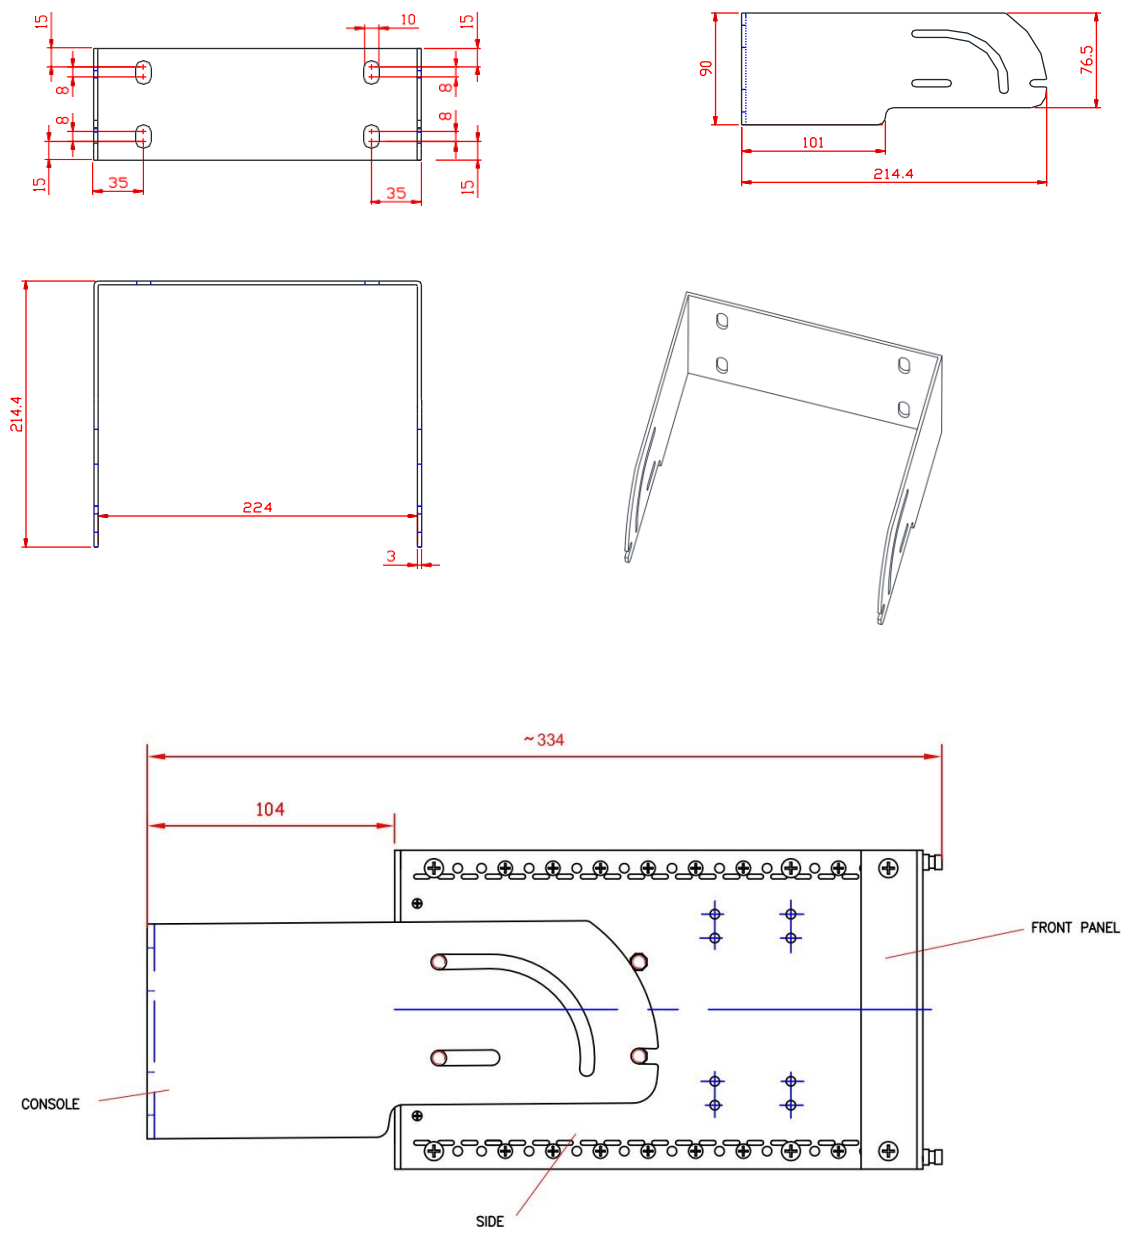


Figure 21-24 42 HP fold-down mounting

### 1.1.22.7.2. Fold-down mounting with terminals

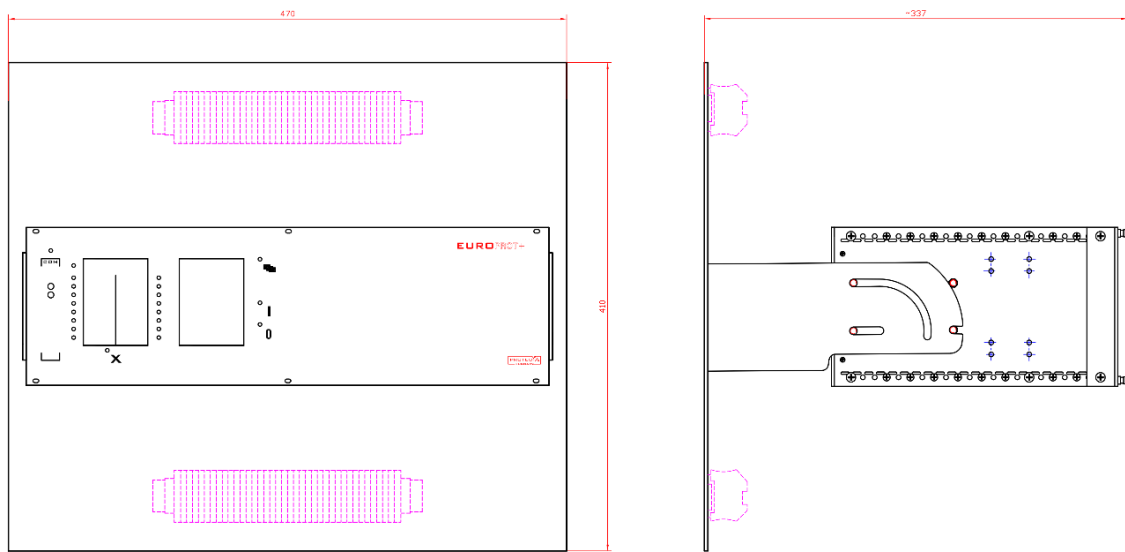


Figure 21-25 Fold-down mounting with terminals for 84HP devices

\*fastening points are customized


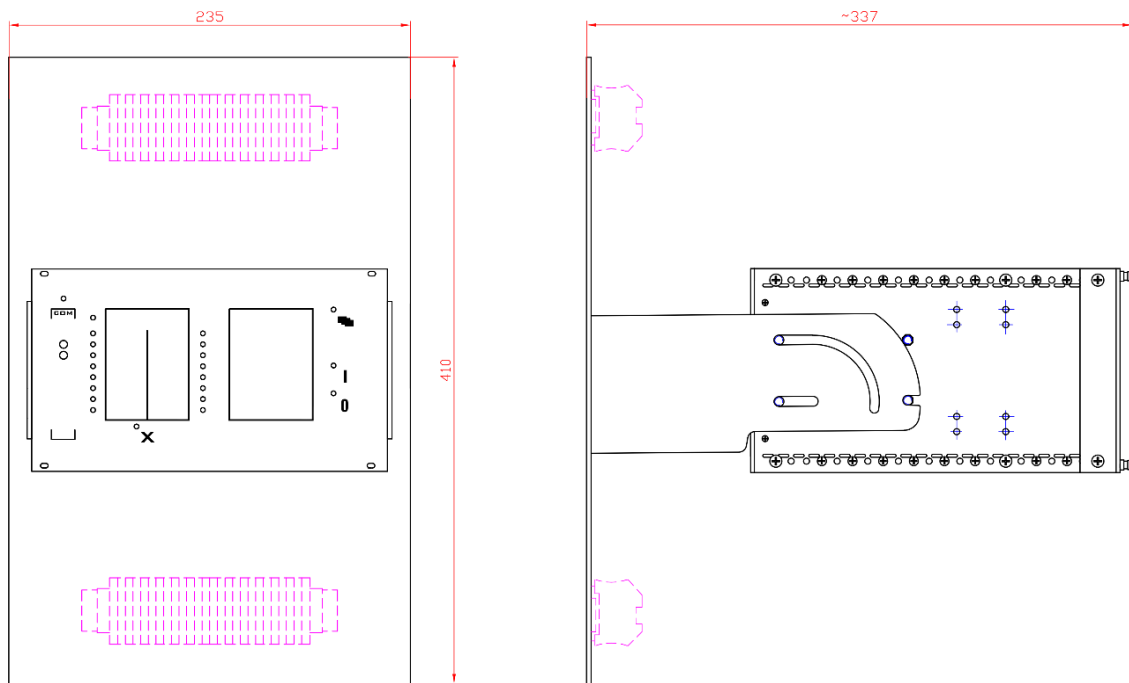


Figure 21-26 Fold-down mounting with terminals for 42HP devices

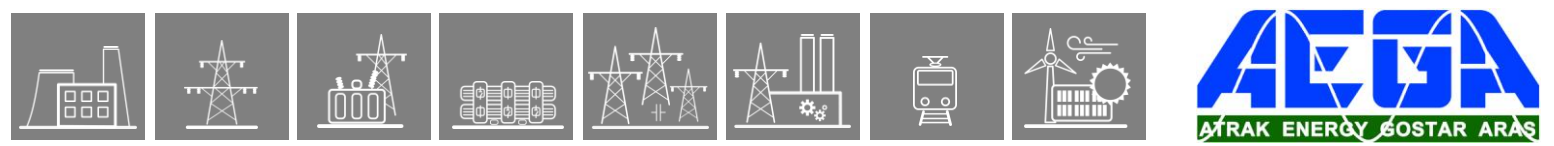

## 1.1.22.8. No mounting

“No mounting” means that the 84 HP and 42 HP devices do not have any mounting accessories on them.


This mounting method is only applicable if the device is for demonstration application.

For more information about this topic please contact our Application Team.  
([application@protecta.hu](mailto:application@protecta.hu))

**IMPORTANT**

The dimensions of the cut-outs applicable for the remote HMI are depending on which previously mentioned mounting method is used (flush mounting, semi-flush mounting or rack mounting).


**1.1.22.9. Remote HMI devices**

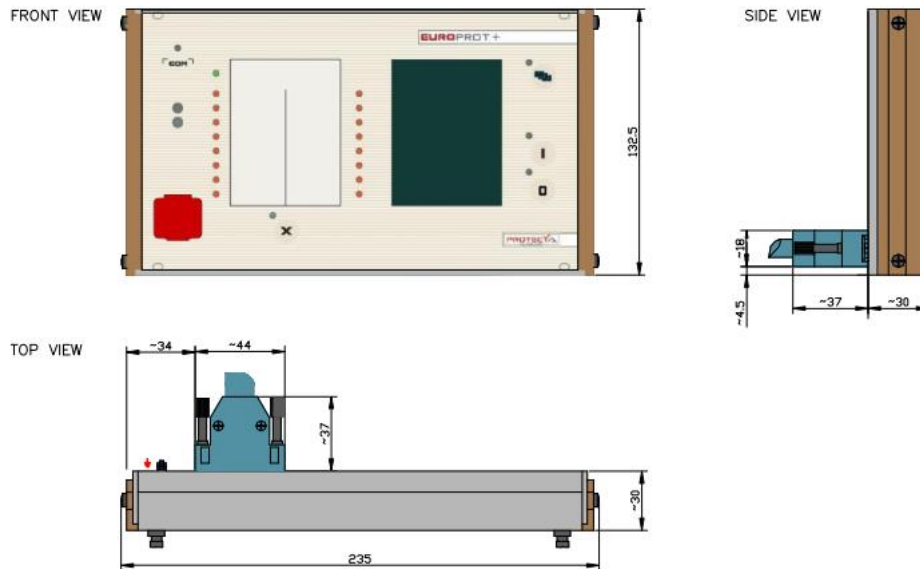

*Figure 21-27 Dimensions for 42 HP wide remote HMI*



*Figure 21-28 Dimensions for 84 HP wide remote HMI*

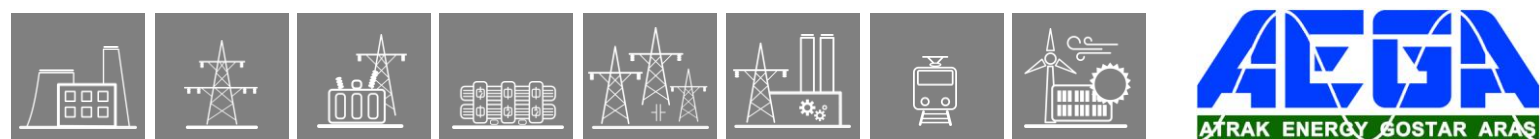

## 1.1.23. Product availability (special and obsolete modules)

In this chapter you can read a list of the modules that have not regular availability for any reason (being obsolete or being used only in special configurations).

### **Special modules:**

*These modules can be ordered in case of special applications which are indicated for each module at its description in the previous chapters.*

For more information about these devices please contact our Application Team. ([application@protecta.hu](mailto:application@protecta.hu))

### **Optional connectors:**

*The optional connectors are indicated at each module's description in the previous chapters. If a module is to be shipped with an optional connector, the issue must be discussed during ordering.*


MODULE TYPE	COMMENT	DATE
CPU+/0001	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1211	2013-06-12
CPU+/0002	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1111	2013-06-12
CPU+/0003	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1101	2013-06-12
CPU+/0004	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1201	2013-06-12
CPU+/0005	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1281	2013-06-12
CPU+/0006	Legacy CPU card, not recommended for new configurations. Replacement: CPU+1381	2013-06-12
CT+/1155	Available only for special configurations.	2013-06-12
CT+/5152	Available only for OGYD bay unit configurations.	2013-06-12
VT+/2215	Available only for special configurations.	2013-06-12
O12+/2101	Available only for demonstration applications.	2013-06-12
O12+/4201	Available only for demonstration applications.	2013-06-12
R4S+/01	Available only for special configurations.	2013-06-12
R4S+/16	Available only for special configurations.	2013-06-12
TRIP+/1101	Obsolete module. Not recommended for new designs.	2013-06-12
PS+/1602	Available only for special configurations.	2013-06-12
HMI+/2401	Obsolete module. Not recommended for new designs.	2014-10-06

<b>HMI+/2404</b>	Smart Line S24 special selection modules.	2014-10-06
<b>HMI+/2504</b>	Smart Line S24 special selection modules.	2014-10-06
<b>COM+/8882</b>	Available only for special configurations.	2014-10-06
<b>CT+/1111</b>	Available only for special configurations.	2014-10-06
<b>CT+/2500</b>	Available only for special configurations.	2014-10-06
<b>CT+/5153</b>	Available only for special configurations.	2014-10-06
<b>VT+/2212</b>	Available only for special configurations.	2014-10-06
<b>R8+/01</b>	Available only for special configurations.	2014-10-06
<b>R8+/A1</b>	Available only for special configurations.	2014-10-06
<b>R8+/C0</b>	Available only for special configurations.	2014-10-06
<b>R8+/FF</b>	Available only for special configurations.	2014-10-06
<b>R12+/4400</b>	Available only for special configurations.	2014-10-06
<b>R16+/0101</b>	Available only for special configurations.	2014-10-06
<b>R16+/0001</b>	Available only for special configurations.	2014-10-06
<b>R16+/A001</b>	Available only for special configurations.	2014-10-06
<b>PS+/4401</b>	Available only for special configurations.	2014-10-06
<b>CT+/2500</b>	Obsolete module. Not recommended for new designs. Replacement: CT+1500.	2015-02-13
<b>PSTP+/2102</b>	Available only for special configurations.	2015-06-23
<b>PSTP+/4202</b>	Available only for special configurations.	2015-06-23
<b>CT+/5111</b>	Available only for special configurations.	2015-12-08
<b>CT+/0101</b>	Available only for special configurations. DEFL earth fault protection only.	2018-03-19
<b>INJ+/0015</b>	Available only for special configurations.	2018-03-19
<b>CT+/5155</b>	Available only for special configurations.	2018-03-26
<b>VT+/2246</b>	Available only for special configurations.	2018-03-26
<b>AIC+/0201</b>	Obsolete module. Not recommended for new designs.	2018-03-26
<b>CT+/5111</b>	Obsolete module. Not recommended for new designs.	2018-03-27
<b>VS+/0031</b>	Obsolete module. Not recommended for new designs.	2018-05-25



<b>R1T+/0001</b>	Available only for special configurations. DMD.	2018-10-05
<b>CT+/5253</b>	Available only for special configurations.	2018-10-05
<b>42 HP housing</b>	The length of the 42 HP box has been reduced from 242 mm to 223 mm. For more information about the previous size of the 42 HP box please see the Figure 22-1.	2018-12-18
<b>AIC+/0200</b>	Obsolete module. Not recommended for new designs.	2019-04-08
<b>PS+/1030</b>	Available only for special configurations.	2020-05-07
<b>PS+/1060</b>	Available only for special configurations.	2020-05-07
<b>HMI+/5001</b>	Obsolete module. Not recommended for new designs.	2020-06-04
<b>HMI+/5002</b>	Obsolete module. Not recommended for new designs.	2020-06-04
<b>HMI+/3502 (for 42HP)</b>	Obsolete module. Not recommended for new designs.	2020-06-04
<b>CT+/1515</b>	Available only for special configurations.	2020-06-04
<b>CT+/5115</b>	Available only for special configurations.	2020-06-04
<b>CT+/5116</b>	Available only for special configurations.	2020-06-04
<b>CT+/5154</b>	Available only for special configurations.	2020-06-04
<b>PSF+/1001</b>	Available only for special configurations.	2020-06-04
<b>RTD+/0200</b>	Available only for special configurations.	2020-06-04
<b>RTD+/1200</b>	Available only for special configurations.	2020-06-04
<b>R4MC+/01</b>	Available only for special configurations.	2020-06-04
<b>PS+/4301</b>	Obsolete module. Not recommended for new designs.	2020-06-04
<b>84 HP housing</b>	The depth of the 84 HP box has been reduced from 242 mm to 223 mm. For more information about the previous size of the 84 HP box, see the Figure 22-1.	2021-04-01
<b>HMI+/3501</b>	Obsolete module. Not recommended for new designs.	2021-04-20
<b>HMI+/3502</b>	Obsolete module. Not recommended for new designs.	2021-04-20
<b>HMI+/5701</b>	Obsolete module. Not recommended for new designs.	2021-04-20
<b>HMI+/5702</b>	Obsolete module. Not recommended for new designs.	2021-04-20
<b>COM+/1202</b>	Obsolete module. Not recommended for new designs.	2021-04-20
<b>COM+/1324</b>	Obsolete module. Not recommended for new designs.	2021-04-29
<b>VT+/2212</b>	Obsolete module. Not recommended for new designs.	2021-05-06
<b>CT+/5154</b>	Obsolete module. Not recommended for new designs.	2021-05-06
<b>O16+/2401</b>	Obsolete module. Not recommended for new designs.	2022-03-22
<b>O16+/4801</b>	Obsolete module. Not recommended for new designs.	2022-03-22



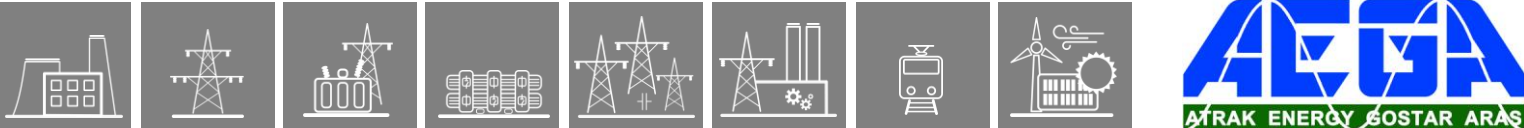

<b>O16+/1101</b>	Obsolete module. Not recommended for new designs.	2022-03-22
<b>O16+/2201</b>	Obsolete module. Not recommended for new designs.	2022-03-22

### 1.1.23.1. Previous 42HP and 84HP device housings

As of 2021. Q2, not only the 42HP, but the 84HP devices are shipped with shorter racks as well. Note that this is the only difference between the new and old housings. The new racks are shorter by 19 mm from the front, thus their depth is 223 mm instead of 242 mm.

The mounting methods described in Chapter 21 are valid for the previous racks as well, keeping in mind that the depth of the device is 19 mm bigger than that of the drawings. As an example, see the previous drawing of the flush mounting for 42HP and 84HP devices in Figure 22-1. As a comparison, the new, shorter rack is also drawn in **light blue**.

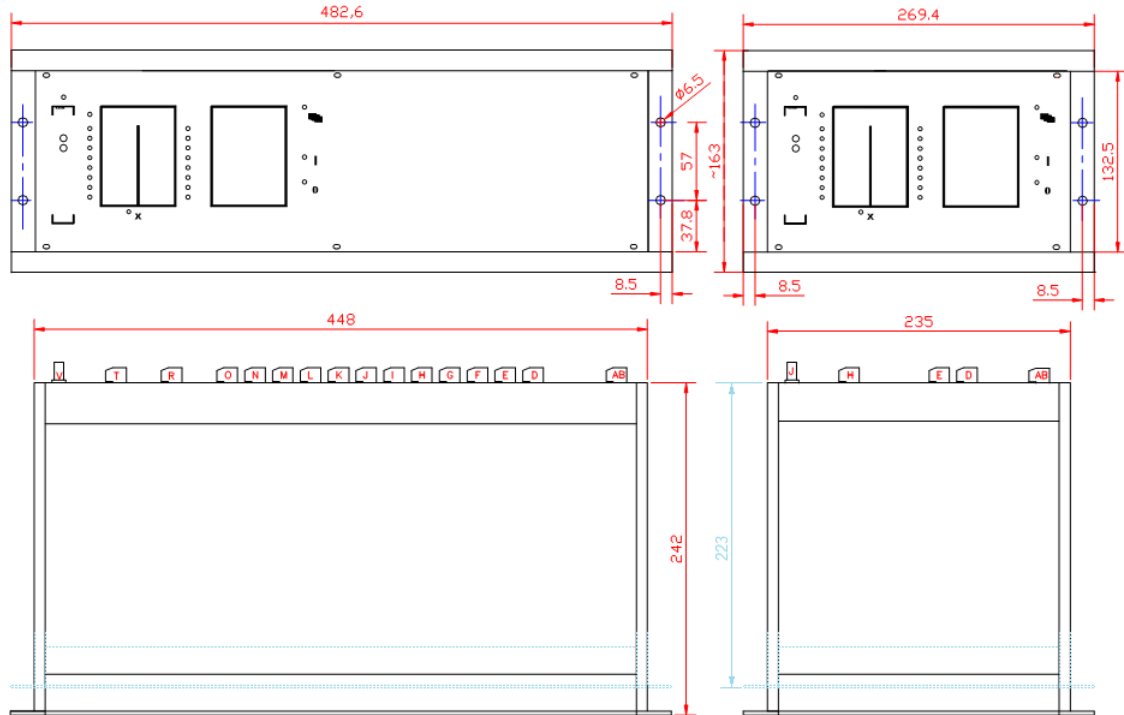


Figure 22-1 Dimensions for flush mounting of the previous 84HP and 42HP single rack, including the new (shorter) rack dimensions as well.

## 1.1.24. Remote I/O (RIO) server description

### 1.1.24.1. Introduction

Remote I/O (RIO) server is an IED, which provides remote binary inputs and outputs far from an EuroProt+ protection device.



Figure 1-1 Remote I/O device



Figure 1-2 Front view and rear view with fastening for mounting rail

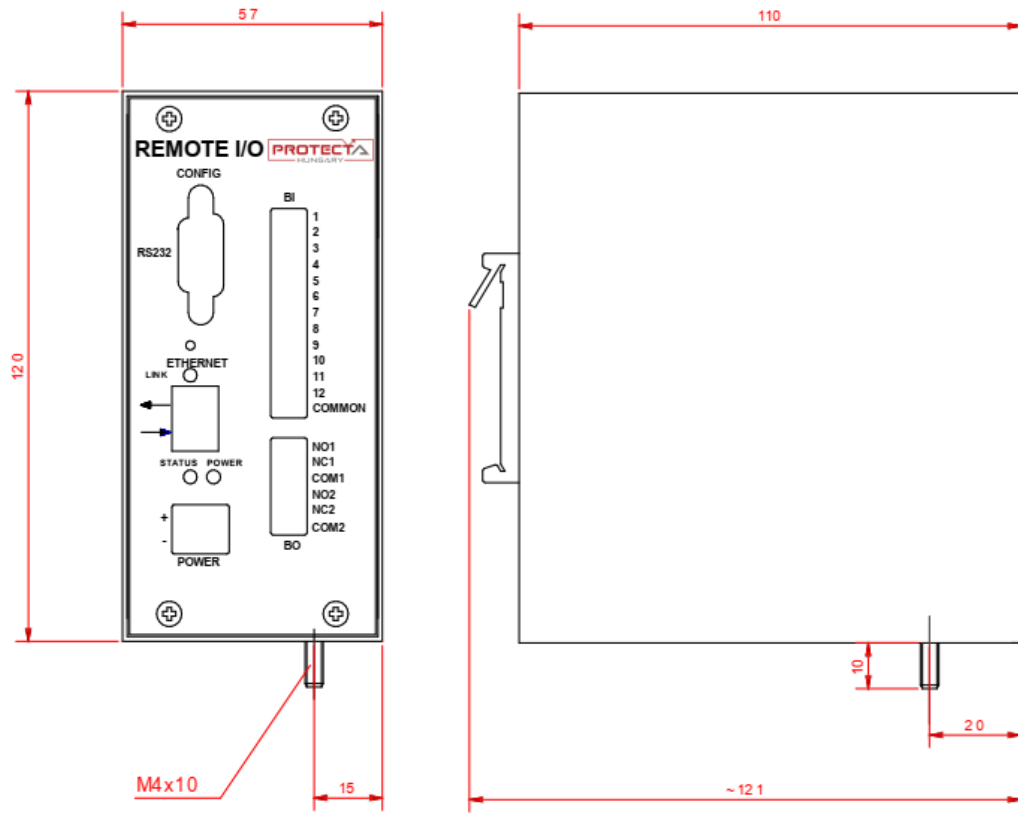


Figure 1-3 Remote I/O dimensions

## 1.1.24.2. Application

### 1.1.24.2.1. Connectors, LEDs

The connectors of the device are illustrated in the following figure.

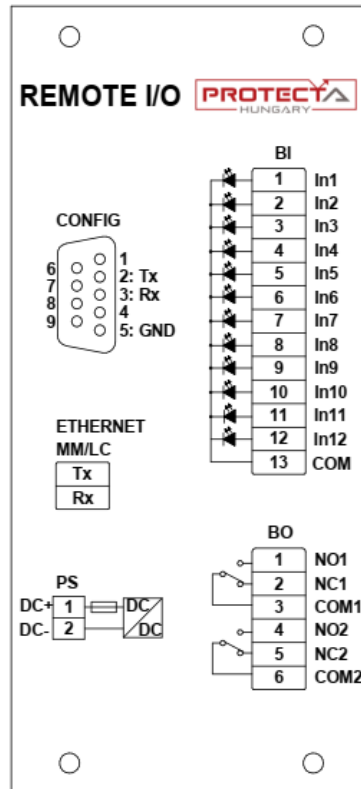


Figure 2-1 Connectors of the device

The RIO server has three LED indicators:

- **LINK**: located at the Ethernet connector; it shows active communication (green color)
- **POWER**: located above the power connector; it lights up if the device is operating (green color)
- **STATUS**: located also above the power connector. The behavior and color of this LED shows different situations:
  - Blinking **red**: there are no clients connected
  - Blinking alternatively **red-green**: the server has one client connected
  - Blinking **green**: two or more clients are connected

### 1.1.24.2.2. Wiring, usage

The device communicates with the EP+ device using the MODBUS/TCP protocol, via either of the COM+/1202, COM+/1324, COM+/1335, COM+/6603 or COM+/6663 modules.

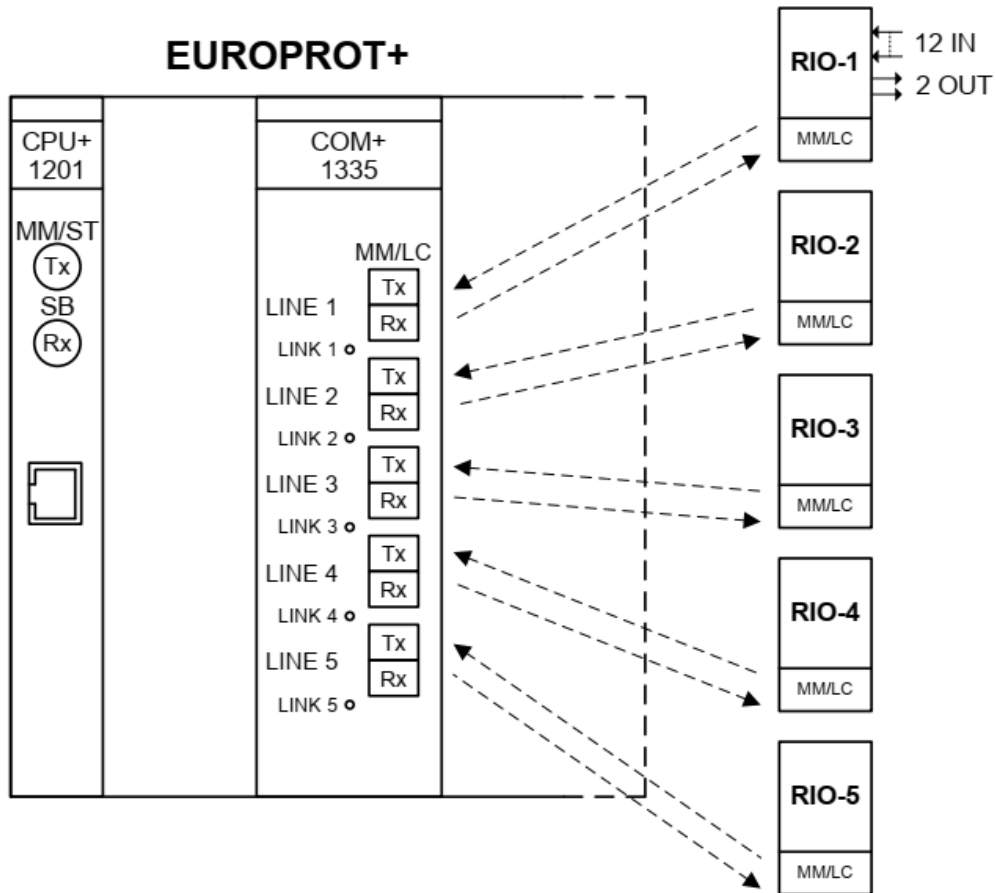


Figure 2-2 Wiring of the Remote I/O-s

The RIO inputs and outputs appear among the other binary inputs and outputs of the EuroProt+ device, and they can be utilized the same way.

### 1.1.24.3. Sub-modules

The RIO server consists of two mixed function modules:

- SCPU/PS: combination of a CPU and power supply module
- SO12/R2: binary I/O module with 12 inputs and 2 relay outputs

#### 1.1.24.3.1. SCPU/PS sub-module

The SCPU/PS module contains all the control, communication and the power supply functions of the device.

##### 1.1.24.3.1.1. CPU

*Table 3-1 Technical data of the RIO CPU*

CPU TYPE	ETHERNET INTERFACE	SERVICE PORT
<b>SCPU+0011</b>	MM/LC 1300 nm, 50/62,5/125 µm connector, 100Base-FX	RS232*

*\*The service port labeled "CONFIG" is only for factory usage*

##### 1.1.24.3.1.2. Power supply, external MCB

*Table 3-2 Technical data of the RIO power supply*

PS TYPE	INPUT VOLTAGE	NOMINAL POWER	INPUT VOLTAGE INTERRUPTION TIME	INRUSH CURRENT (< 0.1 s)	CONNECTOR TYPE
<b>PS+1101</b>	65-180 V DC	9 W	min. 140 ms @ 110 V DC input voltage	< 10 A	Weidmüller BLA 2/180
<b>PS+2301</b>	176 – 264 V DC 160 – 250 V AC	9 W	min. 50 ms @ 230 V AC input voltage	< 10 A	Weidmüller BLA 2/180

The power supply must be protected by an **external midget circuit breaker**. Note that it is not part of the RIO device:

- Characteristics: **6A C**

## 1.1.24.3.2. SO12/R2 sub-module

The SO12/R2 module contains 12 binary inputs in one grounding group, and 2 relay outputs with dry contacts.

### 1.1.24.3.2.1. Binary inputs

Main features:

- Digitally filtered per channel
- Current drain approx.: 2 mA per channel

*Table 3-3 Technical data of the binary inputs*

BI TYPE	CHANNEL NUMBER	TIME SYNC.	RATED VOLTAGE	THERMAL WITHSTAND VOLTAGE	CLAMP VOLTAGE	CONNECTOR TYPE
SO12+4801	12	-	48 V	72 V	falling 0.71 U <sub>N</sub> rising 0.76 U <sub>N</sub>	Weidmüller BL 3.5/13/180
SO12+1101	12	-	110 V	250 V	falling 0.7 U <sub>N</sub> rising 0.73 U <sub>N</sub>	Weidmüller BL 3.5/13/180

*Thermal withstand voltage: continuous with 60 % of the input channels energized.*

### 1.1.24.3.2.2. Binary outputs


Main features:

- Breaking capacity, (L/R = 40 ms) at 220 V DC: 0.2 A
- Breaking capacity, (L/R = 40 ms) at 110 V DC: 0.3 A

*Table 3-4 Technical data of the relay outputs*

BO TYPE	RATED VOLTAGE	CONTINUOUS CARRY	CONTACT VERSIONS	GROUP ISOLATION	CONNECTOR TYPE
R2+0001	250 V AC/DC	6 A	CO	2 independent	Weidmüller BL 3.5/6/180



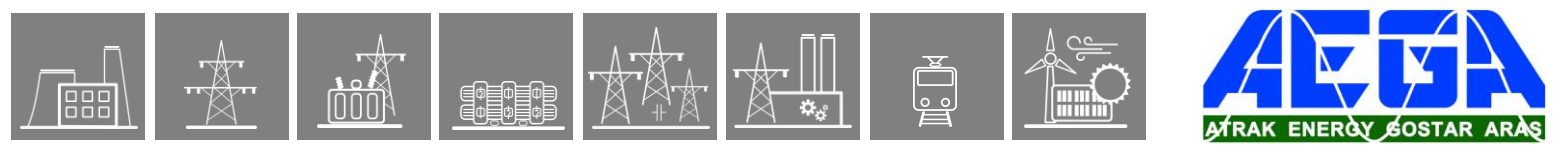

#### 1.1.24.4. General data

- Storage temperature: - 40 °C ... + 70 °C
- Operation temperature: - 20 °C ... + 55 °C
- Humidity: 10 % ... 93 %
- Altitude: up to 2000 m
- Atmospheric pressure: 86 ... 106 kPa

### 1.1.24.4.1. Standard conformance

- Electrostatic discharge immunity (ESD), IEC-EN 60255-26:2013, Level 4
  - Test voltages: 15 kV air discharge, 8 kV contact discharge
- Radiated, radio-frequency, electromagnetic field immunity, IEC-EN 60255-26:2013 Level 3
  - Test field strength: 10 V/m
- Electrical fast transient/burst immunity (EFT/B), IEC-EN 60255-26:2013, Level 4
  - Test voltage: 4 kV
- Surge immunity test, IEC-EN 60255-26:2013
  - Test voltages: 2 kV line-to-earth, 1 kV line-to-line
- Immunity to conducted disturbances, induced by radio-frequency fields, IEC-EN 60255-26:2013, Level 3
  - Test voltage: 10 V
- Damped oscillatory wave immunity test, IEC-EN 60255-26:2013
  - Test frequency: 1 MHz
  - Test voltage: 2.5 kV in common mode, 1 kV in differential mode
- Voltage dips, short interruptions and voltage variations immunity, IEC-EN 60255-26:2013
  - Voltage dips: 40 % (200 ms), 70 % (500 ms), 80 % (5000 ms)
- Ripple on d.c. input power port immunity, IEC-EN 60255-26:2013
  - Level 4, 15 % of rated d.c. value
- Power frequency magnetic field immunity test, IEC-EN 60255-26:2013, Level 5
  - Test field strength: 100 A/m continuous, 1000 A/m for 3 s
- Power frequency immunity test on the binary inputs, IEC-EN 60255-26:2013, Class A
  - Test voltages: 300 V in common mode, 150 V in differential mode
- Insulation tests, IEC-EN 60255-27:2013
  - Impulse voltage test
    - Test levels: 5 kV (1 kV for transducer and temperature measuring inputs)
  - Dielectric test
    - Test levels: 2 kV AC 50 Hz (0.705 kV DC for transducer inputs)
  - Insulation resistance
    - Insulation resistance > 15 GΩ
- Radiated emission, IEC-EN 60255-26:2013
 Limits:
  - 30 MHz to 230 MHz: 50 dB(μV/m) quasi peak, 3 m
  - 230 MHz to 1 000 MHz: 57 dB(μV/m) quasi peak, 3 m
  - 1 GHz to 3 GHz: 76 dB(μV/m) peak, 3 m
  - 3 GHz to 6 GHz: 80 dB(μV/m) peak, 3 m
- Conducted emission, IEC-EN 60255-26:2013
 Limits:
  - 0,15 MHz to 0,50 MHz: 79 dB(μV) quasi peak, 66 dB(μV) average
  - 0,5 MHz - 30 MHz: 73 dB(μV) quasi peak, 60 dB(μV) average
- Vibration, shock, bump and seismic tests on measuring relays and protection equipment
  - Vibration tests (sinusoidal), Class I, IEC 60255-21-1:1988
  - Shock and bump tests, Class I, IEC 60255-21-2:1988
  - Seismic tests, Class I, IEC 60255-21-3:1993

## 1.1.24.5. Mechanical data

### 1.1.24.5.1. General mechanical data

- Construction
  - Painted steel surface
- IP protection:
  - IP2x
- Size:
  - See Figure 1-3 for the device dimensions
- Weight:
  - 0.7 kg

### 1.1.24.5.2. Connectors

Table 5-1 Connectors on the RIO

CONNECTOR NAME	CONNECTOR TYPE	STRIP LENGTH [MM]	CONDUCTOR AREA [MM <sup>2</sup> ]	CONDUCTOR DIAMETER [MM]	TIGHTENING TORQUE [Nm]	MINIMUM BEND RADIUS*
<b>BLA</b>	Weidmüller BLA 2/180	7	0.2 – 1.5 solid: 0.2 – 2.5	0.5 – 1.4 solid: 0.5 – 1.8	0.4 – 0.5	3 × OD**
<b>BL 3.5</b>	Weidmüller BL 3.5/6/180 BL 3.5/13/180	6	0.2 – 1.5	0.5 – 1.4	0.2 – 0.25	3 × OD**
<b>PE FASTON TERMINAL</b>	TE Connectivity 6.3x0.8	7	min. 4	min. 2.3	-	3 × OD**

\* Bend radius is measured along the inside curve of the wire or wire bundles.

\*\* OD is the outer diameter of the wire or cable, including insulation.

The tightening torque of the screw for protective earth connection must be approx. 5 Nm.

During the installation, make sure that the shortest possible length for PE (Protective Earth) cable.

The minimum distance between the device and its wire channel must be at least 3 cm.


## 1.1.25. Technical notes on EOB interoperability

### 1.1.25.1. Description

We experienced some interoperability issues regarding front panel communication with EP+ devices. The link establishment procedure of the ethernet communication become unstable with certain type of NICs (Network Interface Card) of network devices. Network devices with 10/100Base-T speed support has no limitation but devices with 1000Base-T (called gigabit) may cause this link establishment failure. In this case the operating system periodically signals that interface is connected, then disconnected, then connected etc.

### 1.1.25.2. EOB Troubleshooting


- force NIC speed and mode to 10Base-T Full-duplex (setting method may depend on Your PC hardware configuration) on Your PC. Local Area Network settings can be found at:
  - WindowsXP: Control Panel/Network Connections/Local Area Connection
  - Windows 7: Control Panel\All Control Panel Items\Network and Sharing Center

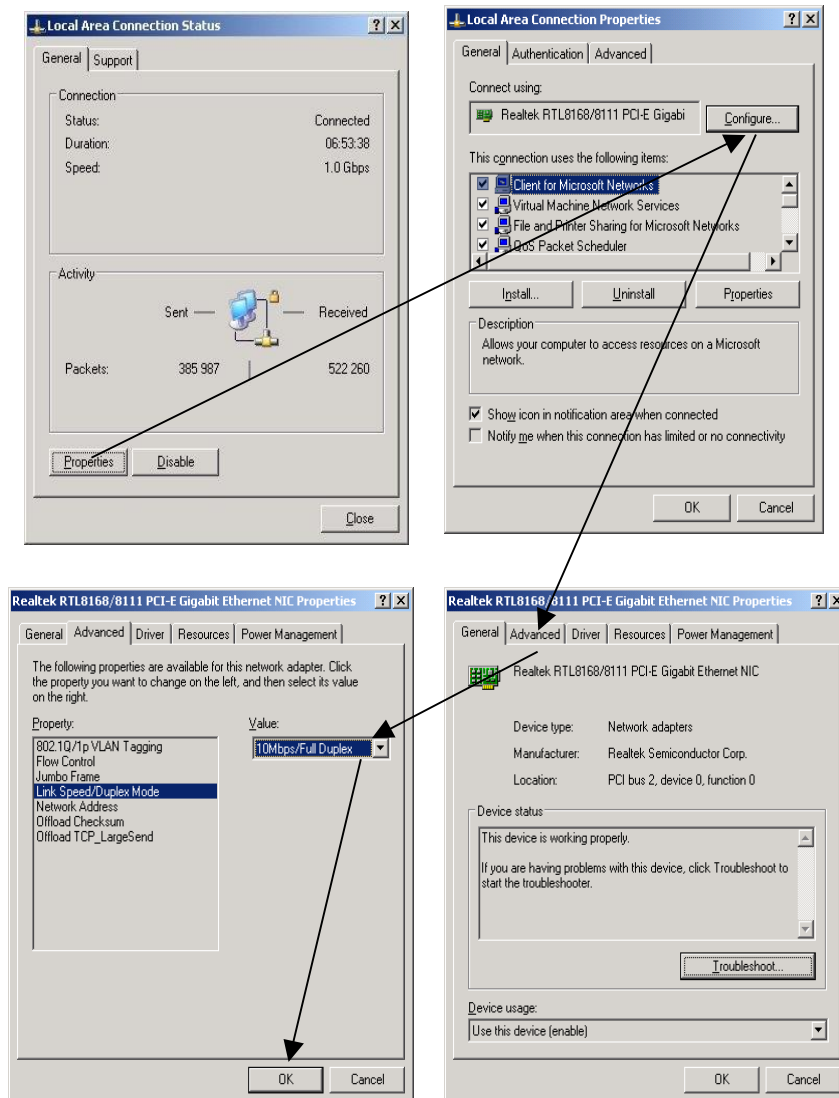


### 1.1.25.3. Workaround

- using station bus interface connector at the front panel of the CPU card
  - if the device equipped with 100Base-Fx station bus interface then You can connect Your computer via a third-party media converter unit
  - if the device equipped with 10/100Base-Tx station bus interface (RJ45) then connect Your computer directly to the EP+ via a crossed CATx cable

#### Service computer

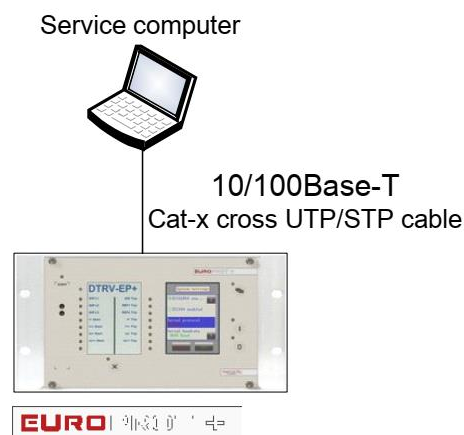

- using EOB at the HMI:
  - in case of unstable link with Your PC apply a third-party external 10/100Base-T switch with one port connected via EOB to the EP+ and other port connected to Your PC via a CATx cable.

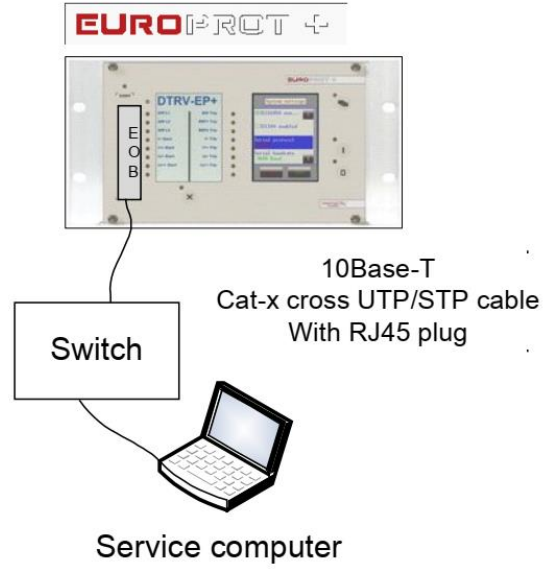

#### 1.1.25.4. Further details

For getting started guide and IP configuration download: [http://www.protecta.hu/epp-prelim/QuickStart/Quick\\_Start\\_Guide\\_V1.0.pdf](http://www.protecta.hu/epp-prelim/QuickStart/Quick_Start_Guide_V1.0.pdf)

## 1.1.26. EP+ Installation manual

### USED SYMBOLS

Symbols on devices:



Test voltage: 2 kV

 


Protective conductor terminal



Do not dispose of this device

Symbols in this document:



Caution, risk of electric shock




Caution, hot surface



Caution, refer to the documentation



Do not dispose of this device

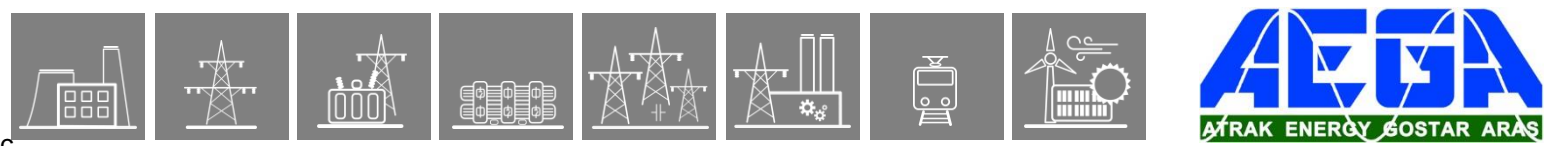

## 1.1.26.1. Introduction

This manual is intended to provide instruction for proper device installation, which includes mechanical mounting and electrical wiring. Furthermore, the information provided here will strongly support commissioning, maintenance, and deinstallation work as well. This document's targeted user groups are skilled electrical professionals executing installation works and commissioning with EuroProt+ devices.

Given that the EuroProt+ product family has a modular design, the instructions provided here can cover all configurations. Therefore, this manual shall be used in conjunction with the "EuroProt+ Hardware description" document, which includes essential information about all hardware components of the product.

## 1.1.26.2. Equipment handling

### 1.1.26.2.1. Unpacking

Inspect the package for transport damages. Carefully remove the packing material without applying excessive force.



## 1.1.26.2.2. Visual inspection

Identify the product by reading the order code. This can be found on the device nameplate located mostly on the right side of the device in the top right corner and shall be identical to your order.

*Picture 2-2 Device nameplate*



The protection device may have loose items packed in a different box based on the configuration. Check, that these items are also included in the shipment.

Visually inspect all unpacked items for damages, water ingress, or any sign of external impact. If you discover any transport damage, please notify Protecta Ltd. first and do not start any further work on the equipment.

## 1.1.26.2.3. Storage

If temporary storage is required before installation, please store the device in its original packing in a dry and clean place. The required environmental conditions can be found in the “General data” section of the “EuroProt+ Hardware description” document.

## 1.1.26.3. Mounting

### 1.1.26.3.1. Tools for mounting

The tools and screws necessary for mounting depend on the method of the mounting, see the “Mounting methods” section of the “EuroProt+ Hardware description” document.

Assuming the panel or cubicle is ready for installation of the device, screwdrivers matching the screws used, pliers, wrenches, etc. are necessary. For safety aspects, mechanical protective gloves shall be used to avoid injuries.

### 1.1.26.3.2. Environmental conditions

Make sure, that the mounting location fulfils environment requirements stated in the “General data” section of the “EuroProt+ Hardware description” document. The IP protection class of the device shall fit the surrounding environment at the place of installation. It is also important to have space around the device to support conventional cooling (See 3.3).

### 1.1.26.3.3. Mounting location

Before mounting the device make sure, that suitable space is available in the location of installation. Cutouts shall fit the device rack dimensions and it is recommended to leave 80mm free space behind the IED for the wiring.

The minimum distance between an EP+ device and its wire channel must be at least 3 cm. The minimum distance between a two EP+ devices must be at least 10 cm.

### 1.1.26.3.4. Mounting the device

The EuroProt+ product line utilizes different rack sizes and depending on that different mounting methods. An overview of the rack sizes with dimensions and mounting methods can be found in the “Mounting methods” section of the “EuroProt+ Hardware description” document.

During the installation make sure that the shortest possible length for PE (Protective Earth) cable routing is applied.

 
### 1.1.26.3.5. Safety aspects

#### 1.1.26.3.5.1. Earth connections

##### 1.1.26.3.5.1.1. Protective earth

The device shall be connected to the station earth system with a minimum of 2,5 mm<sup>2</sup> cross-section solid or stranded wire. A 6,3 mm (1/4 inch) female flat connector (according to IEC 61210) shall be used crimped to the earthing wire. During the installation make sure that the shortest possible length for PE (Protective Earth) cable routing is applied.

The earth connection of the device is situated at all kinds of Power supply modules. In the case of more Power supply modules, all of them shall be earthed.



The protective earth connections should not be removed when the equipment is energized.

*Picture 3-5-1-1 Earth connection point of the device at the Power supply module*



##### 1.1.26.3.5.1.2. Stranded wires

Soft soldering of stranded wires is not allowed due to the cold flow of the solder material.




Loose strands of stranded wires can cause fire risk or electric shock. Insulated crimp terminals shall be used.


### 1.1.26.3.5.1.3. Cable screen connection

The screen of the telecommunication cables connected directly to the device shall be terminated to the earthing connection point of the corresponding module.

*Picture 3-5-1-3 An example of the cable screen connection*

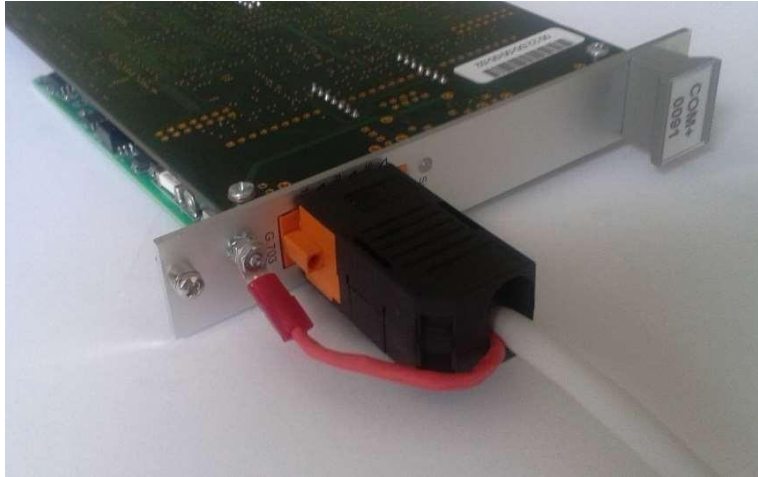

### 1.1.26.3.5.1.4. CT and VT circuits

 


The CT and VT circuits to be connected to the device shall be connected to the station earth system.

### 1.1.26.3.5.2. Connections of the device

 Before connecting the wires, make sure that all voltage levels correspond to the device ratings. It is particularly important by the power supply, trip and binary input, CT and VT module

Use only the connectors provided to the device or identical ones.



The CT connectors shall be fixed with screws provided. During the operation of the device, the CT connectors can be disconnected only after the CT circuits having short-circuited.


### 1.1.26.3.5.3. Optical ports



 Take adequate measures to protect your eyes and do not view directly into optical ports.

The fiber optics cables are vulnerable. Sharp bending can damage them. The minimum bending radius can be between 15 cm and 25 cm approximately, depending on the type and the material of the cable. For details see the datasheets of the fiber optics cables to be installed. The fiber shall not be twisted or bent. When connecting or disconnecting the cable always hold the connector, not the cable.

### 1.1.26.3.5.4. Removing and changing modules



Before removing and changing modules first the power supply voltage of the device shall be disconnected. Then all the energizing quantities connected to each module of the device shall be disconnected. Before removing the connectors of the CT modules, the CT circuits shall be short-circuited and disconnected.

The protective earth connection can be disconnected last if it is necessary (e.g. when removing a Power supply module).



The devices contain components that are sensitive to electrostatic discharges. ESD wrist strap shall be worn during any operations with modules.



Some of the modules can operate at high internal temperatures. Remove these modules carefully to avoid any burn injury. Take care of the possible high temperature at each module.



The modules have got sharp edges. Remove them carefully to avoid injury.

After changing a module, it shall be fixed with the screws provided with a torque of 0,5 Nm. Use Philips 2 screwdriver.

## 1.1.26.4. Wiring

### 1.1.26.4.1. Tools for connecting

Screwdrivers for the connectors: blade 0,6/3,5 mm, 0,4/2,5 mm.

Cutter, stripper, crimper tools to prepare the connecting end of the wires.

### 1.1.26.4.2. Connectors

The “Connectors” section of the “EuroProt+ Hardware description” provides information about the required conductor dimensions and connecting methods. The “Connectors” table shall be used together with the other sections describing the different modules.

### 1.1.26.5. Deinstallation and Repair

#### 1.1.26.5.1. Deinstallation



Before removing the device make sure, that all incoming power supply and control voltages are switched off. The earth connection of the device shall be disconnected last.

#### 1.1.26.5.2. Repair



Thanks to its modular design, many hardware problems can be fixed by replacing single modules. By executing this procedure note, that the printed board’s surface may get hot during normal operation.




In addition, attention shall be paid to the sharp edges of the modules to avoid minor injuries on the hand.

#### 1.1.26.5.3. Disposal




Removed IEDs shall be handed over to a local electronic waste handler for proper disposal and recycling.

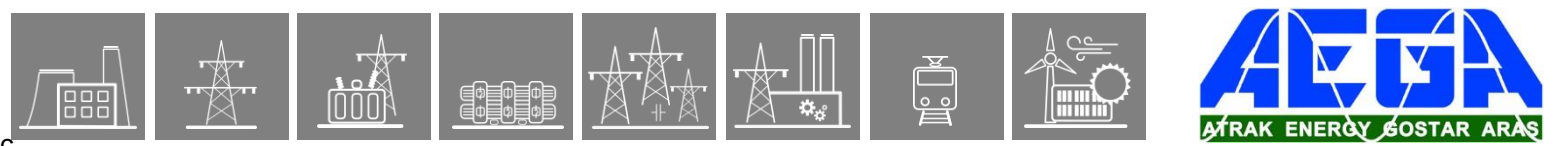

*Table 5-3 Disposal of the components and parts*

<b>IED</b>	<b>PARTS</b>	<b>MATERIAL</b>	<b>METHOD OF DISPOSAL</b>
<b>Enclosure</b>	Metal sheets, fastening elements	Aluminum, steel	Separation and recycling
<b>Modules</b>	Metallic parts, fastening elements	Aluminum, steel	Separation and recycling
	Mounted PC boards	Plastic, various electronic elements	Separation and recycling
	Connectors	Plastic, various metals	Separation and recycling
	Transformers, coils	Iron, copper, plastic, paper	Separation and recycling
	Relays	Iron, copper, plastic, other metals	Separation and recycling
<b>Package</b>	Box	Cardboard	Recycling
<b>Attachments</b>	Manuals, certificates	Paper	Recycling

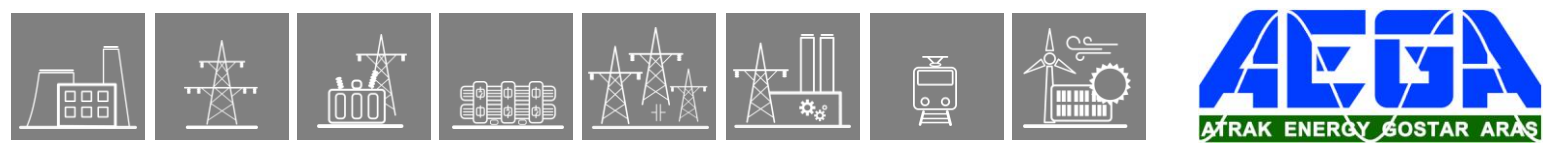

## 2. Function and I/O listing

The free slots for the options of the binary inputs and outputs are listed in the following tables. The default binary I/O module is the O6R5 module. The following modules can be chosen optionally.

Mixed I/O module:

- O6R5

Binary input modules:

- O8
- O12

Binary output modules:

- R8+/00
- R8+/C0
- R12+/0000
- R12+/4000
- R12+/4400

The configuration measures three phase currents, the residual current component and additionally three phase voltages and the busbar voltage. These measurements allow, in addition to the current- or voltage-based functions, directionality extension of the configured phase and residual overcurrent functions. It is intended to protect overhead line or cable networks. The choice of the functions is extended with the automatic reclosing function and synchrocheck. The configuration is designed to meet the requirements of a medium voltage field unit.

Based on the voltage measurement also the frequency is evaluated to realize frequency-based protection functions.

The configured protection functions are listed in Table 2-2.

*Table 2-1 Binary I/O options for each variant*

I/O MODULE	SLOT B	SLOT C	SLOT D	SLOT E
VARIANT 0	Default	Free	Free	Free
VARIANT 1	-	-	Default	Free
VARIANT 2	-	-	Default	Free
VARIANT 3	-	-	Default	Free
VARIANT 4	-	-	Default	Free
VARIANT 5	-	-	Default	Free
VARIANT 6	-	-	Default	Free
VARIANT 7	-	Free	Default	-

Table 2-2 Protection functions

PROTECTION FUNCTION	IEC	ANSI	VARIANT 0	VARIANT 1	VARIANT 2	VARIANT 3	VARIANT 4	VARIANT 5	VARIANT 6	VARIANT 7
DISTANCE PROTECTION	Z <	21				1				
OVEREXCITATION PROTECTION	V / Hz	24			1					
SYNCHROCHECK	SYN	25				1			1	
UNDERVOLTAGE PROTECTION	U <, U <<	27			2	1			2	
DIRECTIONAL OVERPOWER PROTECTION	P >	32				1				
DIRECTIONAL UNDERPOWER PROTECTION	P <	37				1				
UNDERCURRENT PROTECTION	I <	37		1						
NEGATIVE SEQUENCE OVERCURRENT PROTECTION	I <sub>2</sub> >	46		1	1	1	1	1		
NEGATIVE SEQUENCE OVERVOLTAGE PROTECTION	U <sub>2</sub> >	47			2	1				
MOTOR START-UP SUPERVISION		48								
LINE THERMAL PROTECTION	T >	49L		1	1	1		1		
MOTOR THERMAL PROTECTION	T >	49M		1						
BREAKER FAILURE PROTECTION	CBFP	50BF		1	1	1	1	2		
INSTANTANEOUS OVERCURRENT PROTECTION	I >>>	50		1	1	1	1	2		
RESIDUAL INSTANTANEOUS OVERCURRENT PROTECTION	I <sub>0</sub> >>>	50N		1	1	1	1	2		
PHASE OVERCURRENT PROTECTION	I >, I >>	51		2	2	2	2	2		
CAPACITOR UNBALANCE PROTECTION		51C		op.	op.					
RESIDUAL OVERCURRENT PROTECTION	I <sub>0</sub> >, I <sub>0</sub> >>	51N		2	2	1	2	2		
VOLTAGE DEPENDENT OVERCURRENT PROTECTION	I > U <	51V			1					
OVERVOLTAGE PROTECTION	U >, U >>	59			2	1			2	
RESIDUAL OVERVOLTAGE PROTECTION	U <sub>0</sub> >, U <sub>0</sub> >>	59N			2	1			2	
CAPACITOR OVERVOLTAGE PROTECTION		59C		op.						
CURRENT TRANSFORMER SUPERVISION		60		1	1	1	1	1		
VOLTAGE TRANSFORMER SUPERVISION		60			1	1				
STARTS PER HOUR	I <sup>2</sup> t	66		1						
DIRECTIONAL OVERCURRENT PROTECTION	I Dir >	67			2	2				
RESIDUAL DIRECTIONAL OVERCURRENT PROTECTION	I <sub>0</sub> Dir >	67N			2	2				
INRUSH DETECTION	I <sub>2h</sub> >	68		1	1	1	1	1		
VECTOR JUMP PROTECTION	ΔφU >	78			1					
AUTO-RECLOSE	0 → 1	79		1	1	1	1			
OVERFREQUENCY PROTECTION	f >, f >>	81O			2	2			2	
UNDERFREQUENCY DETECTION	f <, f <<	81U			2	2			2	
RATE OF CHANGE OF FREQUENCY PROTECTION	df/dt	81R			2	2			2	
GENERATOR/MOTOR DIFFERENTIAL PROTECTION	3I <sub>dG</sub> >, 3I <sub>dM</sub>	87G / 87M						op.		
LINE DIFFERENTIAL PROTECTION	3I <sub>dL</sub> >	87L					1			
RESTRICTED EARTH FAULT PROTECTION	REF	87N			op.			1		H
TRANSFORMER DIFFERENTIAL PROTECTION	3I <sub>dT</sub> >	87T						1		H*

op.: optional

H: high impedance differential protection

\*mutually exclusive option



### 3. Software configuration

#### 3.1. Protection functions

##### 3.1.1. Three-phase instantaneous Overcurrent Protection

###### 3.1.1.1. Application

The instantaneous overcurrent protection function operates according to instantaneous characteristics, using the three sampled phase currents. The setting value is a parameter, and it can be doubled by graphic programming of the dedicated input binary signal.

The basic calculation can be based on peak value selection or on Fourier basic harmonic calculation, according to the parameter setting. When Fourier calculation is selected then the accuracy of the operation is high, the operation time however is above one period of the network frequency. If the operation is based on peak values, then fast sub-cycle operation can be expected, but the transient overreach can be high.

###### 3.1.1.1.1. Operating Characteristics

$$t(I) = t_{OP} \text{ when } I > I_S$$

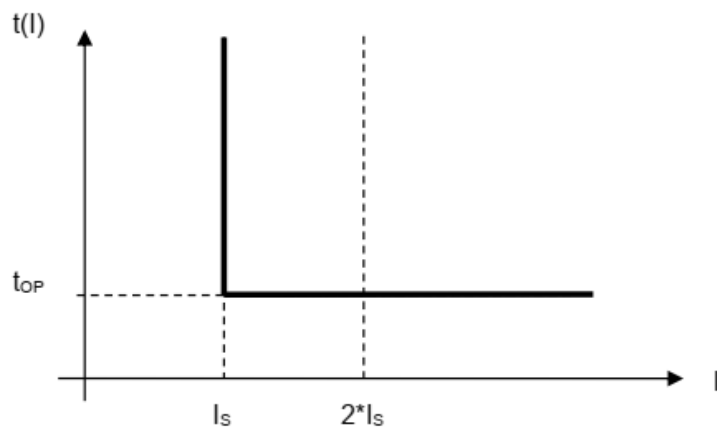


Figure 1-1 Overcurrent independent time characteristic

where:

- $t_{OP}$  (sec.)      theoretical operating time if  $I > I_Gs$  (without additional time delay),
- $I$                       measured value of the characteristic quantity, peak values or Fourier base harmonic of the phase currents,
- $I_s$                       setting value of the characteristic quantity (*Start current*)

### 3.1.1.1.2. Structure of the Protection Algorithm

Figure 1-2 shows the structure of the instantaneous overcurrent protection (IOC50) algorithm.

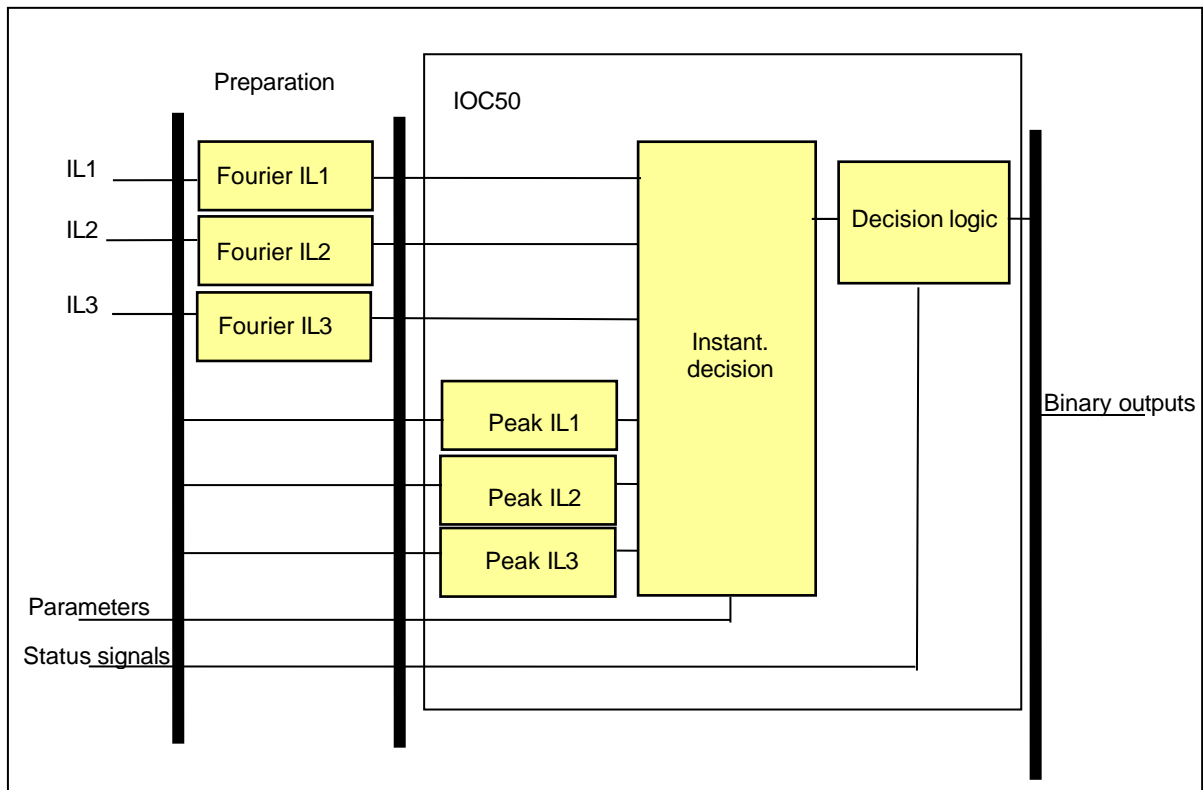


Figure 1-2 Structure of the instantaneous overcurrent protection algorithm

The **inputs** are

- the sampled values of three phase currents,
- the RMS values of the fundamental Fourier component of three phase currents,
- parameters,
- status signals.

The **outputs** are

- the binary output status signals.

The **software modules** of the three-phase instantaneous overcurrent protection function are:

#### **Fourier calculations**

These modules calculate the RMS values of the fundamental Fourier component of three phase currents individually (not part of the IOC50 function).

#### **Peak selection**

These modules select the peak values of the phase currents individually.

#### **Instantaneous decision**

This module compares the peak value or the Fourier basic harmonic components of the phase currents with the setting value.

#### **Decision logic**

The decision logic modules generate the trip command of the function.

### 3.1.1.1.3. The Fourier Calculation (Fourier)

The following description explains the details of the individual components.

These modules calculate the RMS values of the fundamental Fourier component of the three phase currents individually. They are not part of the IOC50 function; they belong to the preparatory phase.

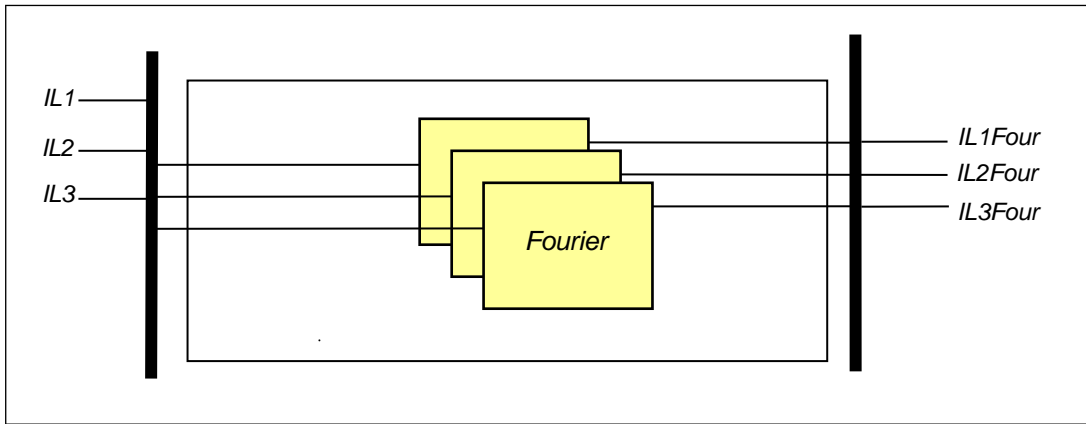


Figure 1-3 Principal scheme of the Fourier calculation

The **inputs** are the sampled values of the three phase currents (IL1, IL2, IL3).

The **outputs** are the RMS values of the fundamental Fourier component of three phase currents (IL1Four, IL2Four, IL3Four).

### 3.1.1.1.4. The Peak Selection (Peak selection)

These modules select the peak values of the phase currents individually.

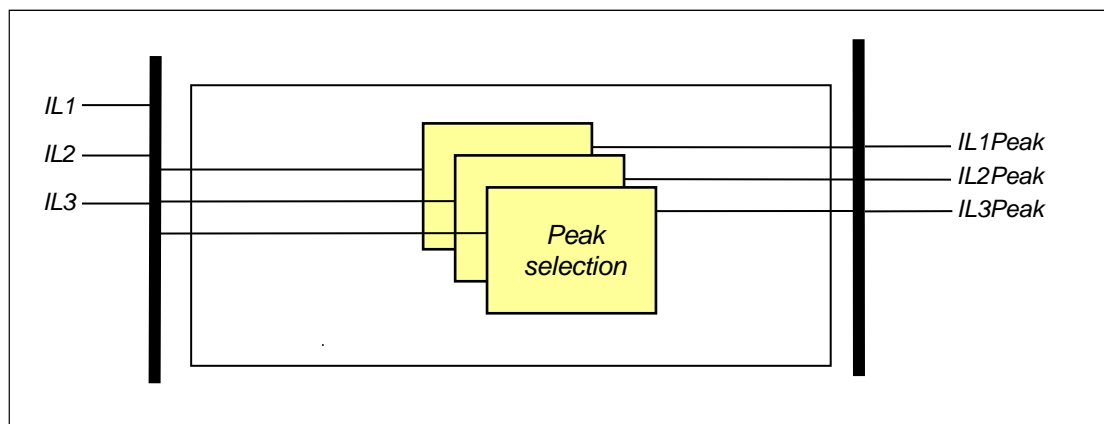


Figure 1-4 Principal scheme of the peak selection

The **inputs** are the sampled values of the three phase currents (IL1, IL2, IL3).

The **outputs** are the peak values of the analyzed currents (IL1Peak, IL2 Peak, IL3 Peak).

### 3.1.1.1.5. The Instantaneous Decision (Instantaneous decision)

This module generates trip commands for the phases without additional time delay based on the Fourier components of the phase currents or based on the peak values, if the detected values are above the current setting value.

The **inputs** are the RMS values of the fundamental Fourier component of three phase currents (IL1Four, IL2Four, IL3Four), the peak values (IL1Peak, IL2 Peak, IL3 Peak), parameters and status signals.

The **outputs** are the status signals of the three phases individually. These indicate the generated trip commands if the currents are above the current setting value.

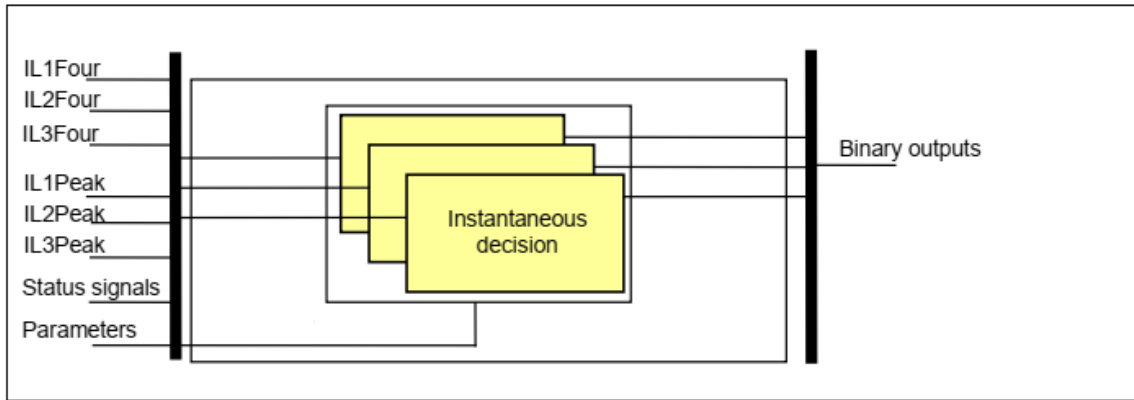


Figure 1-5 Principal scheme of the instantaneous characteristic calculation

### Enumerated parameters

*Table 1-1 The enumerated parameters of the instantaneous OC protection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, Peak value, Fundamental value	-	Off	Parameter for enabling the function and selection type.

### Integer parameters

*Table 1-2 The integer parameter of the instantaneous OC protection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Start Current	%	20 – 3000	1	200	Start setting of the function. If the current exceeds this value, the function picks up and trips after the minimum operation time of the relay ( $t_{OP}$ ).

### Binary status signals

The decision block of the instantaneous overcurrent protection function has binary input signals, which serve the purpose of blocking the function and doubling the setting value of the function.

**The conditions are defined by the user, applying the graphic equation editor.**

*Table 1-3 The binary input signals for the decision block of the IOC protection function*

BINARY STATUS SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_Blk_GrO_	Block	Input for disabling the function
IOC50_Double_GrO_	Double	Input used to double the value of the parameter “Start Current”.

The **binary output status signals** of the three-phase instantaneous overcurrent protection function are listed in [Table 1-4](#) below.

*Table 1-4 The binary output status signals of the IOC protection function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_TrL1_GrI_	Trip L1	Trip command of the function in phase L1
IOC50_TrL2_GrI_	Trip L2	Trip command of the function in phase L2
IOC50_TrL3_GrI_	Trip L3	Trip command of the function in phase L3

### 3.1.1.1.6. The Decision Logic (Decision logic)

The decision logic module combines the status signals to generate the general trip command of the function.

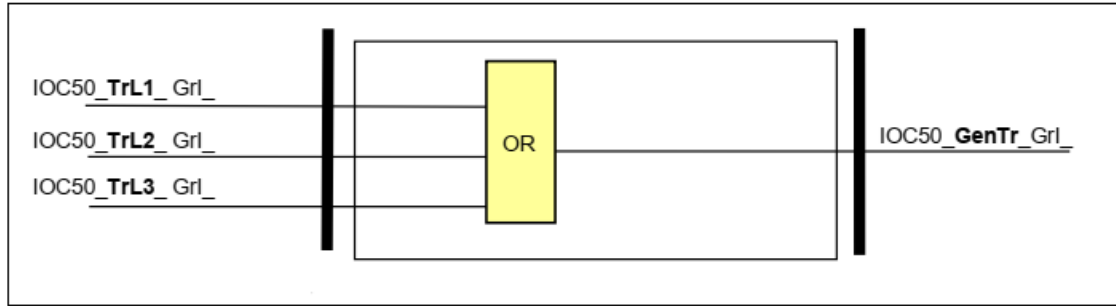


Figure 1-6 The logic scheme of the instantaneous overcurrent protection function

Table 1-5 The binary input status signals of the decision logic

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_TrL1_Grl_	Trip L1	Trip command of the function in phase L1
IOC50_TrL2_Grl_	Trip L2	Trip command of the function in phase L2
IOC50_TrL3_Grl_	Trip L3	Trip command of the function in phase L3

Table 1-6 The binary output status signal of the decision logic

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_GenTr_Grl_	General Trip	General trip command of the function

### 3.1.1.2. 3-Phase Instantaneous OC Function Overview

The graphic appearance of the 3-phase instantaneous overcurrent protection function block is shown in Figure 2-1. This block shows all binary input and output status signals that are applicable in the graphic equation editor.

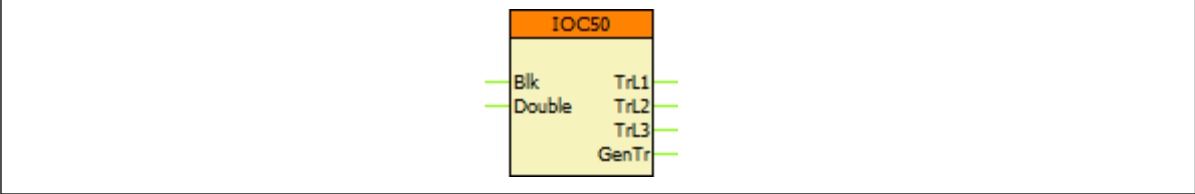


Figure 2-1 The function block of the 3-phase instantaneous overcurrent protection

#### 3.1.1.2.1. Settings

##### 3.1.1.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 Parameters of the 3-phase instantaneous overcurrent protection function

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, Peak value, Fundamental value	-	Off	Parameter for enabling the function and selection type.
Start Current	%	20 – 3000	1	200	Start setting of the function. If the current exceeds this value, the function picks up and trips after the minimum operation time of the relay ( $t_{OP}$ ).

### 3.1.1.2.2. Function I/O

This section briefly describes the analogue and digital inputs and outputs of the function block.

#### 3.1.1.2.2.1. Analogue inputs

The analogue inputs are the RMS values of the fundamental Fourier component of the three phase currents.

#### 3.1.1.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side of the function block in the Logic editor.

*Table 2-2 The binary input signals of the 3ph IOC function*

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_ <b>Blk</b> _GrO_	Block	Input for disabling the function
IOC50_ <b>Double</b> _GrO_	Double	Input used to double the value of the parameter "Start Current".

#### 3.1.1.2.2.3. Binary output signals (graphed input statuses)

These signals can be used in EuroCAP to assign to LED, user LCD object etc. Parts written in **bold** are seen on the right side of the function block in the *Logic Editor*.

*Table 2-3 The binary output signals of the 3ph IOC function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50_ <b>TrL1</b> _GrI_	Trip L1	Trip command of the function in phase L1
IOC50_ <b>TrL2</b> _GrI_	Trip L2	Trip command of the function in phase L2
IOC50_ <b>TrL3</b> _GrI_	Trip L3	Trip command of the function in phase L3
IOC50_ <b>GenTr</b> _GrI_	General Trip	Trip command of the function in at least one of the three phases

#### 3.1.1.2.2.4. Online data

The following values are visible in the *online data* page.

*Table 2-4 Online data of the 3ph IOC function*

SIGNAL TITLE	DIMENSION	EXPLANATION
Trip L1	-	Trip command of the function in phase L1
Trip L2	-	Trip command of the function in phase L2
Trip L3	-	Trip command of the function in phase L3
General Trip	-	Trip command of the function in at least one of the three phases





## 3.1.2. Residual Instantaneous Overcurrent Protection

### 3.1.2.1. Application

The residual instantaneous overcurrent protection function operates according to instantaneous characteristics, using the residual current ( $I_N=3I_0$ ). The setting value is a parameter, and it can be doubled by a binary input signal defined by the user, applying the graphic programming.

The basic calculation can be based on peak value selection or on the RMS values of the fundamental Fourier component of the residual current, according to the parameter setting. When Fourier calculation is selected then the accuracy of the operation is high, the operation time, however, is above one period of the network frequency. If the operation is based on peak values, then fast sub-cycle operation can be expected, but the transient overreach can be high.

#### 3.1.2.1.1. Operating Characteristics

$$t(I) = t_{OP} \text{ when } I > I_s$$

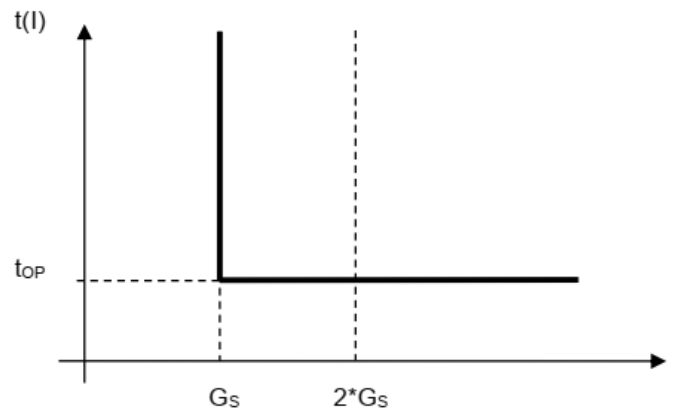


Figure 1-1 Overcurrent independent time characteristic

where:

- $t_{OP}$  (sec.)      theoretical operating time if  $G > G_s$  (without additional time delay),
- $G$                 measured value of the characteristic quantity, peak values or Fourier base harmonic of the phase currents,
- $G_s$               setting value of the characteristic quantity (*Start current*)

### 3.1.2.1.2. Structure of the Protection Algorithm

Figure 1-2 shows the structure of the residual instantaneous overcurrent protection (IOC50N) algorithm.

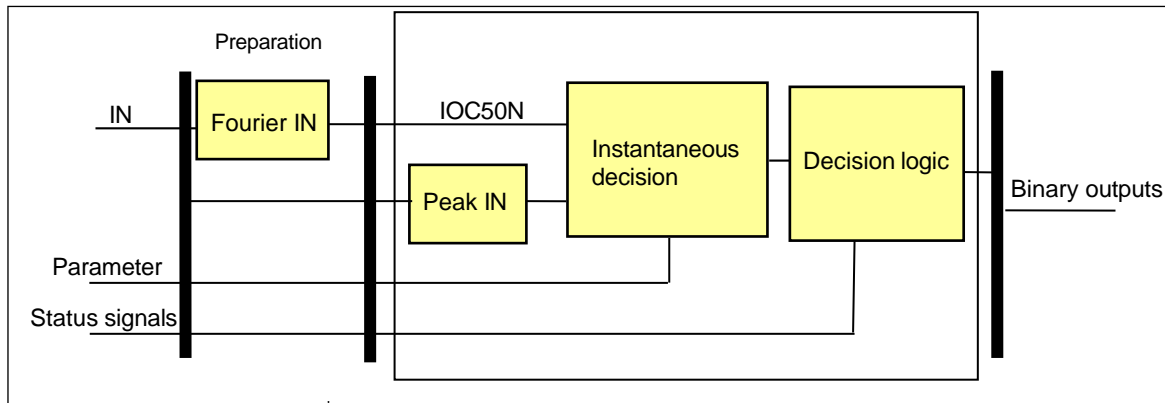


Figure 1-2 Structure of the residual instantaneous overcurrent protection algorithm

The **inputs** are

- the sampled values of the residual current,
- the RMS value of the fundamental Fourier component of the residual current,
- parameters,
- status signals.

The **outputs** are

- the binary output status signals.

The **software modules** of the differential protection function are:

#### Fourier calculation

This module calculates the basic Fourier current components of the residual current. It is not part of the residual instantaneous overcurrent protection function; it belongs to the preparatory phase.

#### Peak selection

This module selects the peak value of the residual current.

#### Instantaneous decision

This module compares the peak value or the Fourier basic harmonic components of the residual current with the setting value.


#### Decision logic

The decision logic modules generate the trip command of the function.

The following description explains the details of the individual components.

### 3.1.2.1.3. The Fourier Calculation (Fourier)

This module calculates the basic Fourier current components of the residual current. It is not part of the residual instantaneous overcurrent protection function; it belongs to the preparatory phase.

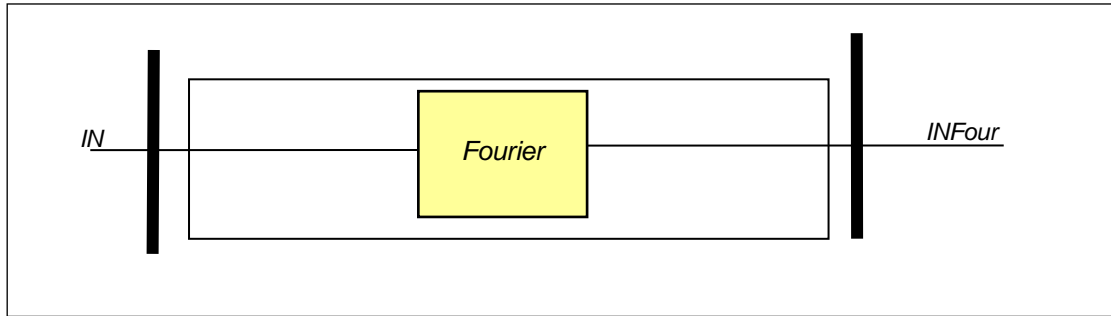


*Figure 1-3 Principal scheme of the Fourier calculation*

The **inputs** are the sampled values of the residual current (IN).

The **output** is the RMS value of the fundamental Fourier component of the residual current (INFour).

### 3.1.2.1.4. The Peak Selection (Peak selection)


This module selects the peak values of the residual current.

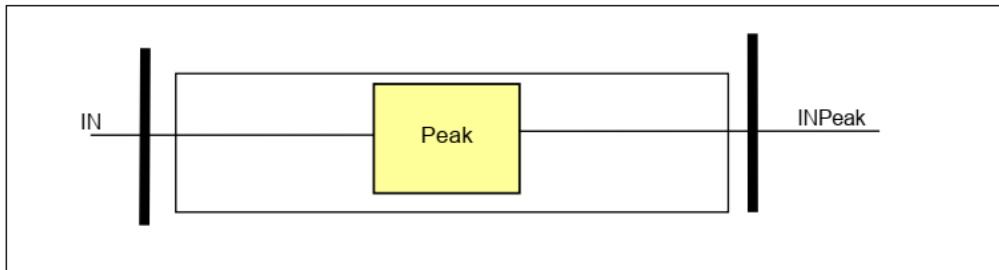

*Figure 1-4 Principal scheme of the peak selection*

The **inputs** are the sampled values of the residual current (IN).

The **outputs** are the peak values of the analyzed current (INPeak).

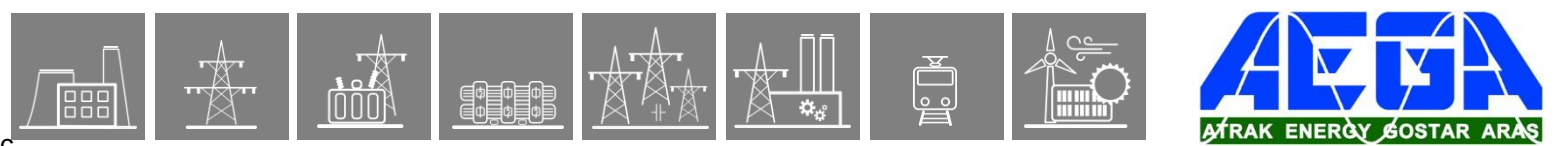


### 3.1.2.1.5. The Instantaneous Decision (Instantaneous decision)

This module generates an internal trip command without additional time delay based on the Fourier components of the residual current, or based on the peak values if the detected values are above the current setting value.

The **inputs** are the basic Fourier components of the residual current (INFour), the peak values (INPeak), parameters and status signals.

The **outputs** are the status signals. These indicate the generated internal trip command if the current is above the current setting value.

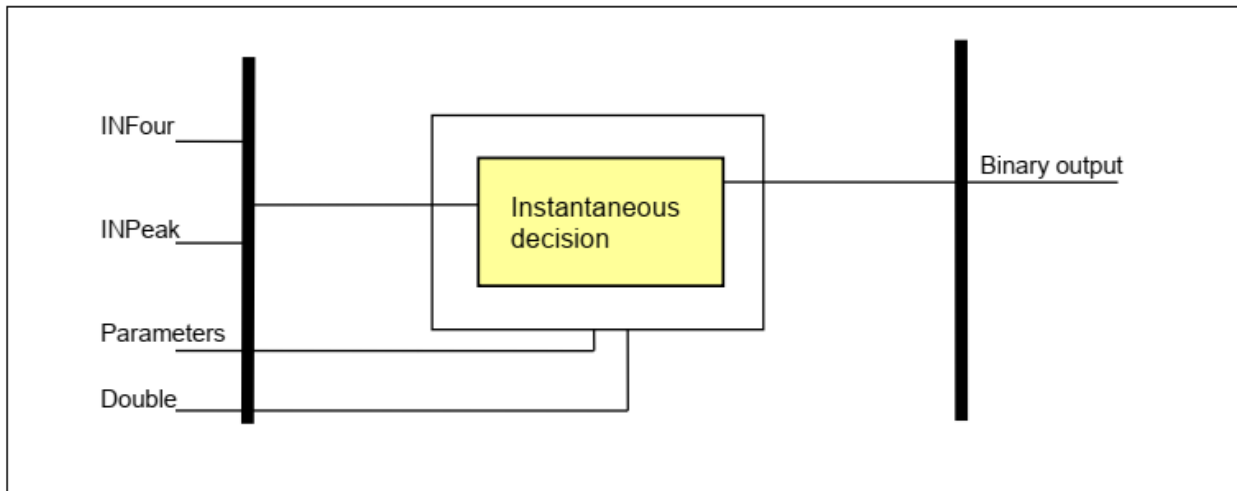

*Figure 1-5 Principal scheme of the residual instantaneous characteristic calculation*

### Enumerated parameters

*Table 1-1 The enumerated parameters of the residual IOC protection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, Peak value, Fundamental value	-	Off	Parameter for enabling the function and selection type.

### Integer parameters

*Table 1-2 The integer parameters of the residual IOC protection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Start Current	%	20 – 3000*	1	200	Setting value of the function.

### Binary status signals

The decision block of the residual instantaneous overcurrent protection function has a binary input signal, which serves the purpose of doubling the setting value of the function. **The conditions are defined by the user, applying the graphic equation editor.**

*Table 1-3 The binary input signals for the decision block of the residual IOC protection function*

BINARY STATUS SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_Double_GrO_	Double	Input used to double the value of the parameter "Start Current".

The **binary output status signal** of the residual instantaneous overcurrent protection function is shown in [Table 1-4](#).

*Table 1-4 The binary output status signal of the residual IOC protection function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_TrN_	Trip N <sub>j</sub>	Internal trip command of the function

### 3.1.2.1.6. The Decision Logic (Decision logic)

The decision logic module combines the status signal binary and the binary parameter to generate the general trip command of the function.

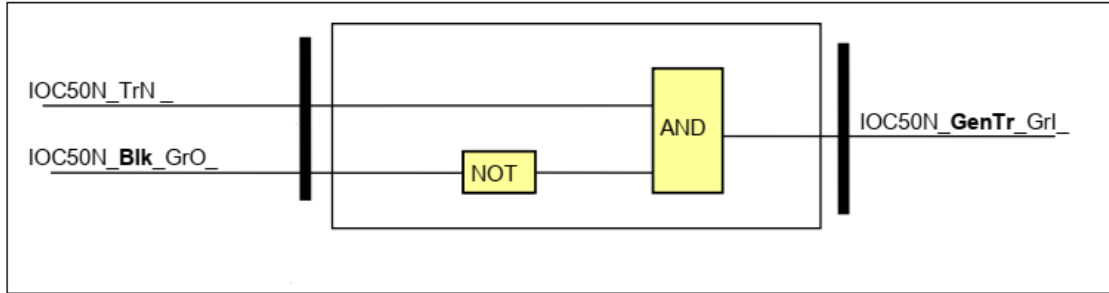


Figure 1-6 The logic scheme of the residual IOC protection function

Table 1-5 The binary input status signal of the residual IOC protection function

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_TrN_	Trip N	Internal trip command of the function

#### Binary status signal

The residual instantaneous overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**

Table 1-6 The binary input signal of the residual IOC protection function

BINARY STATUS SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_Blk_GrO_	Block	Input for disabling the function

Table 1-7 The binary output status signal of the decision logic

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_GenTr_GrI_	General Trip	General trip command of the function

### 3.1.2.2. Residual Instantaneous OC Function Overview

The graphic appearance of the residual instantaneous overcurrent protection function block is shown in [Figure 2-1](#). This block shows all binary input and output status signals that are applicable in the graphic equation editor.

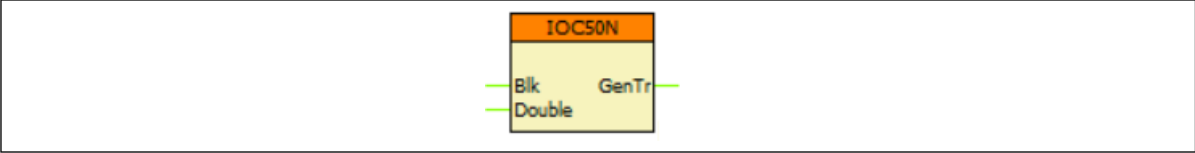


Figure 2-1 The function block of the residual instantaneous overcurrent protection

#### 3.1.2.2.1. Settings

##### 3.1.2.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 Parameters of the residual instantaneous overcurrent protection function

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, Peak value, Fundamental value	-	Off	Parameter for enabling the function and selection type.
Start Current	%	10 – 1000*	1	200	Start value of the function, if the current exceeds this value, the function picks up and trips after the minimum operation time of the relay ( $t_{OP}$ ).

\*extendable to 3000 when using CT+/5151 module



### 3.1.2.2.2. Function I/O

This section briefly describes the analogue and digital inputs and outputs of the function block.

#### 3.1.2.2.2.1. Analogue inputs

The analogue inputs are the sampled values of the residual current.

#### 3.1.2.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side of the function block in the Logic editor.

*Table 2-2 The binary input signals of the residual IOC function*

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_ <b>Blk</b> _GrO_	Block	Input for disabling the function
IOC50N_ <b>Double</b> _GrO_	Double	Input used to double the value of the parameter "Start Current".

#### 3.1.2.2.2.3. Binary output signals (graphed input statuses)

These signals can be used in EuroCAP to assign to LED, user LCD object etc. Parts written in **bold** are seen on the right side of the function block in the *Logic Editor*.

*Table 2-3 The binary output signals of the residual IOC function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
IOC50N_ <b>GenTr</b> _Grl_	General Trip	General trip command of the function

#### 3.1.2.2.2.4. Online data

The following values are visible in the *online data* page.

*Table 2-4 Online data of the residual IOC function*


SIGNAL TITLE	DIMENSION	EXPLANATION
General Trip	-	General trip command of the function

#### 3.1.2.2.2.5. Events

The following events are generated in the event list, as well as sent to the SCADA according to the configuration.

*Table 2-5 Generatable events of the residual IOC function*

EVENT	VALUE	EXPLANATION
General Trip	off, on	General trip command of the function

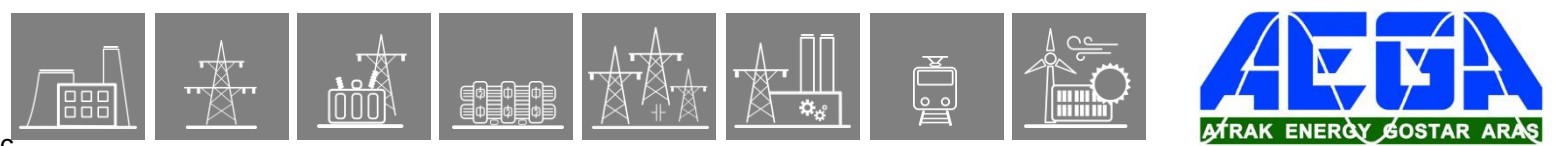

### 3.1.2.2.3. Technical Data

Table 2-6 Technical data of the residual IOC protection function

FUNCTION	VALUE	ACCURACY
<i>Using peak value calculation</i>		
Operating characteristic ( $I > 0.1I_n$ )	Instantaneous	< 6%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	< 15 ms	
Reset time*	< 40 ms	
Transient overreach	85%	
<i>Using Fourier fundamental harmonic calculation</i>		
Operating characteristic ( $I > 0.1I_n$ )	Instantaneous	< 3%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	< 25 ms	
Reset time*	< 60 ms	
Transient overreach	15%	

\* Measured with signal contacts

### 3.1.2.2.4. Notes for Testing

Normally in the EuroProt+ devices the trip contacts are assigned to the Trip Logic function block, and not to the protection function blocks. Because of this, the testing personnel must make sure that the Trip Logic is switched on ('Operation' parameter is set to other than 'Off') before starting the tests, otherwise there will be no physical trip on the relay.

Being an instantaneous function, its connection to the Trip Logic function is done in the Fast Equations (by default) and not in the Logic Editor (usually, there are comments inserted in the Logic Editor if such connections exist). This can be checked in EuroCAP.

As the analogue sources can be changed by the user, it is possible to assign calculated or measured residual current to the input of the function block. This can be checked in the function block properties in EuroCAP.



### 3.1.3. Breaker failure protection

#### 3.1.3.1. Application

After a protection function generates a trip command, it is expected that the circuit breaker opens and the fault current drops below the pre-defined normal level.

If not, then an additional trip command must be generated for all backup circuit breakers to clear the fault. At the same time, if required, a repeated trip command can be generated to the circuit breaker(s) which are expected to open.

The breaker failure protection function can be applied to perform this task.

In EuroProt+ product family two versions of breaker failure protection function can be applied:

##### “BRF50” – Breaker Failure:

This version of the breaker failure protection can be applied to perform the task to give command to the backup circuit breakers. It can be applied if only common-phase handling is sufficient, and phase selectivity is not required.

BRF50SP

##### “BRF50SP” - Single-pole Breaker Failure:

*If repeated trip command (retrip) is needed besides the backup trip, this version of breaker failure protection function must be used.*

Both versions of breaker failure protection function receive the trip requirements of the protective functions implemented in the device and combines the binary signals and parameters to the outputs of the device.

#### 3.1.3.1.1. Mode of operation


The starting signal of the breaker failure protection function is usually the trip command of any other protection function. The user has the task to define these starting signals using the graphic equation editor as the “General Start” (BRF50\_GenSt\_GrO\_), or if the operation of the individual phases is needed, then the start signals for the phases individually.

The phase start signals are: “Start L1” (BRF50\_StL1\_GrO\_), “Start L2” (BRF50\_StL2\_GrO\_) and “Start L3” (BRF50\_StL3\_GrO\_).

Dedicated timers start at the rising edge of the start signals, one for the backup trip command and one for the repeated trip command, separately for operation in the individual phases. During the running time of the timers the function optionally monitors the currents, the closed state of the circuit breakers or both, according to the user’s choice. The selection is made using the enumerated parameter “Operation”:

- If this parameter setting is “Current”, the current limit values “Start Ph Current” and “Start Res Current” must be set correctly. The binary input indicating the status of the circuit breaker has no meaning.
- If this parameter setting is “Contact”, the current limit values “Start current Ph” and “Start current N” have no meaning. The binary input indicating the status of the circuit breaker must be programmed correctly using the graphic equation editor.
  - By using “BRF50” variant: the input variable to be programmed is: BRF50\_CBClosed\_GrO\_ (CB Closed),
  - By using “BRF50SP” variant: the input variables to be programmed are: BRF50\_CBCIL1\_GrO\_ (CB closed L1), BRF50\_CBCIL2\_GrO\_ (CB closed L2) and BRF50\_CBCIL3\_GrO\_ (CB closed L3).
- If this parameter setting is “Current/Contact”, the current parameters and the status signal must be set correctly. The breaker failure protection function resets only if all conditions for faultless state are fulfilled.

BRF50SP

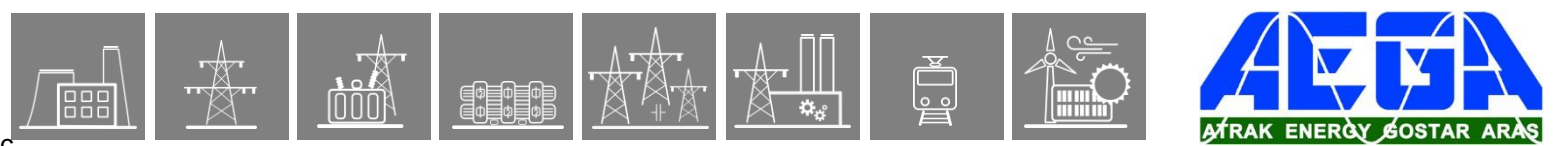


- The breaker failure protection function can be disabled by setting this parameter to “Off”. If at the end of the running time of the backup timer the currents do not drop below the pre-defined level, and/or the monitored circuit breaker is still in closed position, then a backup trip command is generated. The time delay is defined using the parameter “Backup Time Delay”.

The pulse duration of the trip command is not shorter than the time defined by setting the parameter “Pulse Duration”.

*If repeated trip command is to be generated for the circuit breakers that are expected to open, then the enumerated parameter “Retrip” must be set to “On”. In this case, at the end of the retrip timer(s) the delay of which is set by the timer parameter “Retrip Time Delay”, a repeated trip command is also generated in the phase(s) where the backup timer(s) run off.*

BRF50SP

Dynamic blocking is possible using the binary input BRF50\_**Bik**\_GrO\_ (Block). The conditions are to be programmed by the user, using the graphic equation editor.

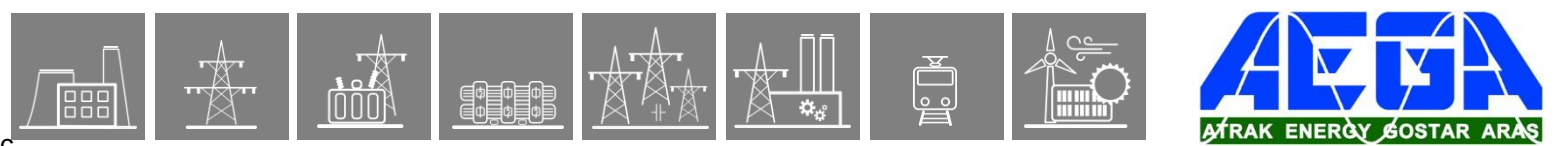

### 3.1.3.1.2. Operation principles

The decision logic module combines status signals, binary and enumerated parameters to generate the backup trip signal.

#### Binary status signals

The breaker failure protection function has binary input signals. **The conditions are defined by the user, applying the graphic equation editor.**

The **binary input status signals** of the breaker failure protection function are listed in Table 1-1.

*Table 1-1 The binary input status signals of the decision logic*

BINARY STATUS SIGNAL	TITLE	EXPLANATION
BRF50_BIk_GrO_	Block	Blocking of the breaker failure protection function
BRF50_CBClosed_GrO_	CB closed	Signal indicating the closed state of the circuit breaker
<i>BRF50SP_CBCIL1_GrO_</i>	<i>CB closed L1</i>	<i>Signal indicating the closed state of the circuit breaker in phase L1</i>
BRF50SP_CBCIL2_GrO_	CB closed L2	Signal indicating the closed state of the circuit breaker in phase L2
BRF50SP_CBCIL3_GrO_	CB closed L3	Signal indicating the closed state of the circuit breaker in phase L3
BRF50_GenSt_GrO_	General Start	General starting signal
<i>BRF50SP_StL1_GrO_</i>	<i>Start L1</i>	<i>Starting signal in phase L1</i>
BRF50SP_StL2_GrO_	Start L2	Starting signal in phase L2
BRF50SP_StL3_GrO_	Start L3	Starting signal in phase L3
BRF50_loSt_GrO_	Start lo	Starting signal for the residual current
Internal signal:	IL1>	Current in phase L1 is above the preset parameter value
Internal signal:	IL2>	Current in phase L2 is above the preset parameter value
Internal signal:	IL3>	Current in phase L3 is above the preset parameter value
Internal signal:	lo>	Current 3lo is above the preset parameter value
Enumerated parameter	Current/Contact	The monitored condition is current, contact or both

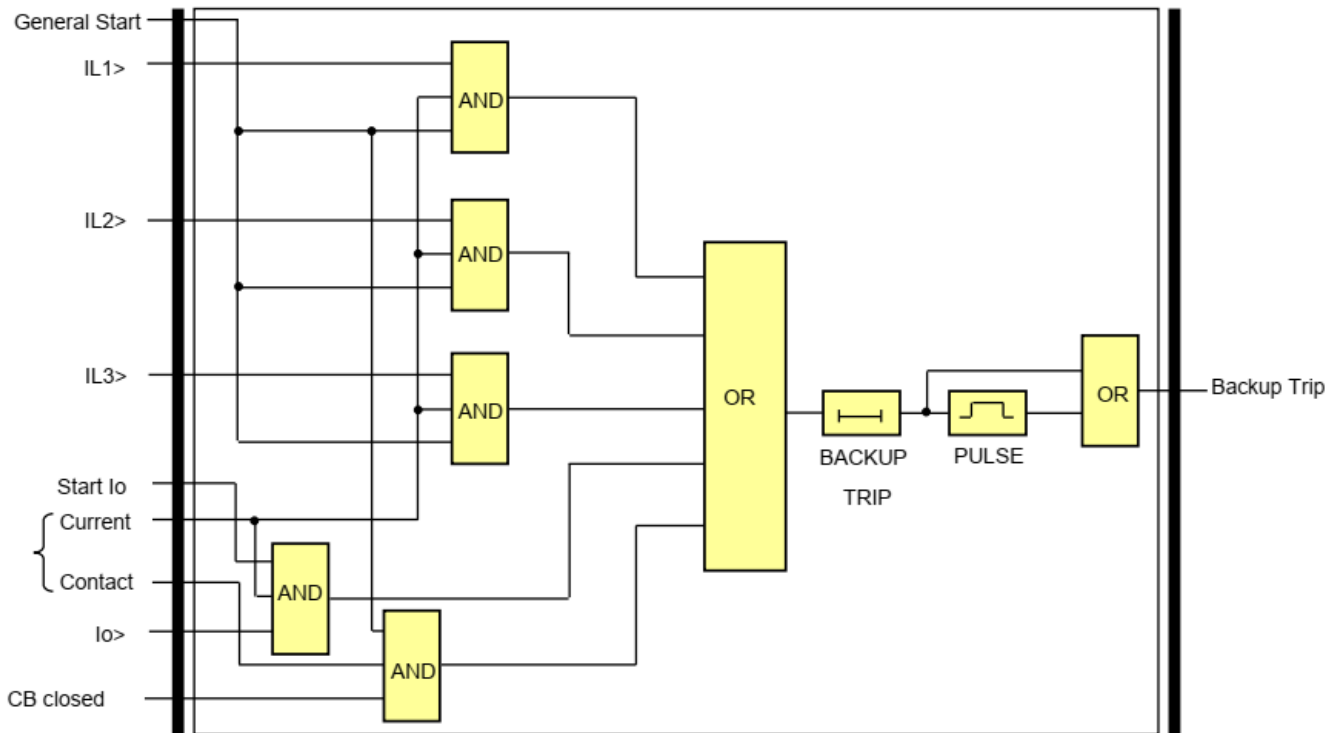


Figure 1-1 The logic scheme of the decision logic of “BRF50” variant


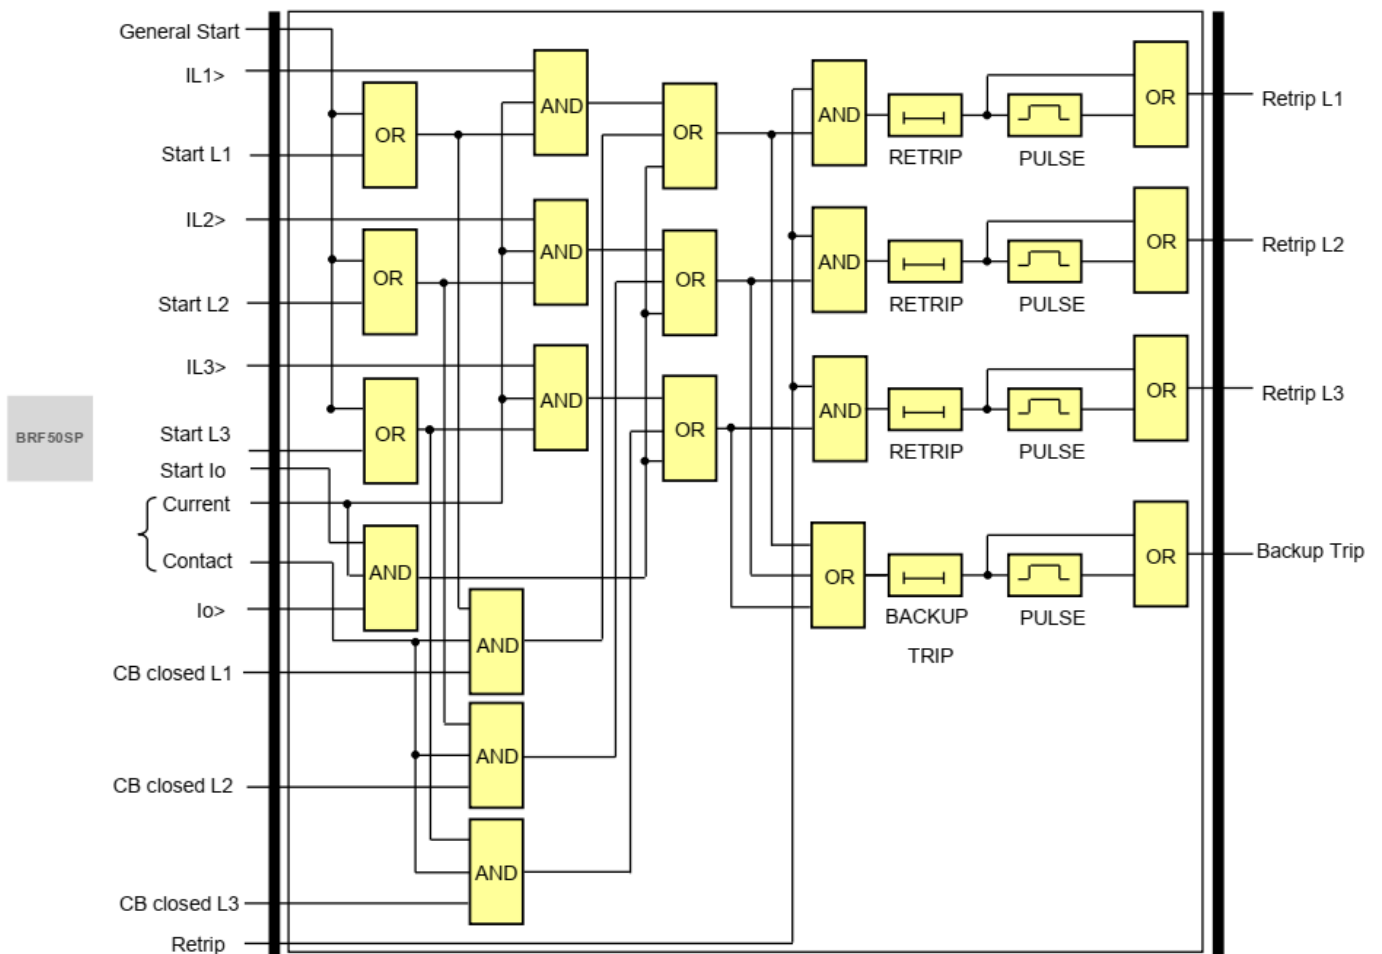


Figure 1-2 The logic scheme of the decision logic of “BRF50SP” variant

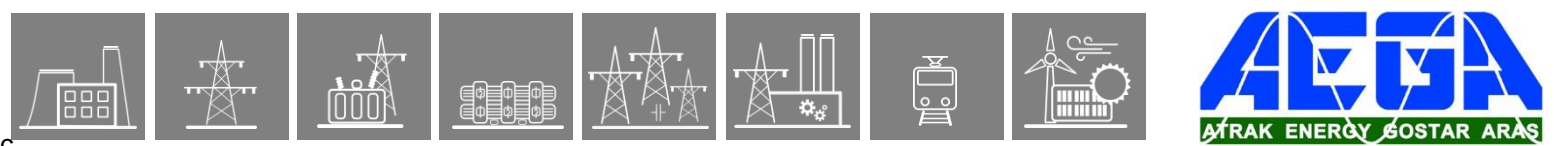

The **binary output status signals** of the breaker failure protection function is detailed in Table 1-2.

*Table 1-2 The binary output status signal of the decision logic*

BRF50SP

BINARY STATUS SIGNAL	TITLE	EXPLANATION
BRF50_BuTr_Grl_	Backup Trip	Trip command generated for the backup circuit breakers
BRF50_TrL1_Grl_	Retrip L1	Repeated trip command in phase L1
BRF50_TrL2_Grl_	Retrip L2	Repeated trip command in phase L2
BRF50_TrL3_Grl_	Retrip L3	Repeated trip command in phase L3

### 3.1.3.2. Breaker failure protection function overview

The graphic appearance of the variants the breaker failure protection function blocks are shown below. The blocks show all binary input and output status signals which are applicable in the graphic equation editor.

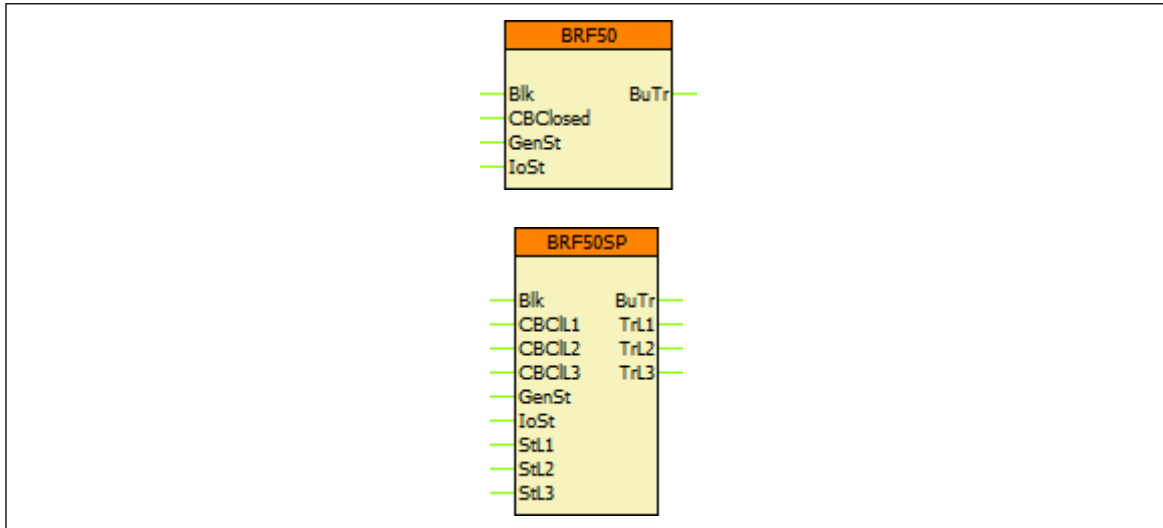


Figure 2-1 Graphic appearance of the variants of the breaker failure protection function block

#### 3.1.3.2.1. Settings

##### 3.1.3.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 Parameters of the breaker failure protection function

	TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
	Operation	-	Off, Current, Contact, Current/Contact	-	Off	Enabling the function
BRF50SP	Retrip	-	Off, On	-	Off	Enabling the retrip function
	Start Ph Current	%	20 – 200	1	30	Phase current setting
	Start Res Current	%	10 – 200	1	20	Residual current setting
BRF50SP	Retrip Time Delay	msec	0 – 1000	1	100	Time delay for retrip command generation
	Backup Time Delay	msec	100 – 60000	1	1000	Time delay for trip command generation for the backup circuit breaker(s)
	Pulse Duration	msec	0 – 60000	1	100	Trip command impulse duration



### 3.1.3.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.1.3.2.2.1. Analogue inputs

The function uses the sampled values of a current input. This is defined in the configuration.

#### 3.1.3.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side function block in the Logic editor.

Table 2-2 The binary input signals of the breaker failure protection functions


BINARY STATUS SIGNAL	TITLE	EXPLANATION
BRF50_ <b>Bik</b> _GrO_	Block	Blocking of the breaker failure protection function
BRF50_ <b>CBClosed</b> _GrO_	CB closed	Signal indicating the closed state of the circuit breaker
BRF50SP_ <b>CBCIL1</b> _GrO_	CB closed L1	Signal indicating the closed state of the circuit breaker in phase L1
BRF50SP_ <b>CBCIL2</b> _GrO_	CB closed L2	Signal indicating the closed state of the circuit breaker in phase L2
BRF50SP_ <b>CBCIL3</b> _GrO_	CB closed L3	Signal indicating the closed state of the circuit breaker in phase L3
BRF50_ <b>GenSt</b> _GrO_	General Start	General starting signal
BRF50SP_ <b>StL1</b> _GrO_	Start L1	Starting signal in phase L1
BRF50SP_ <b>StL2</b> _GrO_	Start L2	Starting signal in phase L2
BRF50SP_ <b>StL3</b> _GrO_	Start L3	Starting signal in phase L3
BRF50_ <b>IoSt</b> _GrO_	Start Io	Starting signal for the residual current

#### 3.1.3.2.2.3. Binary output signals (graphed input statuses)

These signals can be used in EuroCAP to assign to LED, user LCD object etc. Parts written in **bold** are seen on the right side of the function block in the *Logic Editor*.

Table 2-3 The binary output signals of the breaker failure protection function

BINARY STATUS SIGNAL	TITLE	EXPLANATION
BRF50_ <b>BuTr</b> _GrI_	Backup Trip	Trip command generated for the backup circuit breakers
BRF50_ <b>TrL1</b> _GrI_	Retrip L1	Repeated trip command in phase L1
BRF50_ <b>TrL2</b> _GrI_	Retrip L2	Repeated trip command in phase L2
BRF50_ <b>TrL3</b> _GrI_	Retrip L3	Repeated trip command in phase L3

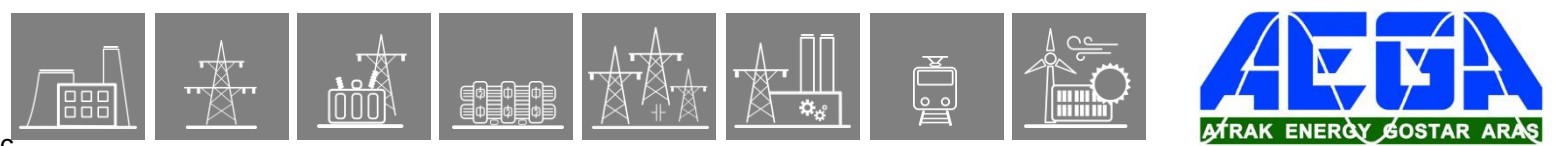

### 3.1.3.2.2.4. Online data

Visible values on the *online data* page.

*Table 2-4 Online displayed data of the breaker failure protection function*

SIGNAL TITLE	DIMENSION	EXPLANATION
Backup Trip	-	Trip command generated for the backup circuit breakers
<i>Retrip L1</i>	-	<i>Repeated trip command in phase L1</i>
<i>Retrip L2</i>	-	<i>Repeated trip command in phase L2</i>
<i>Retrip L3</i>	-	<i>Repeated trip command in phase L3</i>

BRF50SP

### 3.1.3.2.2.5. Events

The following events are generated in the event list, as well as sent to the SCADA according to the configuration.

*Table 2-5 Generated events of the breaker failure protection function*

BRF50SP

EVENT	VALUE	EXPLANATION
Backup Trip	off, on	Backup trip command of the function
Retrip L1	off, on	Repeated trip command in phase L1
Retrip L2	off, on	Repeated trip command in phase L2
Retrip L3	off, on	Repeated trip command in phase L3

### 3.1.3.2.3. Technical data

*Table 2-6 Technical data of the breaker failure protection function*

FUNCTION	VALUE	ACCURACY
Pick-up starting accuracy		< 2 %
Operate time accuracy		±5% or ±15 ms, whichever is greater
Retrip time	approx. 15 ms	
Reset ratio	0.9	
Current reset time	16 – 25 ms	

### 3.1.3.2.4. Notes for testing

Note that the time delay parameter incorporates the algorithm time as well, so the time delay *does not mean the time difference between the appearance of the start and trip signals* of the function. In other words: it is not the delay between the detection of the fault and the trip that follows it. This should be taken into consideration when checking the disturbance records.

Instead the time delay parameter defines the elapsed time from the appearance of the faulty state to the trip. Because of this, while testing, the delay measurement should start *from the moment of the fault injection* until the trip signal.

### 3.1.4. Three-phase time overcurrent protection

#### 3.1.4.1. Operation principle

The overcurrent protection function realizes definite time or inverse time characteristics according to IEC or IEEE standards, based on three phase currents. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08. This function can be applied as main protection for medium-voltage applications or backup or overload protection for high-voltage network elements.

##### 3.1.4.1.1. Operating characteristics

###### 3.1.4.1.1.1. Independent time characteristic

$$t(G) = t_{OP} \text{ when } G > G_S$$

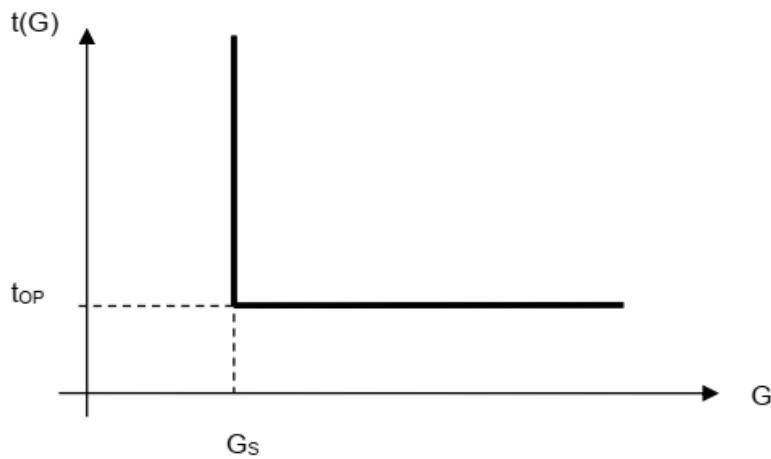


Figure 1-1 Overcurrent independent time characteristic

where

- $t_{OP}$  (seconds)      theoretical operating time if  $G > G_S$ , fix, according to the preset parameter,
- $G$                       measured value of the characteristic quantity, Fourier base harmonic of the phase currents,
- $G_S$                     preset value of the characteristic quantity (“Start current” parameter).

### 3.1.4.1.1.2. Standard dependent time characteristics

Operating characteristics:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

- t(G)(seconds)      theoretical operate time with constant value of G,
- k, c                      constants characterizing the selected curve (in seconds),
- $\alpha$                       constants characterizing the selected curve (no dimension),
- G                         measured value of the characteristic quantity, Fourier base harmonic of the phase currents (IL1Four, IL2Four, IL3Four),
- G<sub>s</sub>                      preset value of the characteristic quantity (“Start current” parameter),
- TMS                    preset time multiplier (no dimension).

*Table 1-1 The constants of the standard dependent time characteristics*


	IEC REF	TITLE	kr	c	$\alpha$
1	A	IEC Inv	0,14	0	0,02
2	B	IEC VeryInv	13,5	0	1
3	C	IEC ExtInv	80	0	2
4		IEC LongInv	120	0	1
5		ANSI Inv	0,0086	0,0185	0,02
6	D	ANSI ModInv	0,0515	0,1140	0,02
7	E	ANSI VeryInv	19,61	0,491	2
8	F	ANSI ExtInv	28,2	0,1217	2
9		ANSI LongInv	0,086	0,185	0,02
10		ANSI LongVeryInv	28,55	0,712	2
11		ANSI LongExtInv	64,07	0,250	2

The end of the effective range of the dependent time characteristics (G<sub>D</sub>) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G_D}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

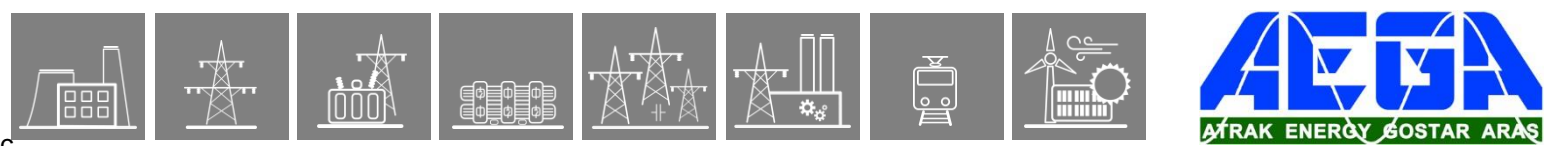

Additionally, a minimum time delay can be defined by parameter “Min Time Delay”. This delay is valid if it is longer than  $t(G)$ , defined by the formula above.

The inverse characteristic is valid above  $G_T = 1,1 * G_s$ . Above this value the function is guaranteed to operate.

**Resetting characteristics:**

- For IEC type characteristics the resetting is after a fix time delay defined by “Reset delay”,
- for ANSI types however according to the formula below:

$$t_r(G) = TMS \left[ \frac{k_r}{1 - \left(\frac{G}{G_s}\right)^\alpha} \right] \text{ when } G < G_s$$

where


- $t_r(G)$ (seconds) theoretical reset time with constant value of  $G$ ,
- $k_r$  constants characterizing the selected curve (in seconds),
- $\alpha$  constants characterizing the selected curve (no dimension),
- $G$  measured value of the characteristic quantity, Fourier base harmonic of the phase currents,
- $G_s$  preset value of the characteristic quantity (“Start current” parameter),
- TMS preset time multiplier (no dimension).

*Table 1-2 The resetting constants of the standard dependent time characteristics*

	IEC REF	TITLE	$k_r$	$\alpha$
1	A	IEC Inv	Resetting after fix time delay, according to preset parameter “Reset delay”	
2	B	IEC VeryInv		
3	C	IEC ExtInv		
4		IEC LongInv		
5		ANSI Inv	0,46	2
6	D	ANSI ModInv	4,85	2
7	E	ANSI VeryInv	21,6	2
8	F	ANSI ExtInv	29,1	2
9		ANSI LongInv	4,6	2
10		ANSI LongVeryInv	13,46	2
11		ANSI LongExtInv	30	2

### 3.1.4.1.2. Structure of the overcurrent protection algorithm

Fig.1-2 shows the structure of the overcurrent protection (TOC51) algorithm.

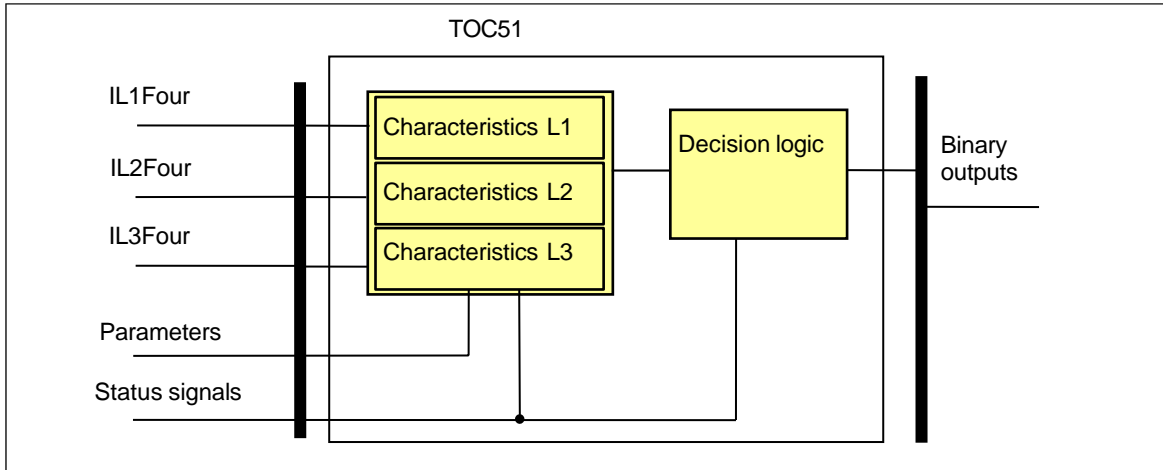

*Figure 1-2 Structure of the overcurrent protection algorithm*

The **inputs** are

the RMS value of the fundamental Fourier component of three phase currents,  
parameters,  
status signals.

The **outputs** are

the binary output status signals.

The **software modules** of the overcurrent protection function:

#### **Characteristics**

This module calculates the required time delay based on the Fourier components of the phase currents.

#### **Decision logic**

The decision logic module combines the status signals to generate the trip command of the function.

The following description explains the details of the individual components.

### 3.1.4.1.3. The definite time and the inverse type characteristics (characteristics)

This module calculates the required time delay based on the Fourier components of the phase currents. The formulas applied are described in Chapter 1.1.

The **inputs** are the RMS value of the fundamental Fourier component of the phase currents (IL1Four, IL2Four, IL3Four) and parameters.

The **outputs** are the status signals of the three phases individually. These indicate the started state and the generated trip command if the time delay determined by the characteristics expired.

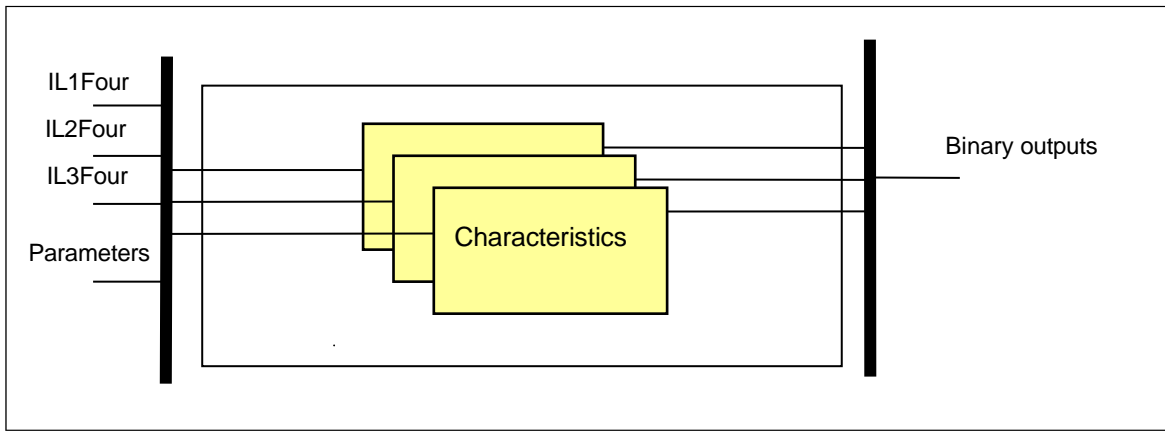


Figure 1-3 Schema of the characteristic calculation

The inverse type characteristics are also presented graphically on the following pages. These diagrams assume 100% setting value for the Start current parameter (GS), 1 for the Time multiplier (TMS) and 0 for the Min. time delay.




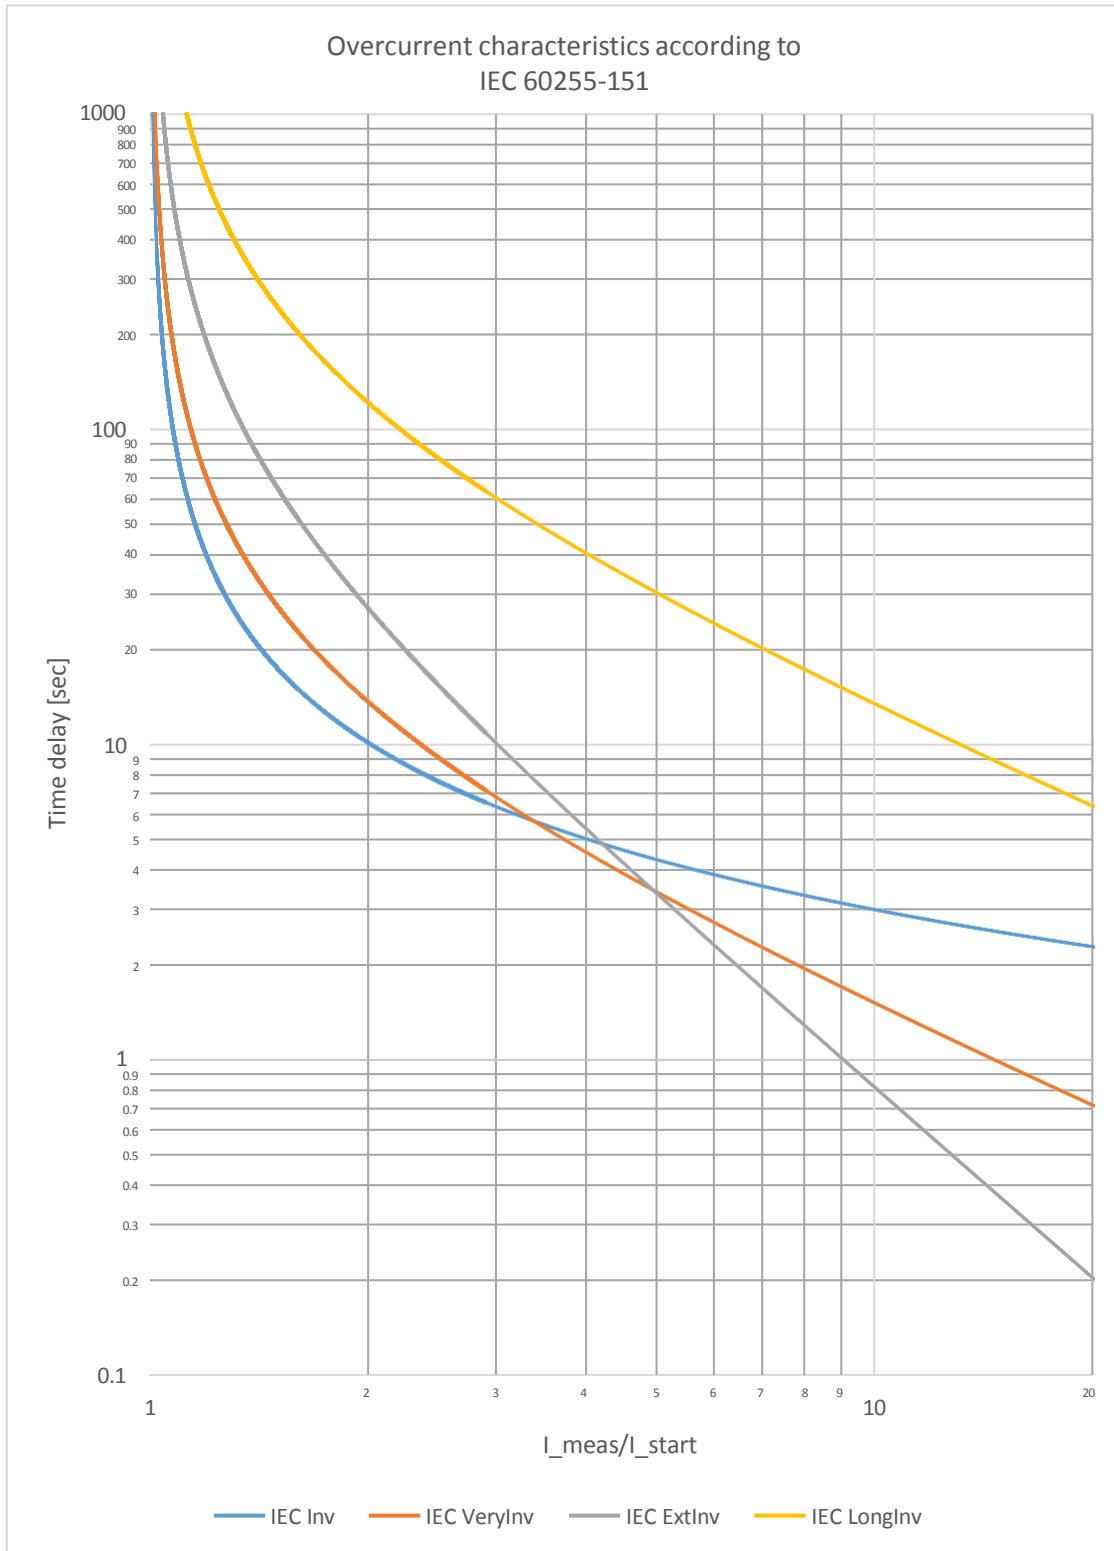


Figure I-4 Overcurrent characteristics according to IEC 60255-151

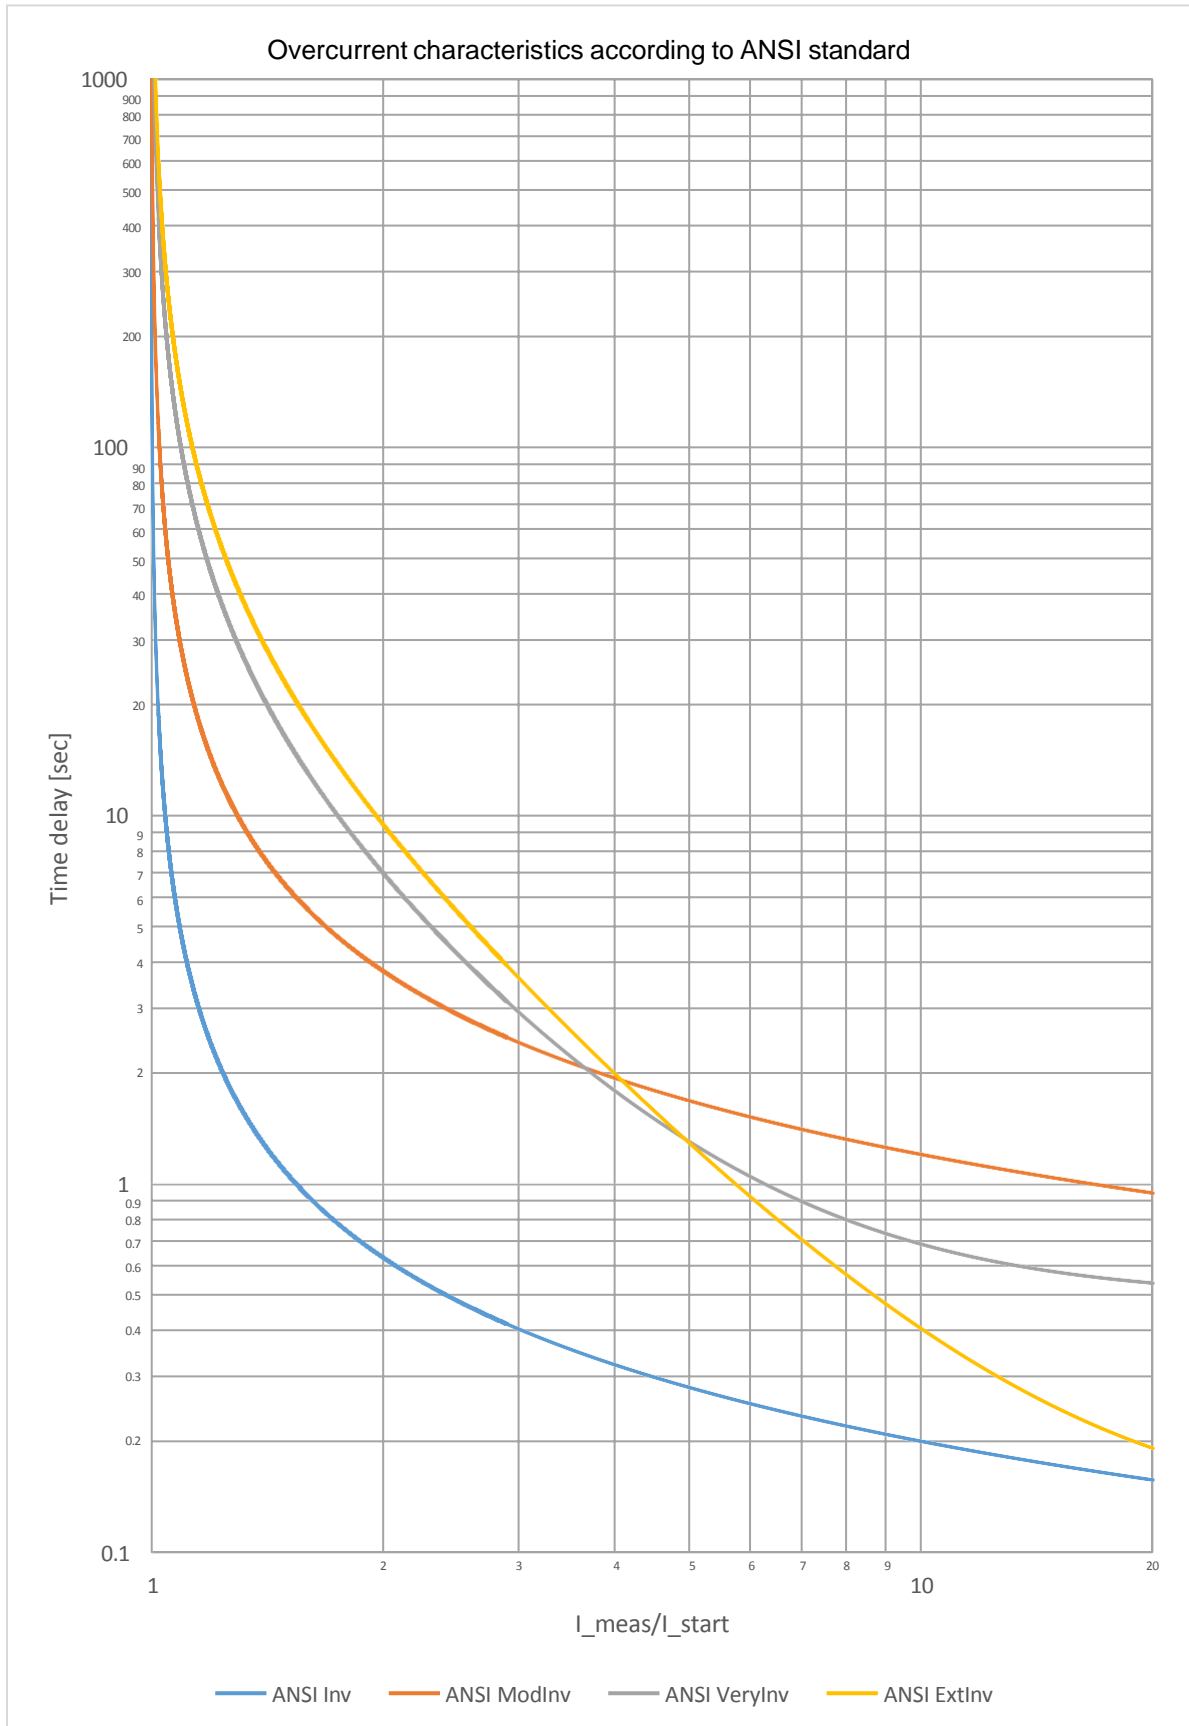

*Figure 1-5 Overcurrent characteristics according to ANSI standard*

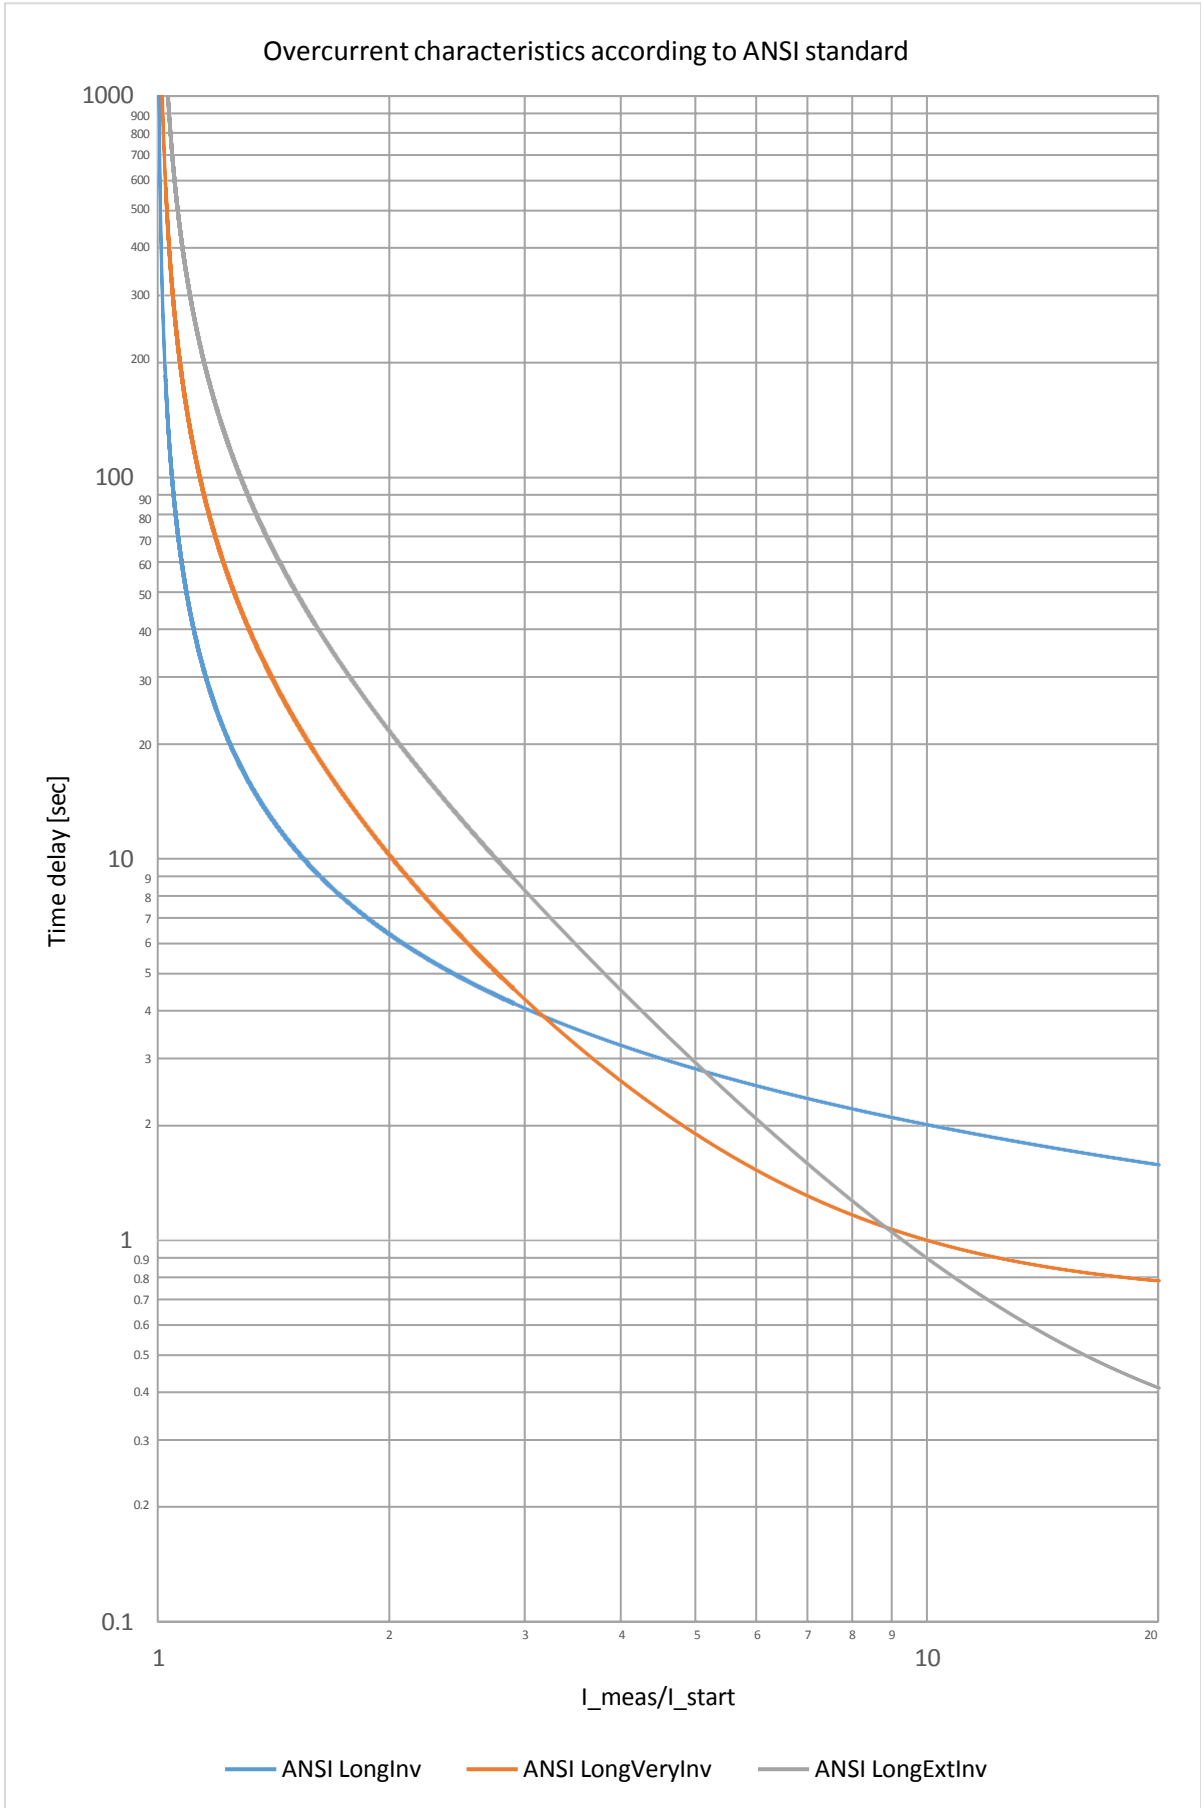


Figure 1-6 Overcurrent characteristics according to ANSI standard


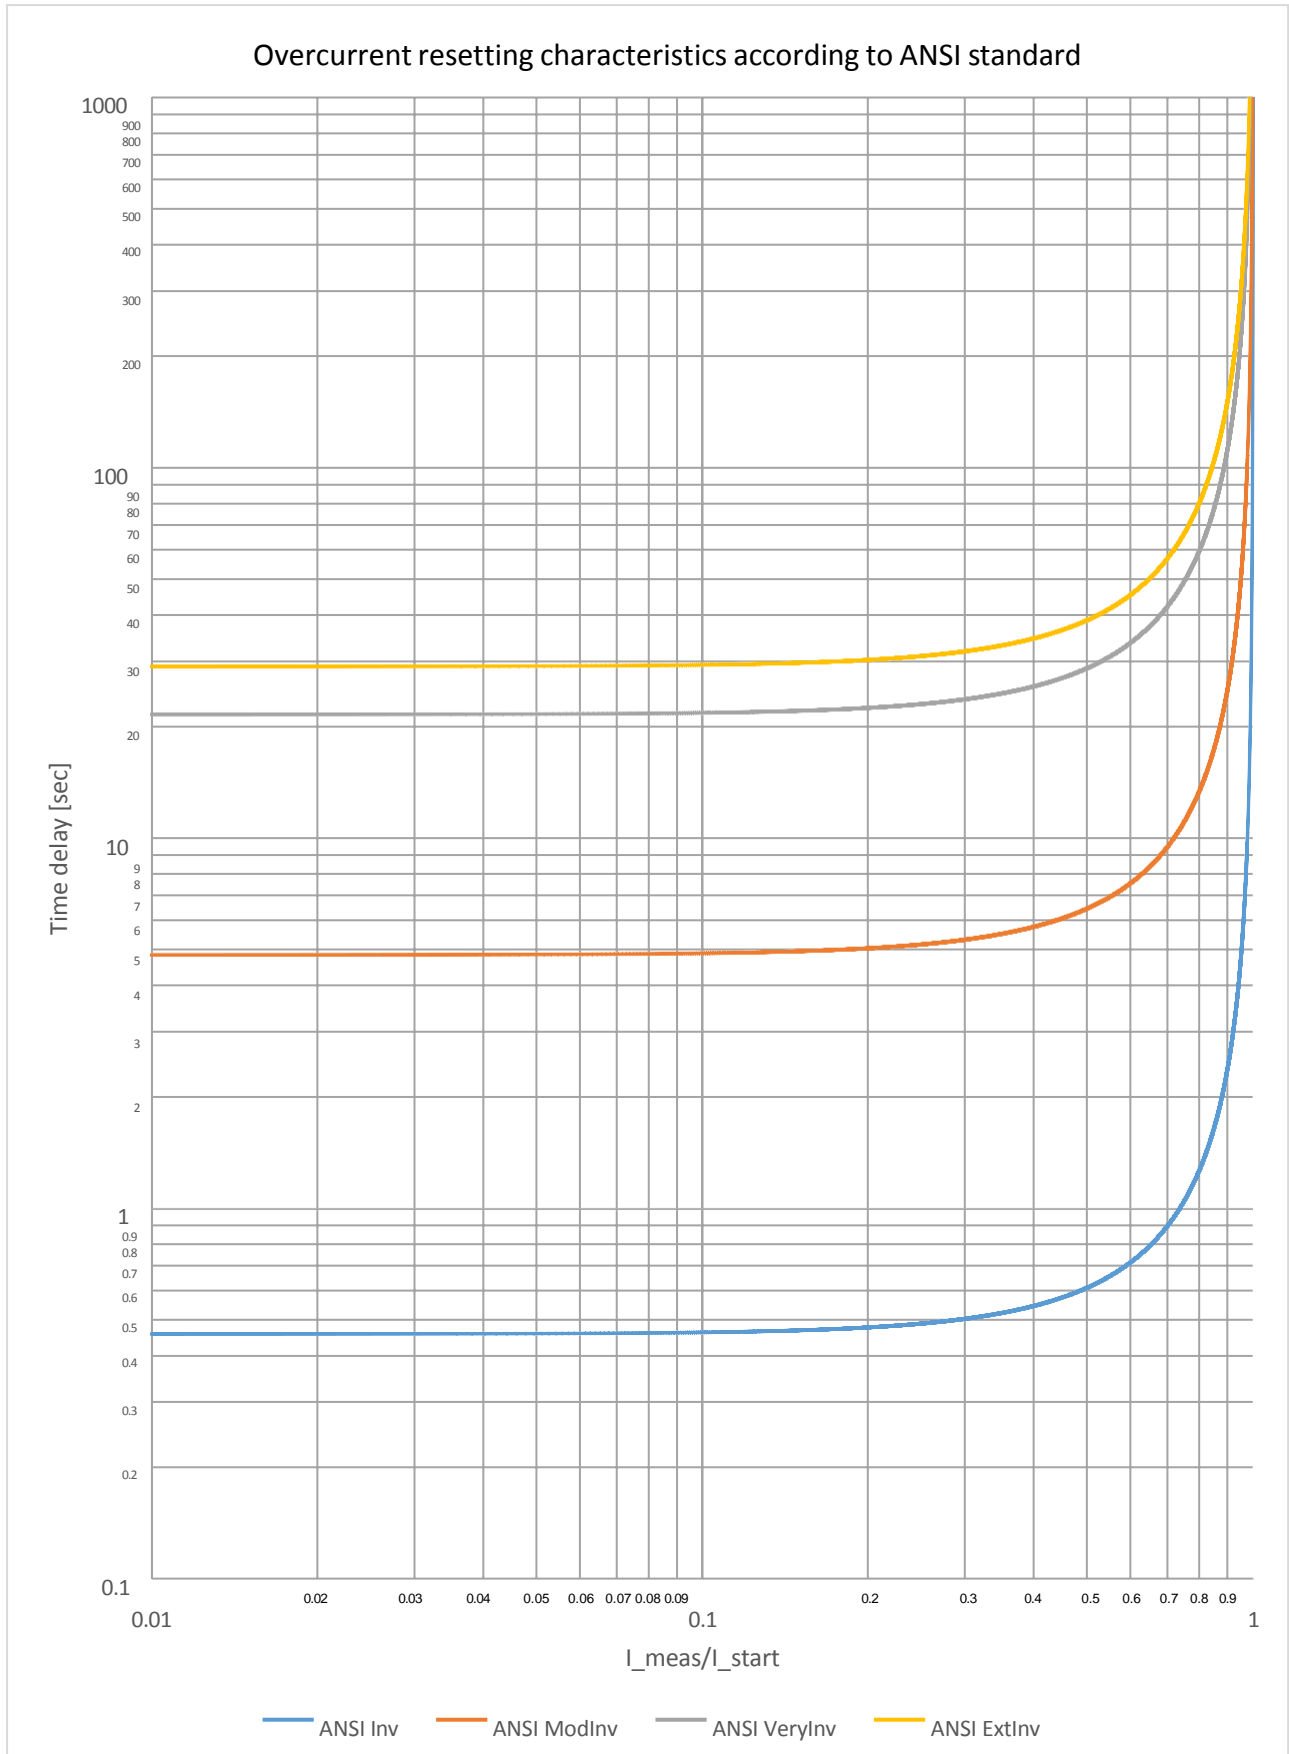


Figure 1-7 Overcurrent resetting characteristics according to ANSI standard

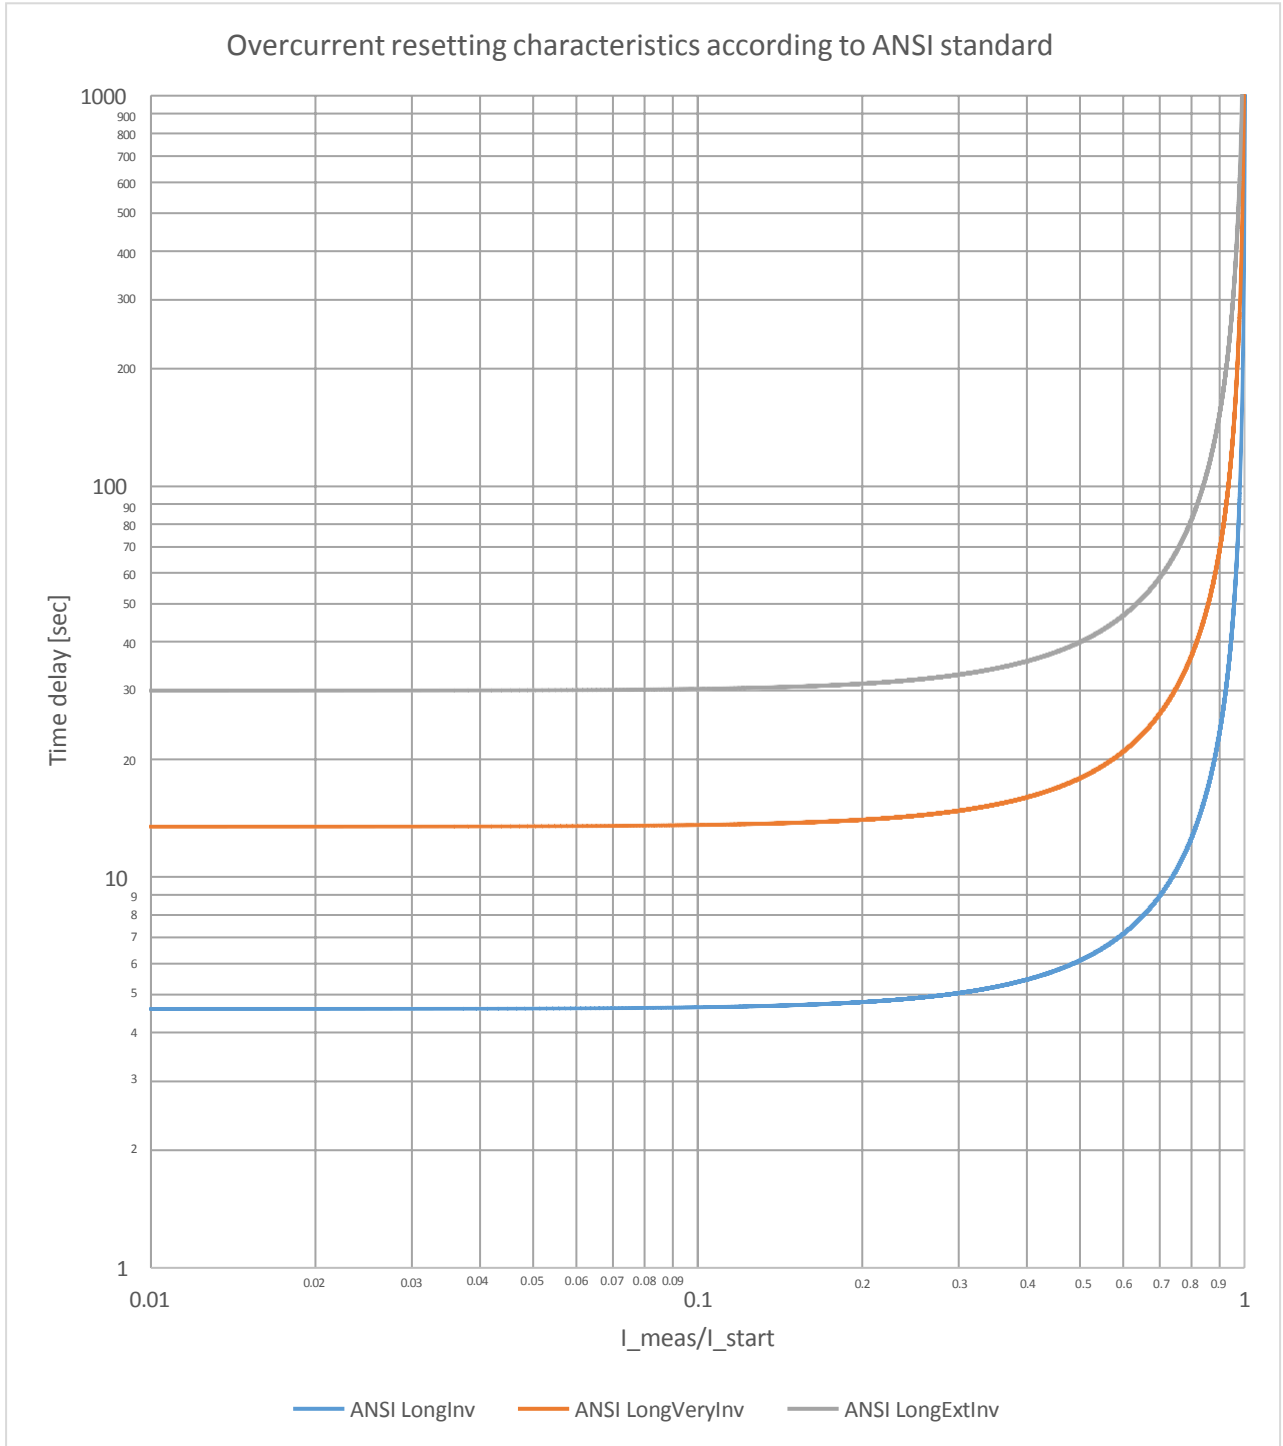

*Figure 1-8 Overcurrent resetting characteristics according to ANSI standard*

### 3.1.4.1.4. The decision logic (Decision logic)

The decision logic module combines the status signals to generate the general start signal and general trip command of the function.


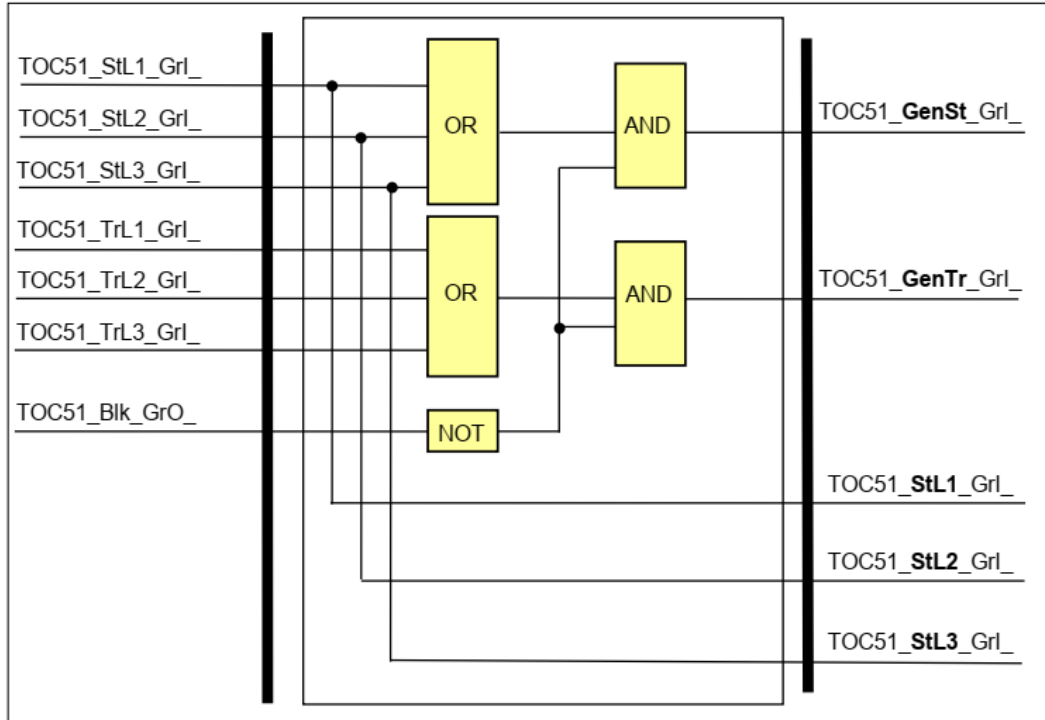


Figure 1-9 The logic scheme of the overcurrent protection function

Table 1-3 The binary input status signals of the overcurrent protection function

BINARY INPUT SIGNALS	SIGNAL TITLE	EXPLANATION
TOC51_StL1_Gr_	Start L1	Starting of the function in phase L1
TOC51_TrL1_Gr_	Trip L1	Trip command of the function in phase L1
TOC51_StL2_Gr_	Start L2	Starting of the function in phase L2
TOC51_TrL2_Gr_	Trip L2	Trip command of the function in phase L2
TOC51_StL3_Gr_	Start L3	Starting of the function in phase L3
TOC51_TrL3_Gr_	Trip L3	Trip command of the function in phase L3

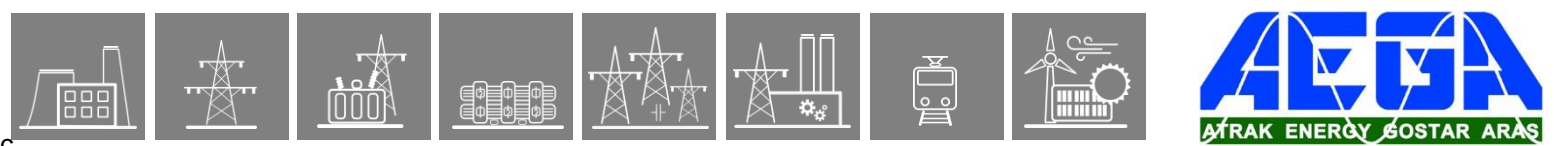

### Binary status signals

The overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**

*Table 1-4 The binary input signal of the overcurrent protection function*

BINARY STATUS SIGNAL	EXPLANATION
TOC51_BlK_GrO_	Output status of a graphic equation defined by the user to disable the overcurrent protection function.

*Table 1-5 The binary output status signals of the overcurrent protection function*

BINARY OUTPUT SIGNALS	SIGNAL TITLE	EXPLANATION
TOC51_StL1_Grl_	Start L1	Starting of the function in phase L1
TOC51_StL2_Grl_	Start L2	Starting of the function in phase L2
TOC51_StL3_Grl_	Start L3	Starting of the function in phase L3
TOC51_GenSt_Grl_	Gen. Start	General starting of the function
TOC51_GenTr_Grl_	Gen. Trip	General trip command of the function

### 3.1.4.2. 3ph overcurrent protection function overview

The function block of the three-phase overcurrent protection function is shown in Figure 2-1. This block shows all binary input and output status signals that are applicable in the graphic equation editor.

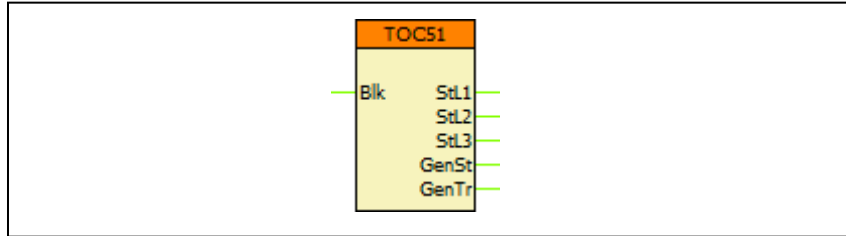


Figure 2-1 The function block of the overcurrent protection function

#### 3.1.4.2.1. Settings

##### 3.1.4.2.1.1. Parameters

Table 2-1 Parameters of the 3ph overcurrent protection function

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, Definite Time, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	-	Off	Enabling the function by choosing the characteristics.
Start Current	%	10 – 3000	1	200	Starting current of the function.
Time Multiplier	-	0.05 – 15.0	0.01	200	Time multiplier of the inverse characteristics (OC module)
Min Time Delay	msec	40 – 60000	1	100	Minimal time delay for the inverse characteristics
Definite Time Delay	msec	40 – 60000	1	100	Time delay setting for the definite time characteristics
Reset Time	msec	60 – 60000	1	100	Reset time for the IEC inverse characteristics



### 3.1.4.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.1.4.2.2.1. Analogue inputs

The function uses the sampled values of the three phase currents.

#### 3.1.4.2.2.2. Binary output signals (graphed input statuses)

The **binary output status signals** of the three-phase overcurrent protection function are listed in Table 2-2. **Parts** written in **bold** are seen on the function block in the logic editor.

*Table 2-2 The binary output status signals of the 3ph overcurrent protection function*

<b>BINARY OUTPUT SIGNALS</b>	<b>SIGNAL TITLE</b>	<b>EXPLANATION</b>
TOC51_ <b>St</b> L1_Grl_	Start L1	Starting of the function in phase L1
TOC51_TrL1_Grl_	Trip L1	Trip command of the function in phase L1
TOC51_ <b>St</b> L2_Grl_	Start L2	Starting of the function in phase L2
TOC51_TrL2_Grl_	Trip L2	Trip command of the function in phase L2
TOC51_ <b>St</b> L3_Grl_	Start L3	Starting of the function in phase L3
TOC51_TrL3_Grl_	Trip L3	Trip command of the function in phase L3
TOC51_ <b>GenSt</b> _Grl_	General Start	General start of the function
TOC51_ <b>GenTr</b> _Grl_	General Trip	General trip command of the function

#### 3.1.4.2.2.3. Binary input signals (graphed output statuses)

The overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**

*Table 2-3 The binary input status signals of the 3ph overcurrent protection function*


<b>BINARY INPUT SIGNAL</b>	<b>EXPLANATION</b>
TOC51_ <b>Blk</b> _GrO_	Output status of a graphic equation defined by the user to disable the overcurrent protection function.

#### 3.1.4.2.2.4. On-line data

Visible values on the on-line data page:

*Table 2-4 On-line data of the 3ph overcurrent protection function*

<b>SIGNAL TITLE</b>	<b>DIMENSION</b>	<b>EXPLANATION</b>
Start L1	-	Starting of the function in phase L1
Trip L1	-	Trip command of the function in phase L1
Start L2	-	Starting of the function in phase L2
Trip L2	-	Trip command of the function in phase L2
Start L3	-	Starting of the function in phase L3
Trip L3	-	Trip command of the function in phase L3
General Start	-	General start of the function
General Trip	-	General trip command of the function

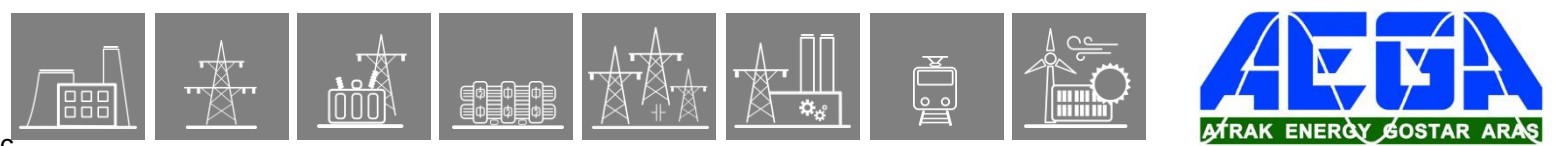

### 3.1.4.2.2.5. Events

The following events are generated in the event list, as well as sent to SCADA according to the configuration.

*Table 2-5 Events of the 3ph overcurrent protection function*

EVENT	VALUE	EXPLANATION
Start L1	off, on	Start of the three-phase overcurrent protection function in measuring element L1
Start L2	off, on	Start of the three-phase overcurrent protection function in measuring element L2
Start L3	off, on	Start of the three-phase overcurrent protection function in measuring element L3
General Start	off, on	General start of the three-phase overcurrent protection function
General Trip	off, on	General trip command of the three-phase overcurrent protection function

### 3.1.4.2.3. Technical data

Table 2-6 Technical data of the 3ph overcurrent protection function

FUNCTION	VALUE	ACCURACY
Operating accuracy	$20 \leq GS \leq 1000$	< 2 %
Operate time accuracy		$\pm 5\%$ or $\pm 15$ ms, whichever is greater
Reset ratio	0,95	
Reset time * Dependent time char. Definite time char.	Approx. 60 ms	< 5% or $\pm 35$ ms, whichever is greater
Transient overreach		< 2 %
Pickup time *	< 40 ms	
Overshot time Dependent time char. Definite time char.	30 ms 50 ms	
Influence of time varying value of the input current (IEC 60255-151)		< 4 %

\* Measured with signal relay contact

#### 3.1.4.2.3.1. Notes for testing

Normally in the EuroProt+ devices the trip contacts are assigned to the Trip Logic function block, and not to the protection function blocks. Because of this, the testing personnel must make sure that the Trip Logic is switched on ('Operation' parameter is set to other than 'Off') before starting the testing, otherwise there will be no physical trip on the relay.

The reset time of the IDMT characteristics can be tested only indirectly by injecting the same fault currents again after a successful trip: if the time elapsed between the two injections is less than the reset time, the second injection will result in a quicker operation than the first.

### 3.1.5. Residual overcurrent protection function

The residual overcurrent protection function can realize definite time or inverse time characteristics according to IEC or IEEE standards, based on the RMS value of the fundamental Fourier component of a single measured current, which can be the measured residual current at the neutral point (3I<sub>0</sub>) or the calculated zero sequence current component. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08.

#### 3.1.5.1. Operating characteristics

##### 3.1.5.1.1. Independent time characteristic

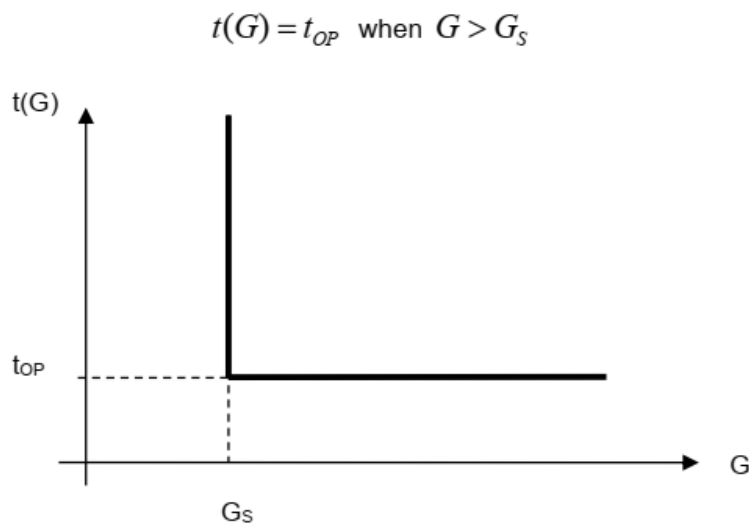


Figure 1-1 Overcurrent independent time characteristic

where	
t <sub>OP</sub> (seconds)	theoretical operating time if $G > G_s$ , fix, according to the preset parameter,
G	measured value of the characteristic quantity, Fourier base harmonic of the residual current,
G <sub>s</sub>	preset value of the characteristic quantity (TOC51N_StCurr_IPar_, Start current).

### 3.1.5.1.2. Standard dependent time characteristics

Operating characteristics:

$$t(G) = TMS \left[ \frac{k_r}{\left(\frac{G}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where  
 t(G)(seconds)      theoretical operate time with constant value of G,  
 k<sub>r</sub>, c                    constants characterizing the selected curve (in seconds),  
 α                         constant characterizing the selected curve (no dimension),  
 G                         measured value of the characteristic quantity, Fourier base harmonic  
                               of the residual current (INFour),  
 G<sub>s</sub>                      preset value of the characteristic quantity (TOC51N\_StCurr\_IPar\_  
                               Start current),  
 TMS                     preset time multiplier (no dimension).

	IEC ref		k <sub>r</sub>	c	α
1	A	IEC Inv	0,14	0	0,02
2	B	IEC VeryInv	13,5	0	1
3	C	IEC ExtInv	80	0	2
4		IEC LongInv	120	0	1
5		ANSI Inv	0,0086	0,0185	0,02
6	D	ANSI ModInv	0,0515	0,1140	0,02
7	E	ANSI VeryInv	19,61	0,491	2
8	F	ANSI ExtInv	28,2	0,1217	2
9		ANSI LongInv	0,086	0,185	0,02
10		ANSI LongVeryInv	28,55	0,712	2
11		ANSI LongExtInv	64,07	0,250	2

Table 1-1 The constants of the standard dependent time characteristics

**Resetting characteristics:**

$$t_r(G) = TMS \left[ \frac{k_r}{1 - \left(\frac{G}{G_s}\right)^\alpha} \right] \text{ when } G < G_s$$

where

$t_r(G)$ (seconds)

$k_r$

$\alpha$

$G$

$G_s$

TMS

theoretical reset time with constant value of  $G$ ,  
 constants characterizing the selected curve (in seconds),  
 constant characterizing the selected curve (no dimension),  
 measured value of the characteristic quantity, Fourier base harmonic of the residual current,  
 preset value of the characteristic quantity (TOC51N\_StCurr\_IPar\_, Start current),  
 preset time multiplier (no dimension).

	IEC ref		$k_r$	$\alpha$
1	A	IEC Inv	Resetting after fix time delay, according to preset parameter TOC51N_Reset_TPar_ "Reset delay"	
2	B	IEC VeryInv		
3	C	IEC ExtInv		
4		IEC LongInv		
5		ANSI Inv	0,46	2
6	D	ANSI ModInv	4,85	2
7	E	ANSI VeryInv	21,6	2
8	F	ANSI ExtInv	29,1	2
9		ANSI LongInv	4,6	2
10		ANSI LongVeryInv	13,46	2
11		ANSI LongExtInv	30	2

*Table 1-2 The resetting constants of the standard dependent time characteristics*

The inverse type characteristics are also combined with a minimum time delay, the value of which is set by user parameter TOC51N\_MinDel\_TPar\_ (Min. Time Delay).

The end of the effective range of the dependent time characteristics ( $G_D$ ) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:


$$t(G) = TMS \left[ \frac{k_r}{\left(\frac{G_D}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

The combined logic requires expiry both the time defined by the inverse characteristic with the definite section AND the expiry of the minimum time defined by the "Min. Time Delay" parameter.

The inverse characteristic is valid above  $G_T = 1,1 * G_s$ . Above this value the function is guaranteed to operate.

### 3.1.5.2. Structure of the residual overcurrent protection algorithm

Fig.1-2 shows the structure of the residual overcurrent protection (TOC51N) algorithm.

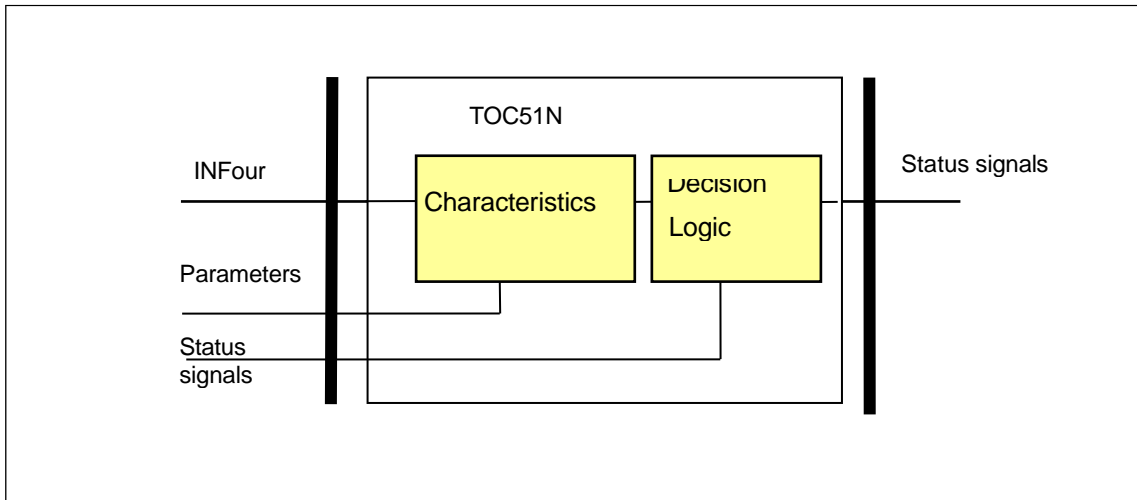

*Figure 1-2 Structure of the residual overcurrent protection algorithm*

The **inputs** are

the RMS value of the fundamental Fourier component of the residual current ( $I_N=3I_0$ ),  
parameters,  
status signals.

The **outputs** are

the binary output status signals.

The **software modules** of the residual overcurrent protection function:

#### **Characteristics**

This module calculates the required time delay based on the RMS value of the fundamental Fourier component of the residual current.

#### **Decision logic**

The decision logic module combines the status signals to generate the trip command of the function.

The following description explains the details of the individual components.

C

### 3.1.5.3. The definite time and the inverse type characteristics

This module calculates the required time delay based on the Fourier components of the residual current. The formulas applied are described in Chapter 1.1.

The **inputs** are the basic Fourier components of the residual current (INFour) and parameters.

The **outputs** are the internal status signals of the function. These indicate the started state and the generated trip command if the time delay determined by the characteristics expired.

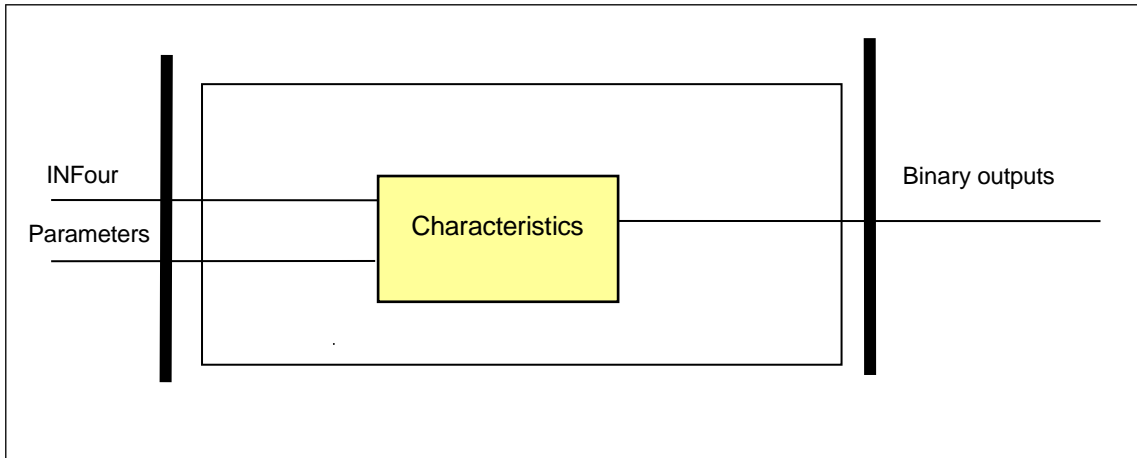


Figure 1-3 Schema of the characteristic calculation

#### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
TOC51N_Oper_EPar_	Operation	Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	Off

Table 1-3 The enumerated parameters of the residual overcurrent protection function

#### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
TOC51N_StCurr_IPar_	Start Current *	%	10	1000	1	50
TOC51N_StCurr_IPar_	Start Current **	%	5	1000	1	50

\* In = 1 A or 5 A

\*\* In = 200 mA or 1 A

Table 1-4 The integer parameters of the residual overcurrent protection function



C

**Float parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Time multiplier of the inverse characteristics (OC module)						
TOC51N_Multip_FPar_	Time Multiplier		0.05	15	0.01	1.0

*Table 1-5 Float parameter of the OC function block*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics:						
TOC51N_MinDel_TPar_	Min Time Delay *	msec	40	60000	1	100
Definite time delay:						
TOC51N_DefDel_TPar_	Definite Time Delay **	msec	40	60000	1	100
Reset time delay for the inverse characteristics:						
TOC51N_Reset_TPar_	Reset Time*	msec	60	60000	1	100

\*Valid for inverse type characteristics only

\*\*Valid for definite type characteristics only

*Table 1-6 Timer parameters of the residual overcurrent protection function*

The **binary output status signals** of the residual overcurrent protection function are listed in [Table 1-7](#).

Binary output signals	Signal title	Explanation
TOC51N_St_Grl_	Start L1	Starting of the function
TOC51N_Tr_Grl_	Trip L1	Trip command of the function

*Table 1-7 The binary output status signals of the residual overcurrent protection function*

### 3.1.5.4. The decision logic (Decision logic)

The decision logic module combines the status signals to generate the trip command of the function.

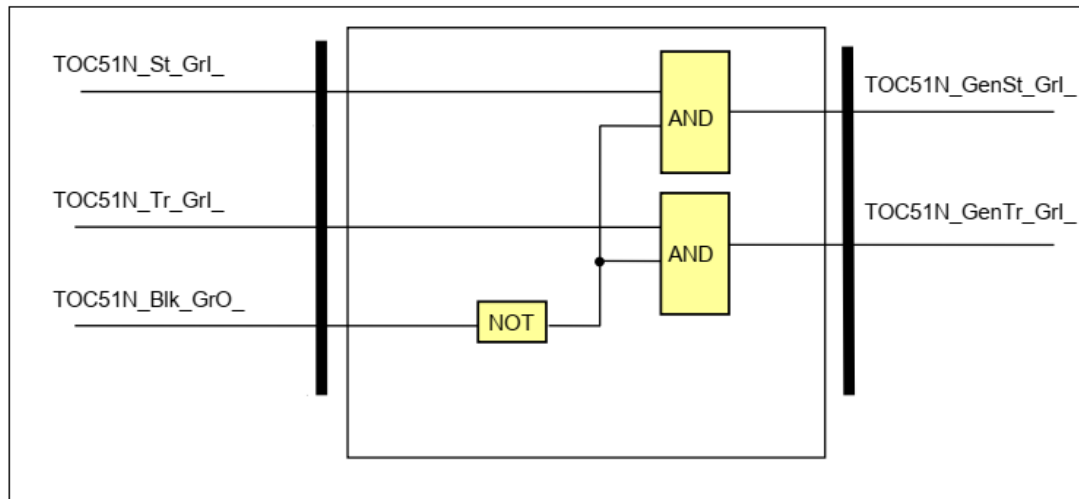


Figure 1-4 The (simplified) logic scheme of the residual overcurrent protection function

Binary input signals	Signal title	Explanation
TOC51N_St_Grl_	Start	Starting of the function
TOC51N_Tr_Grl_	Trip	Trip command of the function

Table 1-8 The binary input status signals of the residual overcurrent protection function

#### Binary status signals

The residual overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**


Binary status signal	Explanation
TOC51N_Blk_GrO_	Output status of a graphic equation defined by the user to disable the residual overcurrent protection function.

Table 1-9 The binary input signal of the residual overcurrent protection function

Binary output signals	Signal title	Explanation
TOC51N_GenSt_Grl_	General Start	General starting of the function
TOC51N_GenTr_Grl_	General Trip	General trip command of the function


Table 1-10 The binary output status signals of the residual overcurrent protection function



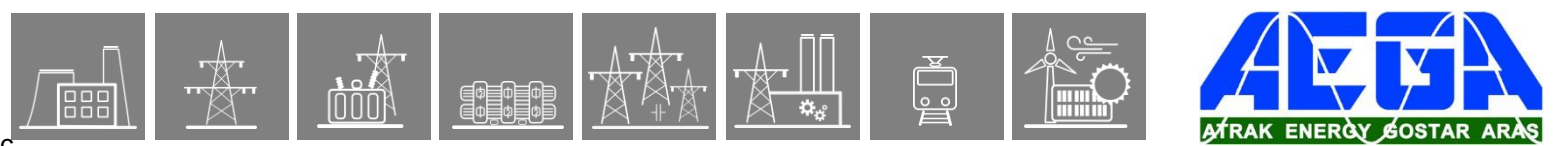

### 3.1.5.5.5. The function block

The function block of the residual overcurrent protection function is shown in [Figure 1-5](#). This block shows all binary input and output status signals that are applicable in the graphic equation editor.

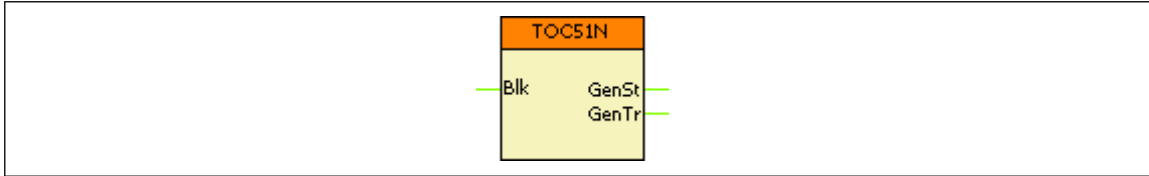


*Figure 1-5 The function block of the residual overcurrent protection function*

### 3.1.6. Inrush current detection function

#### 3.1.6.1. Application

When an inductive element with an iron core (transformer, reactor, etc.) is energized, high current peak values can be detected. This is caused by the transient asymmetric saturation of the iron core as a nonlinear element in the power network. The sizing of the iron core is usually sufficient to keep the steady state magnetic flux values below the saturation point of the iron core, so the inrush transient slowly dies out. These current peaks depend also on random factors such as the phase angle at energizing. Depending on the shape of the magnetization curve of the iron core, the detected peaks can be several times above the rated current peaks. Additionally, in medium or high voltage networks, where losses and damping are low, the indicated high current values may be sustained at length. [Figure 1-1](#) shows a typical example for the inrush current shapes of a three-phase transformer.

As a consequence, overcurrent relays, differential relays or distance relays may start, and because of the long duration of the high current peaks, they may generate an unwanted trip command.

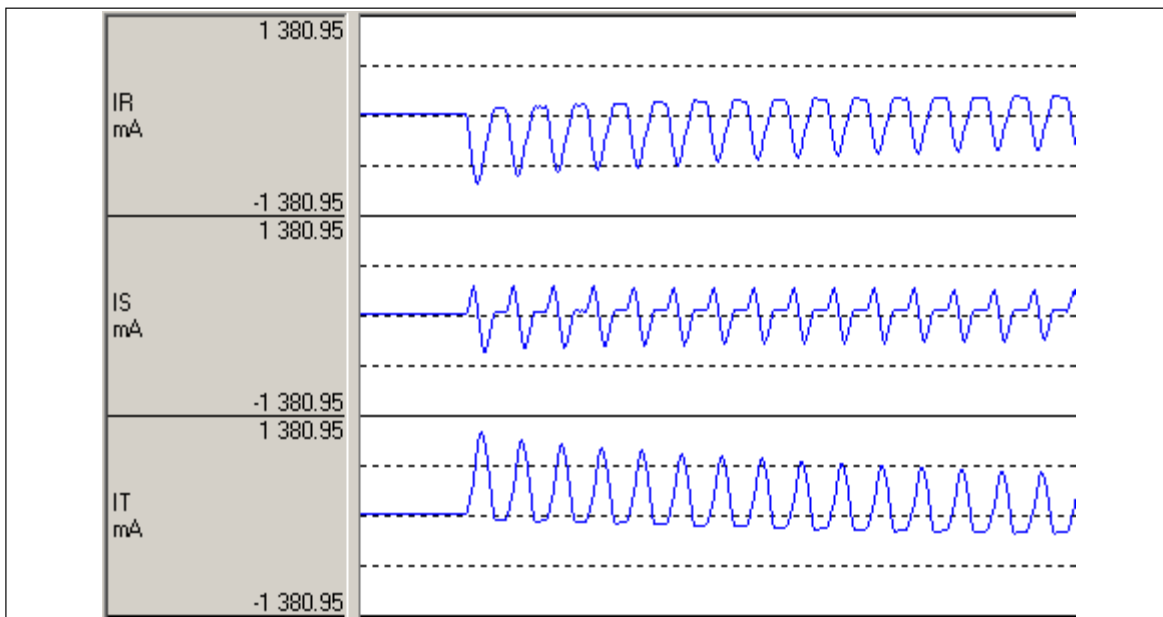

*Figure 1-1 Example: A typical inrush current*

The inrush current detection function can distinguish between high currents caused by overload or faults and the high currents during the inrush time.

Using the inrush detection binary signals, other protection functions can be blocked during the transient period so as to avoid the unwanted trip.

Some protection functions use these signals automatically, but a stand-alone inrush detection function block is also available for application at the user's discretion.



### 3.1.6.2. Inrush current detection function overview

The function block of the inrush current detection function is shown in Figure 2-1. This block shows all binary input and output status signals that are applicable in the graphic equation editor.

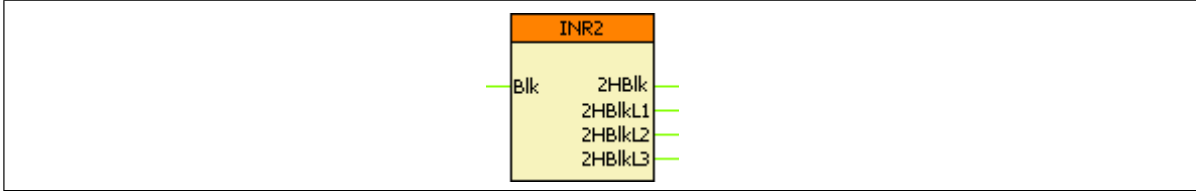


Figure 2-1 The function block of the inrush current detection function

### 3.1.6.2.1. Settings

#### 3.1.6.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 Parameters of the inrush current detection function

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, On	-	Off	Enabling the function
2 <sup>nd</sup> Harm Ratio	%	5 – 50	1	15	Ratio of the second harmonic Fourier component and the basic harmonic component.
IPh Base Sens	%	20 – 100	1	30	The function operates only if the base harmonic component is be above this setting

### 3.1.6.2.2. Function I/O

This section briefly describes the analogue and digital inputs and outputs of the function block.

#### 3.1.6.2.2.1. Analogue inputs

The basic and second Fourier components of three phase currents.

#### 3.1.6.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side function block in the Logic editor.

*Table 2-2 The binary input signal of the inrush current detection function*

BINARY INPUT SIGNAL	EXPLANATION
INR2_ <b>BIk</b> _GrO_	Blocking input of the function

#### 3.1.6.2.2.3. Binary output signals (graphed input statuses)

These signals can be used in EuroCAP to assign to LED, user LCD object etc. Parts written in **bold** are seen on the right side of the function block in the *Logic Editor*.

*Table 2-3 The binary output signals of the inrush current detection function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
INR2_ <b>2HBIk</b> _GrI_	Inrush	Inrush current detected in one of the three phases
INR2_ <b>2HBIkL1</b> _GrI_	Inrush L1	Inrush current detected in phase L1
INR2_ <b>2HBIkL2</b> _GrI_	Inrush L2	Inrush current detected in phase L2
INR2_ <b>2HBIkL3</b> _GrI_	Inrush L3	Inrush current detected in phase L3

#### 3.1.6.2.2.4. Online data

Visible values on the *online data* page.

*Table 2-4 Online displayed data of the inrush current detection function*

SIGNAL TITLE	DIMENSION	EXPLANATION
Inrush L1	-	Inrush current detected in phase L1
Inrush L2	-	Inrush current detected in phase L2
Inrush L3	-	Inrush current detected in phase L3
Inrush	-	Inrush current detected in one of the three phases


#### 3.1.6.2.2.5. Events

The following events are generated in the event list, as well as sent to the SCADA according to the configuration.

*Table 2-5 Generated events of the inrush current detection function*

EVENT	VALUE	EXPLANATION
2 <sup>nd</sup> Harm. Restraint	off, on	Inrush current detected in one of the three phases



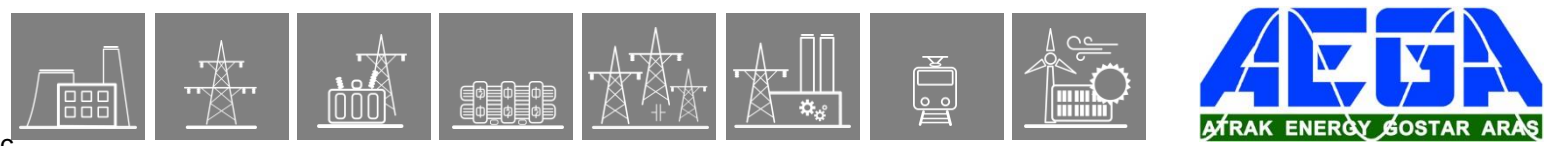

### 3.1.6.2.3. Technical data

*Table 2-6 Technical data of the inrush current detection function*

FUNCTION	VALUE	ACCURACY
Current accuracy	20 – 2000% of $I_n$	$\pm 1\%$ of $I_n$

### 3.1.6.2.4. Notes for testing

The differential protection function block (DIF87) has its own, built-in 2<sup>nd</sup> harmonic restraint feature which works independently from the function described here. For further information, see the Differential Protection Function description.

Keep in mind that there is a minimum requirement for the fundamental component of the current (% is the % of the CT nominal), and the function operates according to the 2<sup>nd</sup> harmonic content related to the fundamental component.

### 3.1.7. High-Impedance Differential Protection

#### 3.1.7.1. Abstract

High Impedance Differential Protections can detect faults on busbars or transformer windings. The basic principle can be explained by an object with two ends (Figure 1-1). On the secondary side the current transformers (CTs) are all connected in parallel to the stabilizing resistor ( $R_{ST}$ ). A sensitive current relay (87B) is connected in series to the stabilizing resistor. It is common to use a non-linear resistor („MOV”) across the differential branch. All CTs must have the same ratio and construction.

During an external fault, with ideal current transformers (which means that CT saturation does not occur) there is no current flowing through the differential branch, so the current relay does not operate. The worst scenario is when only one CT is completely saturated during the whole period, while the other CT is not saturated. Of course, there can be more other ends with non-saturated CTs. In the example these other ends are concentrated in one end which is the end with CT called „CT1”. In the first case the stabilizing resistor is negligibly small (it is actually the low impedance differential protection, see on Figure 1-1). In this event the magnetizing inductance of the saturated CT becomes almost zero, and the higher exciting current is missed in the differential branch. It means that significant differential current ( $I_d$ ) flows, so the relay must be set carefully to avoid false operations.

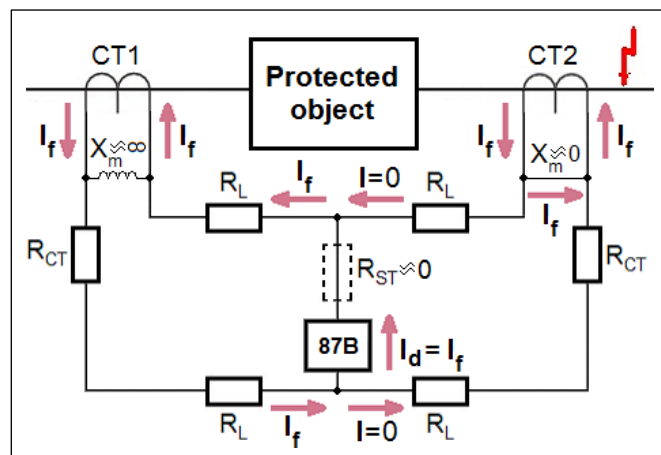


Figure 1-1 Low Imp. Diff. Prot. ( $R_{ST} \approx 0$ )

In the second case the stabilizing resistor is high compared to the sum of CT winding resistance ( $R_{CT}$ ) and connection lead resistances ( $2 \cdot R_L$ ), so almost the complete fault current flows through the connection leads instead of the differential branch (Figure 1-2). The voltage ( $V_{ST}$ ) across the differential branch can be used for setting the current relay.

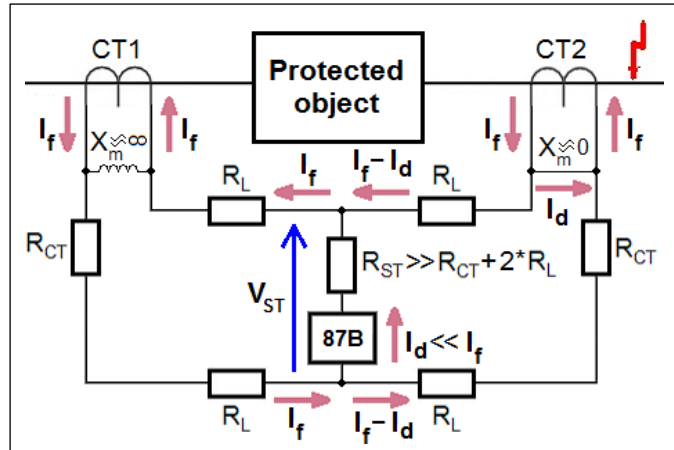


Figure 1-2 High Imp. Diff. Prot. ( $R_{ST} \gg R_{CT} + 2 * R_L$ )

During an internal fault, all of the CT's currents flow in the same direction (Figure 1-3). As the sum of these currents will flow into the differential branch, it may result in high potential rise of the stabilizing resistor so that can cause a fast saturation in the CTs. The MOV can also operate which is used to limit the peak voltage to a value below the insulation level of the current transformers and stabilizing resistor. It means that the differential current is highly distorted. Because of the non-linear behavior of the CTs and MOV, a special differential current measurement is required. Protecta uses a special hardware for the measurement: the CT5153+ can detect the peaks of the differential current.

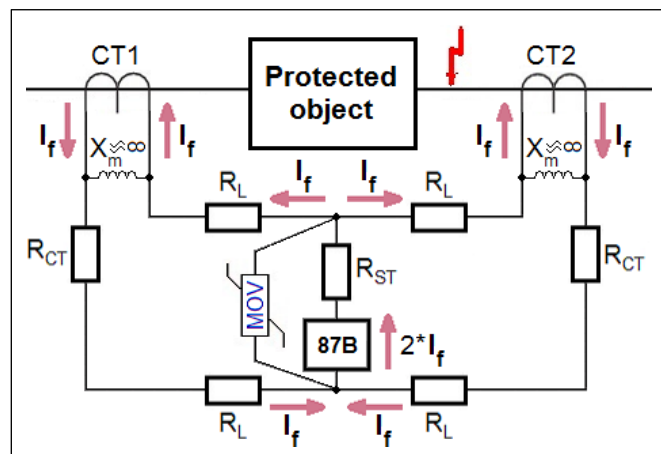


Figure 1-3 High Imp. Diff. Prot. (internal fault)

This document presents principles of high impedance differential protection and introduces an example how to set the relay and also how to choose the appropriate stabilizing resistor (and MOV if it is required).

As the setting procedure includes many calculations and requirements, there is a Microsoft Excel software available to help all the users to go through the whole process (see Appendix A – Excel software for the setting procedure)



### 3.1.7.2. Setting procedure

The calculations must be considered in this order:

- **Calculation of stabilizing voltage ( $V_{ST}$ )**
- **Calculation of CT knee point voltage ( $V_k^{RMS}$ )**
- **Selection of stabilizing resistor ( $R_{ST}$ )**
- **Calculation of relay setting current ( $I_{SET}$ )**
- **Requirement for CT knee point voltage**
- **The stabilizing resistor power rating ( $P_{ST}$ )**
- **Decision of using MOV**
- **(If MOV is utilized) Requirements for the MOV values ( $C, \beta$ )**
- **CT open circuit (CT failure) detection**

### 3.1.7.2.1. Calculation of stabilizing voltage ( $V_{ST}$ )

During external faults, the main goal is to avoid false operations. For reaching this goal it is necessary to calculate the possible maximum voltage of the stabilizing resistor when external fault occurs. To calculate this voltage, the worst scenario must be considered (see on **Figure 1-2**). It is proven that the voltage across the differential branch is the highest when the stabilizing resistor ( $R_{ST}$ ) is much greater than the secondary circuit resistance ( $R_{CT}+2 \cdot R_L$ ). It means that the differential current is negligible. Other conditions are the following:

- One CT is completely saturated during the whole period ( $X_m \approx 0$ )
- Other CTs are not saturated at all ( $X_m \approx \infty$ )
- The decaying DC component of the maximum through fault is the highest
- The primary time constant is almost infinite ( $t_{pr} \approx \infty$ )
- The leakage current of the MOV can also be neglected

The maximum voltage depends on the maximum through fault current ( $I_{f,ext}^{RMS}$ ) and the whole secondary circuit resistance which includes the CT secondary winding resistance ( $R_{CT}$ ) and the connection leads resistance ( $R_L$ ) between the CT and the relay (it must be considered twice because of the forth and back direction).

In this case the complete fault current flows through the secondary circuit resistance, so the stabilizing resistor voltage is equal to fault current multiplied by secondary current resistance. Because the secondary circuit resistances are different in all of the CT circuits, the peak voltage calculations must be performed for all these circuits:

$$V_{f,ext}^i = 2 \cdot \sqrt{2} \cdot I_{f,ext}^{RMS} \cdot (R_{CT} + 2 \cdot R_L^i) \quad (1)$$

where:

- $I_{f,ext}^{RMS}$  = maximum through fault secondary current
- $i$  = CT circuit number (1, 2, ... ,  $n$ )
- $n$  = number of current transformers parallel with the relay
- $R_{CT}$  = CT secondary winding resistance
- $R_L$  = connection lead resistance between the CT and the relay

The stabilizing voltage is higher than the maximum of all peak voltage calculations:

$$V_{ST} = (1 + \varepsilon) \cdot MAX\{V_{f,ext}^i\} \quad (2)$$

where:

- $\varepsilon$  = safety margin ( $\varepsilon = 0.15$ )
- $V_{f,ext}^i$  = peak voltage calculation for each CT circuit ( $i = 1, 2, \dots, n$ )



### 3.1.7.2.2. Calculation of CT knee point voltage ( $V^{RMS}$ )

During internal fault, the CT saturation has leading effect on the distortion of differential current. The knee point voltage is not always given by the manufacturers, so it is required to estimate an equivalent knee point voltage.

It is common to know the nominal current ( $I_n^{RMS}$ ) and the accuracy limit factor ( $n_{ALF}$ ) of the current transformer, where the CT's error is also exactly given. For example a CT with 5P10 means that the CT has 5% error at  $10 \cdot I_n^{RMS}$  current (10 is the accuracy limit factor). There is also some other information which is known: rated burden resistance ( $R_b$ ) and secondary resistance ( $R_{CT}$ ) of the CT. According to IEC-61869-2 actual standard the CT knee point voltage can be estimated as follows:

$$V_k^{RMS} = n_{ALF} \cdot I_n^{RMS} \cdot (R_{CT} + R_b) \quad (3)$$

where:

- $n_{ALF}$  = CT accuracy limit factor
- $I_n^{RMS}$  = CT nominal secondary current
- $R_{CT}$  = CT secondary winding resistance
- $R_b$  = rated burden resistance ( $R_b = P_n / I_n^2$ )
- $P_n$  = CT rated burden.



### 3.1.7.2.3. Selection of stabilizing resistor ( $R_{ST}$ )

The selection of stabilizing resistor depends on the minimal internal fault current ( $I_{f,MINint}^{RMS}$ ). In order to sense all internal faults a stabilizing current ( $I_{ST}$ ) must be calculated. It must be below the peak of minimum internal fault current. All of the CT exciting currents ( $I_e$ ) are missed from the differential branch, so the exciting currents at stabilizing voltage must be subtracted from the minimum internal fault current. The leakage current of the MOV (at  $V_{ST}$ ) can be neglected. The guideline for calculating the stabilizing current is:

$$I_{ST} = (1 - \varepsilon) \cdot \sqrt{2} \cdot I_{f,MINint}^{RMS} - n \cdot I_e \quad (4)$$

where:

- $I_{f,MINint}^{RMS}$  = minimum internal fault secondary current
- $\varepsilon$  = safety margin ( $\varepsilon = 0.15$ )
- $n$  = number of current transformers parallel with the relay
- $I_e$  = current transformer exciting peak current at  $V_{ST}$  (see on Figure 2-1). In the calculations the exciting peak current is:  $I_e = V_{ST} \cdot \frac{I_{e,k}^{RMS}}{V_k^{RMS}}$ , where  $I_{e,k}^{RMS}$  is the exciting current at rated CT knee point voltage ( $V_k^{RMS}$ )

If the CT excitation characteristic is not given, it is necessary to estimate the missing current at stabilizing voltage. The CT accuracy class (X, 5P or 10P) is always known.

If class 5P or class 10P current transformers are implemented, then the current error ( $\varepsilon_c$ ) at nominal current can be determined. According to IEC-61869-2 actual standard the current error is:

- maximum 1% at nominal current in case of 5P class
- maximum 3% at nominal current in case of 10P class

It is assumed that the excitation curve is linear between zero and CT knee point voltage (Figure 2-1). So the current error is also linear below the knee point voltage. The missing exciting current can be estimated by:

$$I_e = n_{ALF} \cdot \frac{\varepsilon_c}{100} \cdot \frac{I_n^{RMS}}{V_k^{RMS}} \cdot V_{ST} \quad (5)$$

where:

- $n_{ALF}$  = CT accuracy limit factor
- $I_n^{RMS}$  = CT nominal secondary current
- $\varepsilon_c$  = CT current error at nominal current
- $V_{ST}$  = stabilizing voltage
- $V_k^{RMS}$  = CT knee point voltage

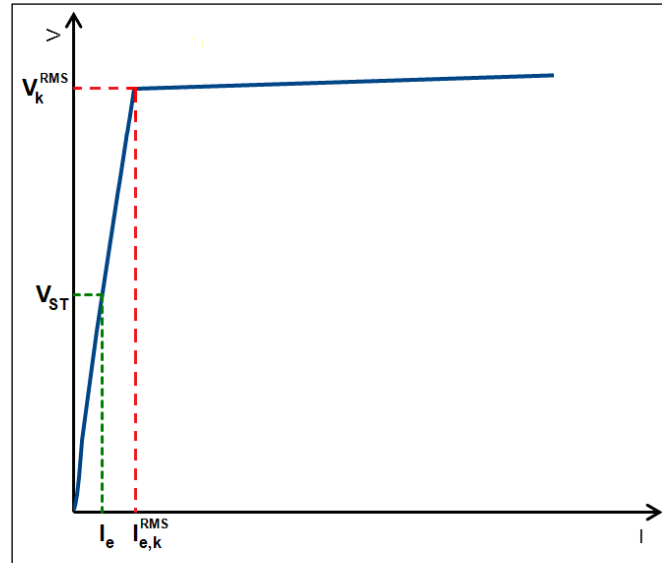


Figure 2-1 CT exciting peak current at  $V_{ST}$

If class X current transformers are implemented, then the maximum exciting current ( $I_{e,k}^{RMS}$ ) at rated CT knee point voltage ( $V_k^{RMS}$ ) is always given (according to the IEC 60044 – 1 standard). So the exciting current at stabilizing voltage can be calculated (see above).

It can be possible that the calculated stabilizing current (formulae (4)) is negative, as the sum of exciting currents is higher than the minimal internal fault current. It means that the magnetizing branch impedance of the current transformer is too small, so the voltage across the stabilizing resistor is lower than the stabilizing voltage during minimal internal fault. In this case the relay cannot operate. The two acceptable solutions:

- try to reduce the connection lead resistance ( $R_L$ ), so the stabilizing voltage ( $V_{ST}$ ) will be lower (formulae (1))
- select another current transformers which have better accuracy class (for example 5P instead of 10P) or higher rated burden (for example 15 VA instead of 5 VA).

The possible resistance value can be determined by division of the stabilizing voltage and the stabilizing current. The stabilizing resistor must be selected as follows:


$$R_{ST} \geq \frac{V_{ST}}{I_{ST}} \quad (6)$$

where:

- $V_{ST}$  = stabilizing voltage
- $I_{ST}$  = stabilizing current

The selected stabilizing resistor value must be higher than the calculated quotient, and it is recommended to select a resistor which is the closest to  $V_{ST}/I_{ST}$ .



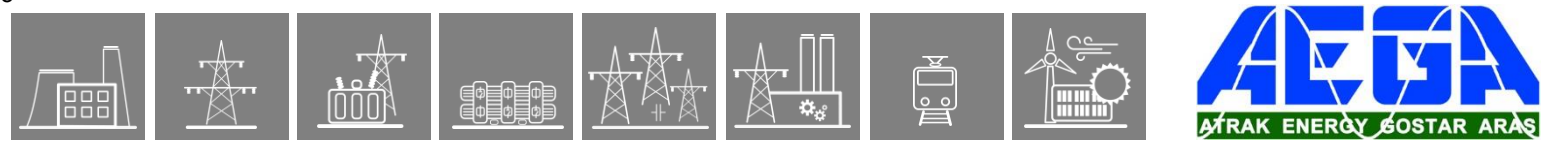

### 3.1.7.2.4. Calculation of relay setting current ( $I_{SET}$ )

After the stabilizing resistor is selected, the relay setting current must be simply set to:

$$I_{SET} = \frac{V_{ST}}{R_{ST}} \quad (7)$$

where:

- $V_{ST}$  = stabilizing voltage
- $R_{ST}$  = stabilizing resistance

If the calculated setting current cannot be exactly set in the relay, then a higher current value must be set which is the closest to  $V_{ST}/R_{ST}$ .



### 3.1.7.2.6. The stabilizing resistor power rating ( $P_{ST}$ )

During internal faults the whole fault current flows through the selected stabilizing resistor until CT saturation occurs. The power of stabilizing resistor depends on the fault current raised to the power 2 and the stabilizing resistance. So the power is the highest when the current is the highest (= maximum internal fault current  $I_{f,MAXint}^{RMS}$ ).

If the CTs are not saturated, then the whole fault current flows through the stabilizing resistor. If the CTs are saturated, then just a part of the current flows through the stabilizing resistor (Figure 2-3). So it is necessary to calculate the effective value of the maximum internal fault current. The continuous power rating must be also determined. Both the network angular frequency ( $\omega = 2 \cdot \pi \cdot f$ ) and the periodic time ( $T = 1/f$ ) are known. It is assumed in all power rating calculations that MOV is not connected to the stabilizing resistor.

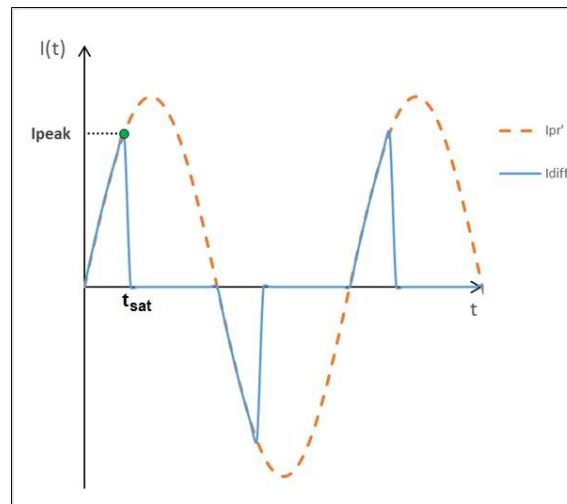


Figure 2-3 Distorted differential current

If  $V_k^{RMS} \geq I_{f,MAXint}^{RMS} \cdot R_{ST}$  the calculation of short time (~1 sec) power rating is:

$$P_{ST}^{sh} = (I_{f,MAXint}^{RMS})^2 \cdot R_{ST} \tag{9}$$

where:

- $I_{f,MAXint}^{RMS}$  = maximum internal fault secondary current
- $R_{ST}$  = stabilizing resistor

If  $V_k^{RMS} < I_{f,MAXint}^{RMS} \cdot R_{ST}$  the calculation of short time (~1 sec) power rating is:

$$P_{ST}^{sh} = \left( I_{f,MAXint}^{RMS} \cdot \sqrt{2 \cdot \frac{t_{sat}}{T} - \frac{\sin(2 \cdot \omega \cdot t_{sat})}{2\pi}} \right)^2 \cdot R_{ST} \tag{10}$$

where:

- $I_{f,MAXint}^{RMS}$  = maximum internal fault secondary current



- $R_{ST}$  = stabilizing resistor
- $T$  = periodic time (usually 0.02 sec)
- $\omega$  = angular frequency (usually 314.159 rad/sec)
- $t_{sat}$  = time interval between the zero cross of the current and the beginning of CT saturation calculated as follows (the result of  $\cos^{-1}$  must be in radian):

$$t_{sat} = \frac{1}{\omega} \cdot \cos^{-1} \left( 1 - \frac{2 \cdot V_k^{RMS}}{I_{f,MAXint}^{RMS} \cdot R_{ST}} \right) \quad (11)$$

- $V_k^{RMS}$  = CT knee point voltage

The calculation of continuous power rating is:

$$P_{ST}^{co} = \left( \frac{I_{SET}}{\sqrt{2}} \right)^2 \cdot R_{ST} \quad (12)$$

where:

- $I_{SET}$  = relay setting current
- $R_{ST}$  = stabilizing resistor

### 3.1.7.2.7. Decision of using MOV

Before selecting a MOV, it is necessary to calculate the highest peak voltage on the stabilizing resistor without a MOV, because it is not always required. During internal faults, the voltage is the highest when the internal fault current is the highest, so a calculation is needed for checking the maximum peak voltage. The CT saturation must be also considered. It is assumed that MOV is not connected in circuit.

If  $V_k^{RMS} \geq 0.5 \cdot I_{f,MAXint}^{RMS} \cdot R_{ST}$  the peak voltage can be calculated from:

$$V_{max} = \sqrt{2} \cdot I_{f,MAXint}^{RMS} \cdot R_{ST} \quad (13)$$

where:

- $I_{f,MAXint}^{RMS}$  = maximum internal fault secondary current
- $R_{ST}$  = stabilizing resistor

If  $V_k^{RMS} < 0.5 \cdot I_{f,MAXint}^{RMS}$  the peak voltage can be calculated from:

$$V_{max} = \sqrt{2} \cdot I_{f,MAXint}^{RMS} \cdot R_{ST} \cdot \sin(\omega \cdot t_{sat}) \quad (14)$$


where:

- $I_{f,MAXint}^{RMS}$  = maximum internal fault secondary current
- $R_{ST}$  = stabilizing resistor
- $\omega$  = angular frequency (usually 314.159 rad/sec)
- $t_{sat}$  = time interval calculated with formulae (11)

There is a safety limit voltage ( $V_L$ ) for the CTs and stabilizing resistor which cannot be exceeded during internal faults (usually  $V_L = 2$  kV).

If  $V_{max} < V_L$ , then MOV is not required.

If  $V_{max} > V_L$ , then MOV must be used to limit the peak voltage.

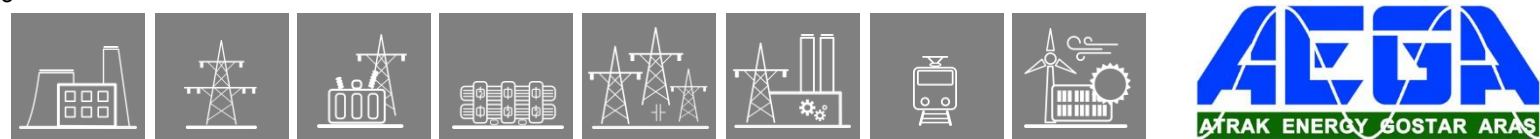

### 3.1.7.2.8. Requirements for the MOV values (C, $\beta$ )

If MOV is required to limit the peak voltage, the MOV values must be specified. The operate characteristic is defined by:

$$I = \left(\frac{V}{C}\right)^{\frac{1}{\beta}} \quad (15)$$

where:

- $I$  = calculated current across the MOV
- $V$  = MOV voltage (= voltage across the stabilizing resistor)
- $C, \beta$  = constant values

The  $\beta$  value is usually adjustable between  $\beta = 0.20$  to  $\beta = 0.25$ . The setting of  $\beta$  value has no remarkable effort on the voltage, so there is no any specific requirement for setting  $\beta$ .

The  $C$  value is a very similar parameter to the knee point voltage: when  $V = C$  then the calculated current is 1A, and if the voltage increases from  $V = C$  then the current strongly goes up (and the resistance of MOV drops dramatically). Below  $V = C$  the resistance starts to rise significantly.

As it is important to sense all internal faults, the MOV must not operate at the voltage where the relay must operate. The requirement for  $C$  value is the following:

$$C \geq 2 \cdot I_{SET} \cdot R_{ST} \quad (16)$$

where:

- $I_{SET}$  = relay setting current
- $R_{ST}$  = stabilizing resistor

Note: there is another opportunity to limit the peak voltage: Protecta recommends to use thyristor for protecting the CTs and the stabilizing resistor.

### 3.1.7.2.9. CT open circuit (CT failure) detection

If one of the CTs is open-circuited, it will result in an increased current to flow through the differential element. If this current is greater than the setting value of the element, then the high impedance differential protection function can cause a mal-operation.

The differential current will be determined by the load current flowing through the missing CT input, see the figure below (where CT2 is open-circuited):

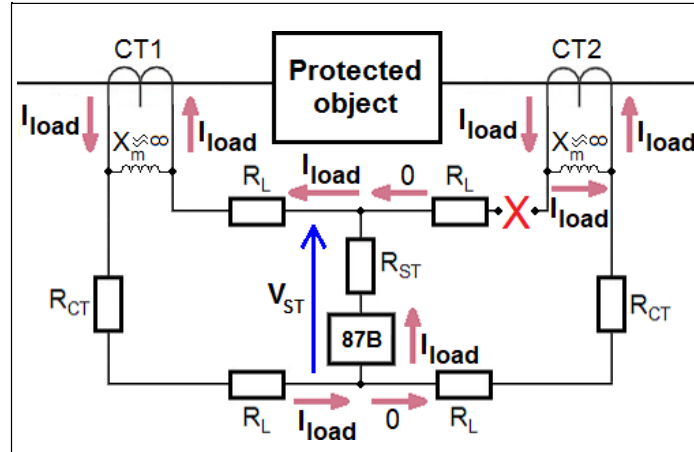


Figure 2-4 High Imp. Diff. Prot. during CT failure

In this case the relay should not operate, so the setting current of the differential protection must be higher than the maximum load secondary current:

$$I_{SET} > I_{load}^{MAX} \quad (17)$$

On the other hand, the CT failure must be detected in order to block the relay and avoid false operation during external faults. For this reason another sensitive high impedance differential protection element must be applied. This another differential protection (let's call it as „CT failure detection function”) should detect the CT open circuit even if the actual load current is the lowest, so this load secondary current will determine the maximum setting current:


$$I_{SET}^{CT\ fail.} \leq I_{load}^{MIN} \quad (18)$$

The block signal output of the CT failure detection function must be delayed by a timer to avoid unwanted blocking of the protection function during an internal fault.

$$t_{delay}^{CT\ fail.} \geq 1sec \quad (19)$$

This solution provides enough time for the relay to operate during an internal fault, so the protection function will not detect the internal fault as CT failure and it provides stable and fast operation.

For further information, the configuration of the CT open circuit detection can be seen in the Appendix.

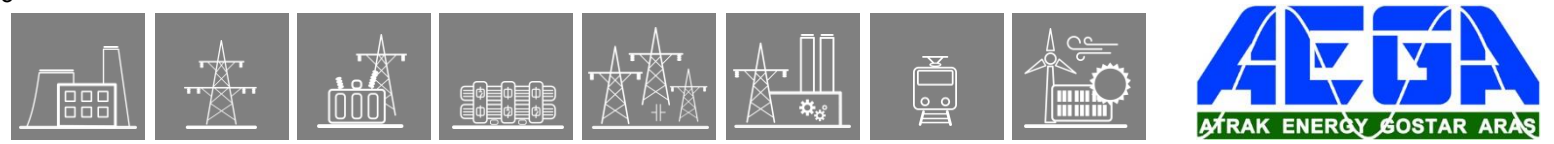

NOTE: based on the above mentioned detection method, it results in a relatively high setting current of differential protection which means that the relay will not be sensitive to internal faults with low fault currents. To avoid this sensitivity problem, the other solution for the detection of CT failure is to duplicate the number of differential protections with separated CT circuits. In this case the operation is allowed if both of the differential protections detect an internal fault in the same time. This solution creates the opportunity to decrease the setting current so the differential protection can be sensitive for internal faults with low fault currents as well.







### Connection detail:

- Connection lead resistance ( $R_L$ ):  $1.5\Omega$

#### 1. Calculation of stabilizing voltage (VST)

With formulae (1) and (2) the stabilizing voltage can be calculated:

$$V_{f,ext} = 2 \cdot \sqrt{2} \cdot I_{f,ext}^{RMS} \cdot (R_{CT} + 2 \cdot R_L) = 2 \cdot \sqrt{2} \cdot \left(\frac{5100}{600}\right) \cdot (2 + 2 \cdot 1.5) = 120.2V$$

$$V_{ST} = (1 + \varepsilon) \cdot V_{f,ext} = 1.15 \cdot 120.2 = 138.2V$$

#### 2. Calculation of CT knee point voltage ( $V_k^{RMS}$ )

The knee point voltage can be estimated by (formulae (3)):

$$V_k^{RMS} = n_{ALF} \cdot I_n^{RMS} \cdot (R_{CT} + R_b) = 20 \cdot 1 \cdot \left(2 + \frac{30}{1^2}\right) = 640V$$

#### 3. Selection of stabilizing resistor (RST)

Because the CT excitation characteristic is not given, it is necessary to estimate the exciting current at  $V_{ST}$ . The 5P class CT has maximum 1% current error below the knee point voltage, so the calculation of exciting current is the following (formulae (5)):

$$I_e = n_{ALF} \cdot \frac{\varepsilon_c}{100} \cdot \frac{I_n^{RMS}}{V_k^{RMS}} \cdot V_{ST} = 20 \cdot \frac{1}{100} \cdot \frac{1}{640} \cdot 138.2 = 0.043A$$

The stabilizing current can be determined as follows (formulae (4)):

$$I_{ST} = (1 - \varepsilon) \cdot \sqrt{2} \cdot I_{f,MINint}^{RMS} - n \cdot I_e = 0.85 \cdot \sqrt{2} \cdot \left(\frac{110}{600}\right) - 4 \cdot 0.043 = 0.048A$$

The possible stabilizing resistor values (formulae (6)):

$$R_{ST} \geq \frac{V_{ST}}{I_{ST}} = \frac{138.2}{0.048} = 2879\Omega$$

The selected stabilizing resistor is  $R_{ST} = 3000\Omega$ .

#### 4. Calculation of relay setting current (ISET)

With the stabilizing resistor the relay setting current can be chosen (formulae (7)):

$$I_{SET} = \frac{V_{ST}}{R_{ST}} = \frac{138.2}{3000} = 0.046A$$

This current value cannot be exactly set in the relay. A higher setting current must be set which is the closest to  $V_{ST}/R_{ST}$ . So the chosen setting current is:  $I_{SET} = 0.05A$ .

#### 5. Requirement for CT knee point voltage

The CT knee point voltage requirement is the following (formulae (8)):

$$V_k^{RMS} \geq 0.5 \cdot I_{f,MINint}^{RMS} \cdot R_{ST} = 0.5 \cdot \left(\frac{110}{600}\right) \cdot 3000 = 275V$$

The CT knee point voltage meets the voltage requirement.

#### 6. The stabilizing resistor power rating (PST)

The CT knee point voltage is lower than the calculated voltage ( $V_k^{RMS} < I_{f,MAXint}^{RMS} \cdot R_{ST}$ ). The selected resistor short time (~1 sec) power rating must be at least (formulae (10)):

$$P_{ST}^{sh} = \left( I_{f,MAXint}^{RMS} \cdot \sqrt{2 \cdot \frac{t_{sat}}{T} - \frac{\sin(2 \cdot \omega \cdot t_{sat})}{2\pi}} \right)^2 \cdot R_{ST} =$$

$$= \left( \frac{11200}{600} \cdot \sqrt{2 \cdot \frac{6.8 \cdot 10^{-4}}{2 \cdot 10^{-2}} - \frac{\sin(2 \cdot 314.159 \cdot 6.8 \cdot 10^{-4})}{2 \cdot 3.14159}} \right)^2 \cdot 3000 = 2143W$$

$t_{sat}$  is calculated as follows (formulae (11)):

$$t_{sat} = \frac{1}{\omega} \cdot \cos^{-1} \left( 1 - \frac{2 \cdot V_k^{RMS}}{I_{f,MAXint}^{RMS} \cdot R_{ST}} \right) = \frac{1}{314.159} \cdot \cos^{-1} \left( 1 - \frac{2 \cdot 640}{18.67 \cdot 3000} \right) = 0.68ms$$

The selected resistor continuous power rating must be at least (formulae (12)):

$$P_{ST}^{co} = \left( \frac{I_{SET}}{\sqrt{2}} \right)^2 \cdot R_{ST} = \left( \frac{0.05}{\sqrt{2}} \right)^2 \cdot 3000 = 3.75W$$



## 7. Decision of using MOV

First it is necessary to know the peak voltage ( $V_{max}$ ) which is given by (formulae (14)):

$$\begin{aligned} V_{max} &= \sqrt{2} \cdot I_{f,MAXint}^{RMS} \cdot R_{ST} \cdot \sin(\omega \cdot t_{sat}) = \\ &= \sqrt{2} \cdot 18.67 \cdot 3000 \cdot \sin(314.159 \cdot 6.8 \cdot 10^{-4}) = 16.793kV \end{aligned}$$

If  $V_L = 2kV$ , then  $V_{max}$  is much greater than the limit voltage, so it is required to use MOV.

## 8. Requirements for the MOV values ( $C$ , $\beta$ )

As the  $\beta$  value is not important for the settings, it can be chosen (for example):

$$\beta = 0.22$$

For choosing  $C$  value it must be greater than twice the operating voltage (formulae (16)):

$$C \geq 2 \cdot I_{SET} \cdot R_{ST} = 2 \cdot 0.05 \cdot 3000 = 300V$$

So  $C = 450$  can be selected.

### 3.1.7.4. Appendix

#### 3.1.7.4.1. Appendix A – Excel software for the setting procedure

The excel software which is available at the Protecta website is a helpful tool for setting any type of High Impedance Differential Protection. This software can perform all the calculations and check all the requirements which are related to the setting procedure.

The main steps for using this software are the following:

1. Download the excel file from the Protecta website:

<http://www.protecta.hu>

If Microsoft Office is not accessible on the computer, a free software which can handle XLS files can be used as well (e.g .LibreOffice Calc).

2. Open the excel file, where the first appeared worksheet is called „Input Data” (Figure 4-1). This is the sheet where all the information must be given by the user:

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
1															
2		<b>POWER SYSTEM DETAILS</b>									<b>CONNECTION DETAILS</b>				
3		Frequency	50	Hz							Maximum connection lead resistance	1.5	$\Omega$		
4		Maximum through fault current	5100	A							Number of current transformers	4			
5		Minimum internal fault current	110	A											
6		Maximum internal fault current	11200	A											
7															
8															
9		<b>CT DETAILS</b>									<b>SELECTED VALUES</b>				
10		Primary rated current	600	A							Stabilising resistance	6800	$\Omega$		
11		Secondary rated current	1	A							C (only if MOV is required)	700			
12		Secondary winding resistance	2	$\Omega$											
13		Accuracy class	5P												
14		<b>CT SPECIFICATIONS (CLASS 5P OR CLASS 10P)</b>													
15		Accuracy limit factor	20												
16		Rated burden	30	VA											
17															
18															
19															
20															

Figure 4-1 Sheet “Input Data” in the Excel file

3. Write the required information to the appropriate cell in this order:
  - a) The power system frequency (f) in Hertz (50Hz or 60Hz)
  - b) The maximum through fault primary current of all CT circuits in Ampere
  - c) The minimum internal fault primary current in Ampere. Sometimes it's not known, so a practical selection can be 20-30% of the rated current
  - d) The maximum internal fault primary current in Ampere
  - e) Primary rated current of the current transformer in Ampere
  - f) Secondary rated current of the current transformer in Ampere (1A or 5A)
  - g) The secondary winding resistance ( $R_{CT}$ ) of the current transformer in Ohm

- h) Accuracy class of the current transformer (X, 5P or 10P)
- i) If class 5P or class 10P current transformers are implemented:
- Accuracy limit factor of the current transformer
  - The rated burden ( $P_n$ ) of the current transformer in Volt-ampere
- If class X current transformers are implemented:
- CT knee point voltage in Volt (effective value)
  - the exciting current at CT knee point voltage in Ampere
- j) Maximum connection lead resistance ( $R_L$ ) of all CT circuits in Ohm
- k) Number ( $n$ ) of current transformers connected to the stabilizing resistor (2-20)
4. Check the minimum value of stabilizing resistance on sheet „Results” (Figure 4-2). Then select the suitable values in this order:
- a) Select a stabilizing resistance which is above the „Minimum stabilizing resistance”.
- It can be possible that the „Minimum stabilizing resistance” is a negative value, as the „Stabilizing current” is negative. It means that the magnetizing branch impedance of the current transformer is too small, so the voltage across the stabilizing resistor is lower than the stabilizing voltage during minimum internal fault. In this case the relay cannot operate for minimum internal fault. The two acceptable solutions:
- try to reduce the connection lead resistance ( $R_L$ ), so the stabilizing voltage ( $V_{ST}$ ) will be lower (formulae (1))
  - select another current transformer with a better accuracy class (for example 5P instead of 10P) or higher rated burden (for example 15 VA instead of 5 VA).
- b) Check the answer for „Is MOV required?” on the sheet „Results”. If the answer is „YES”, then select a 'C' value which is above the „Minimum 'C' value”. If the answer is „NO”, then the selection process is finished.
5. Write the selected values to the appropriate cells on the sheet „Input Data”:
- Stabilizing resistance in Ohm
  - C (if MOV is required)
6. Check all the answers for the requirements on sheet „Results”.
- If all the requirements are satisfied, the answer for „Is setting procedure ready” is „YES”. It means that the setting procedure is finished.
  - If one of the requirements is not satisfied, then follow the instruction which is given on the answer cell.
  - If the CT knee point voltage requirement is still not satisfied, then check the current sensitivity criterion (see details on Appendix B – Special calculation method). The calculations and requirements are listed on the sheet „Special calculation method”. If the current sensitivity criterion is satisfied, the answer for „Is setting procedure ready” is „YES” on the sheet „Special calculation method”. It means that the setting procedure is finished.







### 3.1.7.4.3. Appendix C – Configuration of the CT failure detection

In order to sense CT failure, a second high impedance differential protection function block with low setting current can be used. This differential protection (called as „CT failure detection function”) is only activated during a CT failure, so it can give a blocking signal to the general high impedance differential protection element.

The logical scheme of the CT failure detection in EuroCAP can be seen below:

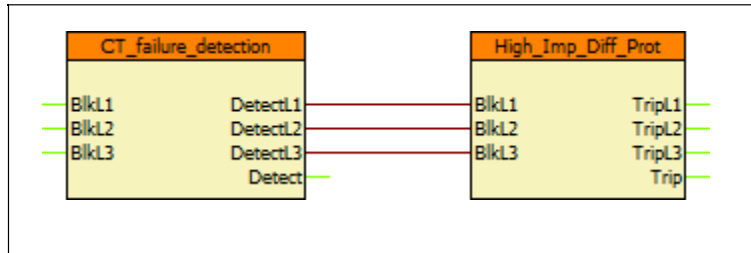


Figure 4-3 Logical scheme of the CT failure detection in EuroCAP

The CT failure detection function provides phase-selective CT open circuit detection solution.

If the high impedance differential protection is used to protect neutral-grounded star transformers, then *CT\_failure\_detection* function has only one detection output, and the *High\_Imp\_Diff\_Prot* function has only one blocking input.

## 3.2. Control & supervision functions

### 3.2.1. Phase-Selective Trip Logic

#### 3.2.1.1. Operation principle

The phase-selective trip logic function operates according to the functionality required by the IEC 61850 standard for the “Trip logic logical node”.

##### 3.2.1.1.1. Application

The phase-selective function is applied when one-phase trip commands might be required, mostly in distance protection applications.

The function receives the trip requirements of the protective functions implemented in the device and combines the binary signals and parameters to the outputs of the device.

The trip requirements are programmed by the user, using the graphic equation editor. The decision logic has the following aims:

- Define a minimal impulse duration even if the protection functions detect a very short time fault,
- In case of phase-to-phase faults, involve the third phase in the trip command,
- Fulfill the requirements of the automatic reclosing function to generate a three-phase trip command even in case of single-phase faults,
- In case of an evolving fault, during the evolving fault waiting time include all three phases into the trip command

##### 3.2.1.1.2. The decision logic

The decision logic module combines the status signals and the enumerated parameter to generate the general trip command on the output module of the device.

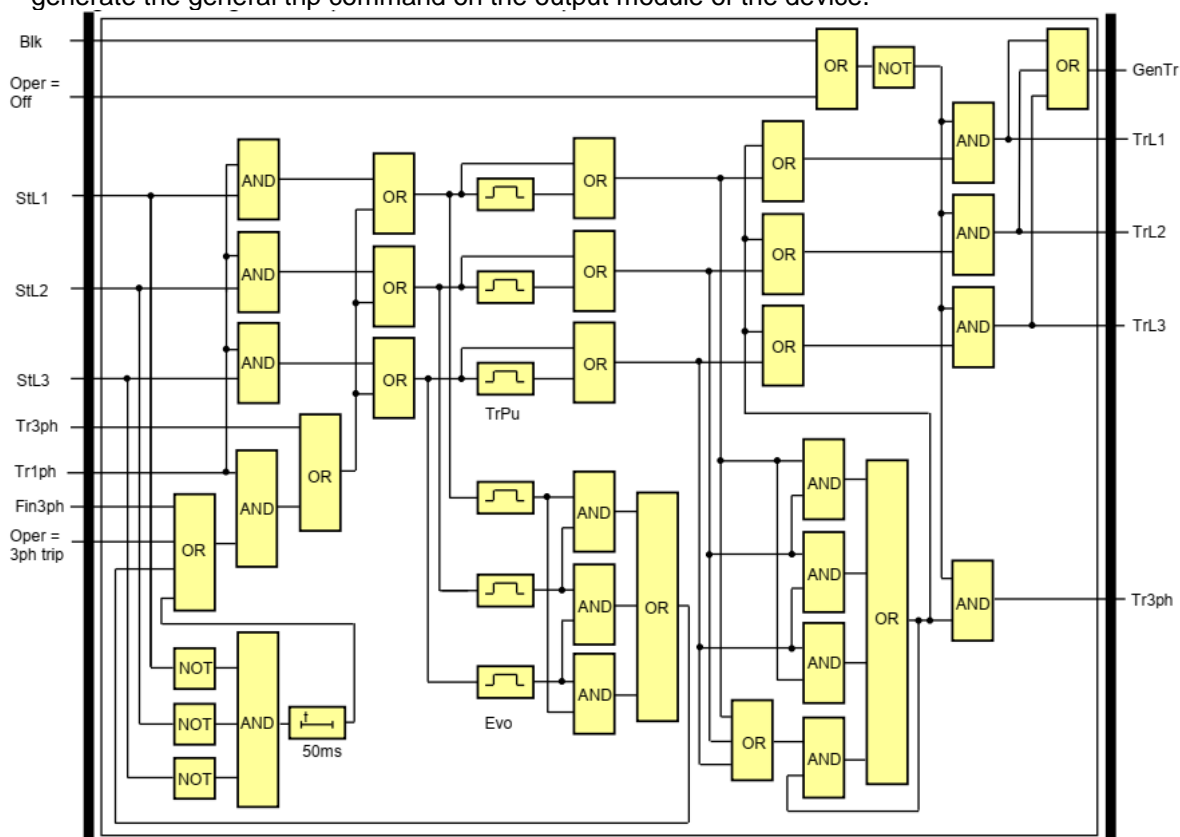


Figure 1-1 Logic scheme of the decision logic

### 3.2.1.2. PhSel. Trip logic function overview

The graphic appearance of the function block of the phase-selective trip logic function is shown in the figure below.

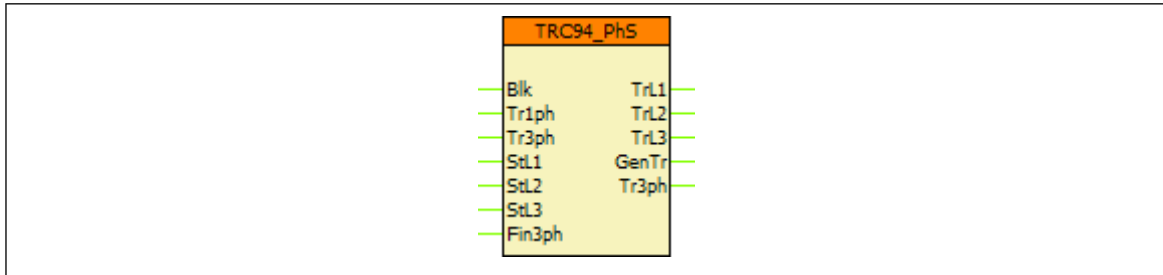


Figure 2-1 Graphic appearance of the function block of the phase-selective trip logic function

#### 3.2.1.2.1. Settings

##### 3.2.1.2.1.1. Parameters

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, 3ph trip, 1ph/3ph trip	-	Off	Selection of the operating mode
Min Pulse Duration	ms	50 – 60000	1	150	Minimum duration of the generated pulse
Evolving Fault Time	ms	50 – 60000	1	1000	Waiting time for evolving fault

Table 2-1 Parameters of the phase-selective trip logic function

##### 3.2.1.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

###### 3.2.1.2.2.1. Analogue inputs

This function does not have analogue inputs.

###### 3.2.1.2.2.2. Analogue outputs (measurements)

This function does not have measurements.

###### 3.2.1.2.2.3. Binary input signals (graphed output statuses)

The conditions of the inputs are defined by the user, applying the graphic equation editor (logic editor). The part written in **bold** is seen on the function block in the logic editor.

BINARY INPUT SIGNAL	EXPLANATION
TRC94_ <b>Blk</b> _GrO_	Blocking the outputs of the function
TRC94_ <b>Tr1ph</b> _GrO_	Request for single-phase trip command
TRC94_ <b>Tr3ph</b> _GrO_	Request for three-phase trip command
TRC94_ <b>StL1</b> _GrO_	Request for trip command in phase L1
TRC94_ <b>StL2</b> _GrO_	Request for trip command in phase L2
TRC94_ <b>StL3</b> _GrO_	Request for trip command in phase L3
TRC94_ <b>Fin3ph</b> _GrO_	Forcing three-phase trip even in case of single-phase fault

Table 2-2 The binary input signals of the phase-selective trip logic function

### 3.2.1.2.2.4. Binary output signals (graphed input statuses)

The binary output status signals of the differential protection function. Parts written in **bold** are seen on the function block in the logic editor.

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
TRC94_TrL1_Grl_	Trip L1	Generated trip command for phase L1
TRC94_TrL2_Grl_	Trip L2	Generated trip command for phase L2
TRC94_TrL3_Grl_	Trip L3	Generated trip command for phase L3
TRC94_GenTr_Grl_	General Trip	Generated general trip command (active for 1ph and 3ph trips as well)
TRC94_Tr3ph_Grl_	3Ph Trip	Generated three-phase trip command

*Table 2-3 The binary output signal of the phase-selective trip logic function*

### 3.2.1.2.2.5. On-line data

Visible values on the on-line data page:

SIGNAL TITLE	DIMENSION	EXPLANATION
General Trip	-	Status of the General Trip binary output
Trip L1	-	Status of the Trip L1 binary output
Trip L2	-	Status of the Trip L2 binary output
Trip L3	-	Status of the Trip L3 binary output
3Ph Trip	-	Status of the 3Ph Trip binary output

*Table 2-4 On-line data of the phase-selective trip logic function*

### 3.2.1.2.2.6. Events

The following events are generated in the event list, as well as sent to SCADA according to the configuration.

EVENT	VALUE	EXPLANATION
Trip L1	off, on	Status of the Trip L1 binary output
Trip L2	off, on	Status of the Trip L2 binary output
Trip L3	off, on	Status of the Trip L3 binary output
General Trip	off, on	Status of the General Trip binary output

*Table 2-5 Event of the phase-selective trip logic function*

### 3.2.1.2.3. Technical data

FUNCTION	VALUE	ACCURACY
Pulse time		< 3 ms

*Table 2-6 The technical data of the phase-selective trip logic function*

### 3.2.1.2.3.1. Notes for testing

When using an EuroProt+ device with phase-selective trip logic, the first 3 trip contacts of the trip module are assigned to the corresponding Trip L1-L2-L3 outputs of the Trip Logic function block. These assignments can be checked in the configuration file of the device by using the EuroCAP tool (see the picture below, note that the actual configuration might be different from that of on the figure). It is possible to assign multiple contacts to one trip logic output (mainly when two trip circuits are used).

- ▼ E1-Line\_F
  - ▼ Hardware Configuration
    - Connector allocation
    - LED assignment
    - ▼ IO Signals
      - > Analogue Inputs
      - > Analogue Outputs
      - > Binary Inputs
      - > Binary Outputs
      - ▼ Trip definition
        - ▼ Assignment
        - > Communication
      - > Software Configuration
      - Subscribed GOOSE assignment
      - > System

### Trip definition / Assignment

Add

Insert

Remove

Modify

Move Up

Move Dn

Ix	Name	Title	Defined by	Show order	Parameters	Type
0	TripAssign1	Trip L1	RootFunctionBlock		TRC94_TripL1_TLO_TripContact_O02	4444 Trip assign
1	TripAssign2	Trip L2	RootFunctionBlock		TRC94_TripL2_TLO_TripContact_O04	4444 Trip assign
2	TripAssign3	Trip L3	RootFunctionBlock		TRC94_TripL3_TLO_TripContact_O06	4444 Trip assign

*Figure 2-2 Trip assignment in EuroCAP*

During commissioning the testing personnel must make sure that, along with the protection functions under test, the corresponding Trip Logic(s) is (are) switched on ('Operation' parameter is set to other than 'Off') before starting the testing, otherwise there will be no actual trip signal given on the assigned trip contacts.

### 3.2.2. Circuit breaker wear monitoring function

If a circuit breaker interrupts a current, the electric arc between the contacts results some metal loss. If the metal loss due to the burning of the electric arc becomes substantial, the contacts must be replaced.


Manufacturers define the permitted number of short circuits by formulas such as:

$$\sum_{i=1}^n I_i^k = CycNum$$

where

- n = number of short circuits
- k = exponent, calculated by the algorithm, based on the parameters I = short-circuit current, kA (RMS)
- CycNum = total value of weighted breaking currents.

Similar information is conveyed by the diagram below. This shows the number of permitted interruptions (logarithmic scaling) versus short-circuit current (logarithmic scaling) that the contacts in a circuit breaker can manage before the metal loss due to burning becomes so significant that the contacts must be replaced.

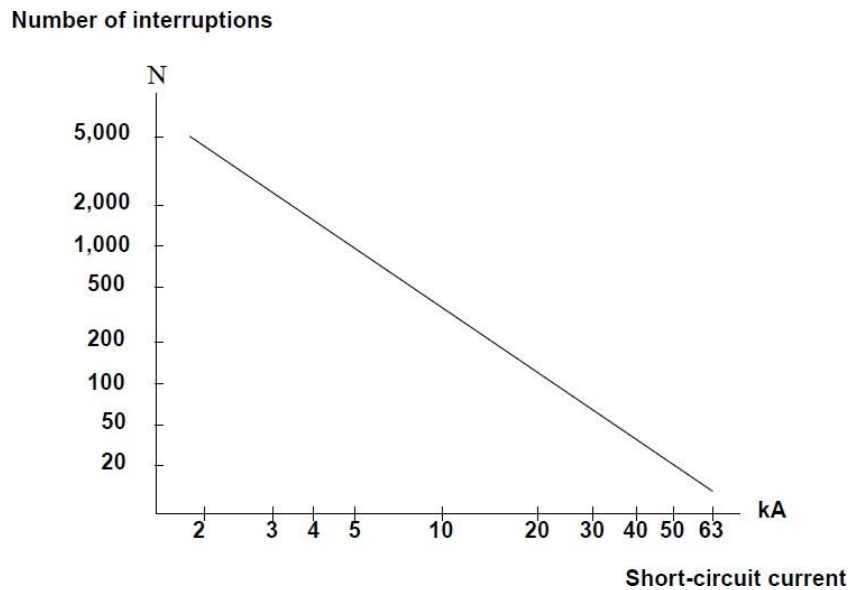


*Figure 1-1 Example: Number of permitted interruptions as the function of the interrupted current*

The straight line of the curve is defined by two points:

- The number of permitted interruptions of 1 kA current (CycNum - 1kA)
- The number of permitted interruptions of the rated breaking current of the circuit breaker (CycNum – I Rated Trip).

The circuit breaker wear monitoring function finds the maximum value of the phase currents of each interruption and calculates the wear caused by the operation performed. If the sum of the calculated wear reaches the limit, a warning signal is generated. This indicates the time of the required preventive maintenance of the circuit breaker.

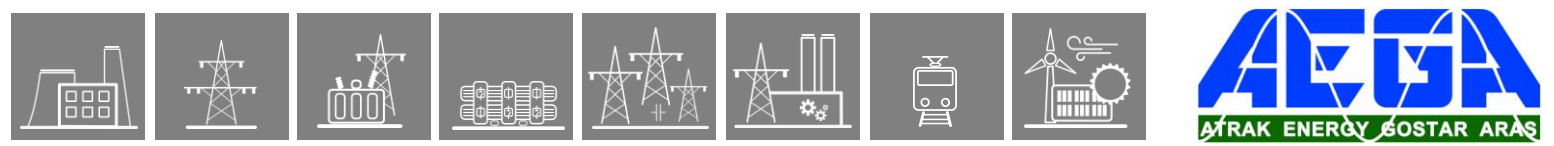

### 3.2.2.1. Operation of the circuit breaker wear monitoring algorithm

The operating principle of the circuit breaker wear monitoring function is based on curves similar to the one shown in [Figure 1-1](#). With this figure, the manufacturer of the circuit breaker defines the permitted total number of current interruptions up to the subsequent preventive maintenance.

The straight line of the curve is defined by two points:

- The number of interruptions of 1 kA current, by parameter CBWear\_CycNumIn\_IPar\_ (CycNum - 1kA)
- The number of interruptions of the rated breaking current of the circuit breaker by parameter CBWear\_CycNumInTrip\_IPar\_ (CycNum – I Rated Trip). The rated breaking current of the circuit breaker is set by parameter CBWear\_InTrCB\_FPar\_ (Rated Trip Current)

The circuit breaker wear monitoring function processes the Fourier basic harmonic component of the three phase currents.

The circuit breaker wear monitoring function identifies the highest value of the phase currents at each interruption.

The procedure of monitoring starts at the receipt of a trip command on the dedicated input (Trip). For the start of this procedure, the circuit breaker also needs to be in closed state. This signal is received on the dedicated binary input (CB Closed).

The procedure of identifying the maximum phase current value terminates when the current falls below the minimum current defined by the parameter CBWear\_Imin\_FPar\_ (Min Current) AND the circuit breaker gets in open position. This signal is received on the dedicated binary input (CB Open).

The procedure also stops if the time elapsed since its start exceeds 1 s. In this case no CB wear is calculated.

Based on the characteristic defined above, the function calculates the wear caused by the operation performed. If the sum of the calculated wear reaches the limit defined by the parameter CBWear\_CycNumAlm\_IPar\_ (CycNum - Alarm), a warning signal is generated (Alarm). This indicates the advised time of the preventive maintenance of the circuit breaker.

The accumulated “wear” of the circuit breaker is stored on non-volatile memory; therefore, the value is not lost even if the power supply of the devices is switched off.

This information is displayed among the on-line data as “Actual wear”. This counter indicates how many 1 kA equivalent switches were performed since the last maintenance (reset).

When preventive maintenance is performed, the accumulated “wear” of the circuit breaker must be reset to 0 to start a new maintenance cycle. The circuit breaker wear monitoring function offers two ways of resetting:

- Binary True signal programmed to the “Reset” input of the function
- Performing a direct command via the Commands menu of the supervising WEB browser (for details, see the “Europrot+ manual”, “Remote user interface description” document). The Command window looks like [Figure 1-2](#).

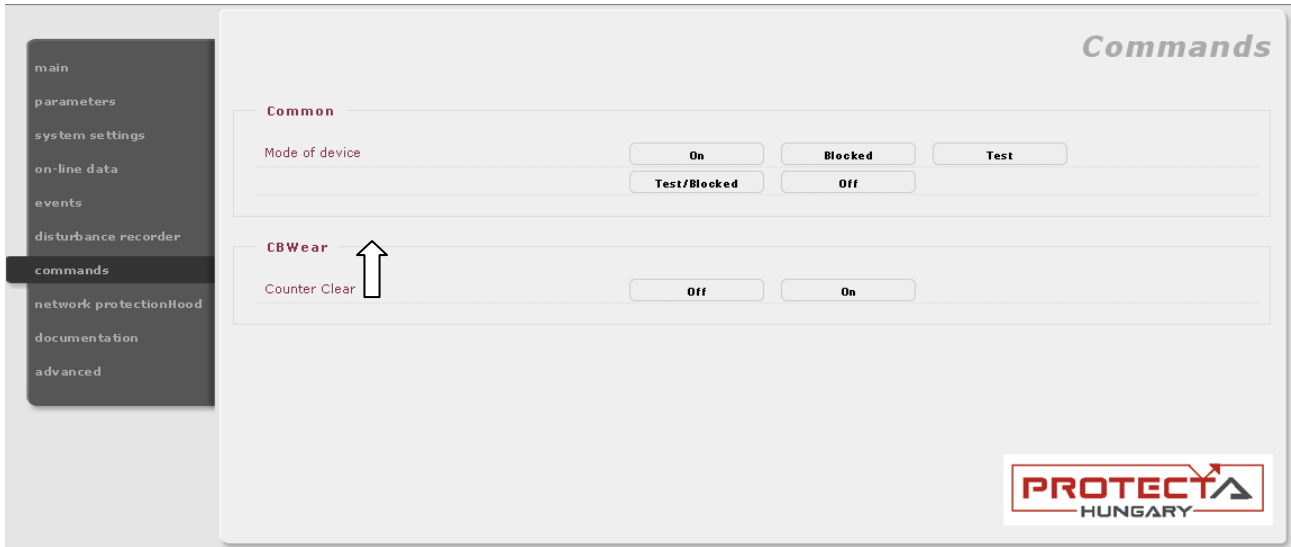


Figure 1-2 The command window to reset the CB wear counter

The **inputs** of the circuit breaker wear monitoring function are

- the Fourier components of three phase currents,
- binary inputs,
- parameters.

The **output** of the circuit breaker wear monitoring function is

- the Alarm binary output status signal.

### 3.2.2.2. Technical summary

#### 3.2.2.2.1. Technical data

Function	Range	Accuracy
Current accuracy	20 – 2000% of I <sub>n</sub>	±1% of I <sub>n</sub>
Accuracy in tracking the theoretical wear characteristics		5%

Table 1-1 Technical data of the circuit breaker wear monitoring

#### 3.2.2.2.2. Summary of the parameters

The parameters of the circuit breaker wear monitoring function are explained in the following tables.

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Disabling or enabling the operation of the function			
CBWear_Oper_EPar_	Operation	Off,On	Off

Table 1-2 The enumerated parameter of the circuit breaker wear monitoring function



### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Permitted number of trip operation if the breaking current is 1kA						
CBWear_CycNumIn_IPar_	CycNum - 1kA		1	100000	1	50000
Permitted number of trip operation if the breaking current is InTrip (See floating parameter "Rated Trip Current")						
CBWear_CycNumInTrip_IPar_	CycNum – I Rated Trip		1	100000	1	100
Permitted level of the weighted sum of the breaking currents						
CBWear_CycNumAlm_IPar_	CycNum - Alarm		1	100000	1	50000

Table 1-3 The integer parameters of the circuit breaker wear monitoring function

### Floating point parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Rated breaking current of the circuit breaker						
CBWear_InTrCB_FPar_	Rated Trip Current	kA	10	100	0.01	10
Minimum level of the current below which the procedure to find the highest breaking current is stopped						
CBWear_Imin_FPar_	Min Current	kA	0.10	0.50	0.01	0.10

Table 1-4 The floating-point parameters of the circuit breaker wear monitoring function

## 3.2.2.2.3. Binary output status signals

The **binary output status signals** of the circuit breaker wear monitoring function.


Binary output signals	Signal title	Explanation
Alarm signal of the function block		
CBWear_Alarm_GrI_	Alarm	Alarm signal is generated if the weighted sum of the breaking currents is above the permitted level

Table 1-5 The binary output status signal of the circuit breaker wear monitoring function

## 3.2.2.2.4. The binary input status signals

The **binary inputs** are signals influencing the operation of the circuit breaker wear monitoring function. These signals are the results of logic equations graphically edited by the user.

Binary input signals	Signal title	Explanation
Disabling the function		
CBWear_BlK_GrO_	Blk	The programmed True state of this input disables the operation of the function
Open state of the circuit breaker		
CBWear_Open_GrO_	Open	The open state of the circuit breaker is needed to stop the procedure to find the maximum breaking current
Closed state of the circuit breaker		
CBWear_Closed_GrO_	Closed	The closed state of the circuit breaker is needed to perform the procedure to find the maximum breaking current
Trip command to the circuit breaker		

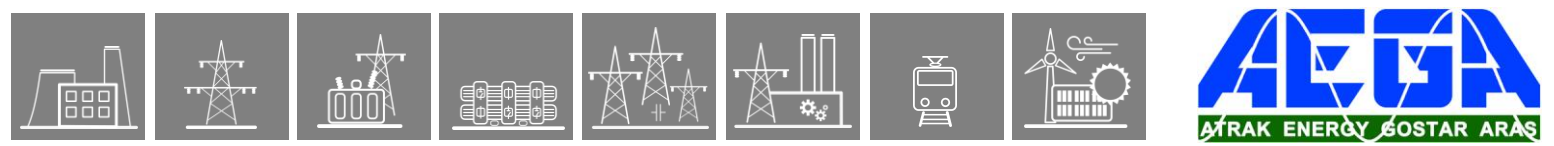


CBWear_Trip_GrO_	Trip	This signal starts the procedure to find the highest breaking current
Reset command		
CBWear_Reset_GrO_	Reset	If this input is programmed to logic True, at maintenance the weighted sum of the breaking currents can be set to 0

*Table 1-6 The binary input signals of the circuit breaker wear monitoring function*

### 3.2.2.2.5. The function block

The function block of the circuit breaker wear monitoring function is shown in [Figure 1-3](#). This block shows all binary input and output status signals that are applicable in the graphic equation editor.

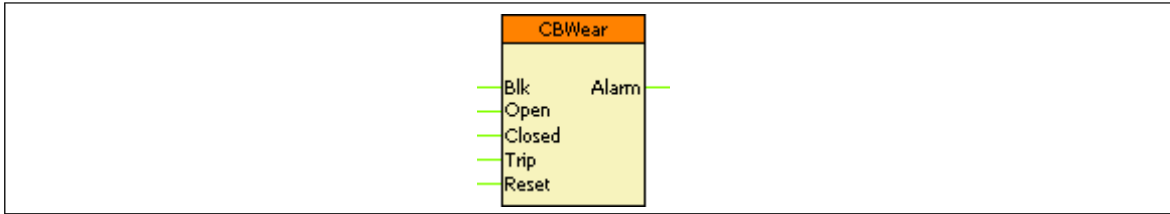

*Figure 1-3 The function block of the circuit breaker wear monitoring function*

### 3.2.3. Circuit breaker control function block

#### 3.2.3.1. Application

The circuit breaker control block can be used to integrate the circuit breaker control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

##### 3.2.3.1.1. Mode of operation

The circuit breaker control block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the circuit breaker. It processes the status signals received from the circuit breaker and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- The signals and commands of the synchro-check / synchro-switch function block can be integrated into the operation of the function block.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” and “EnaOn”, using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
  - Time limitation to execute a command
  - Command pulse duration
  - Filtering the intermediate state of the circuit breaker
  - Checking the synchro-check and synchro-switch times
  - Controlling the individual steps of the manual commands
- Sending trip and close commands to the circuit breaker (to be combined with the trip commands of the protection functions and with the close command of the automatic reclosing function; the protection functions and the automatic reclosing function directly gives commands to the CB). The combination is made graphically using the graphic equation editor
- Operation counter
- Event reporting

### 3.2.3.2. Circuit Breaker control function overview

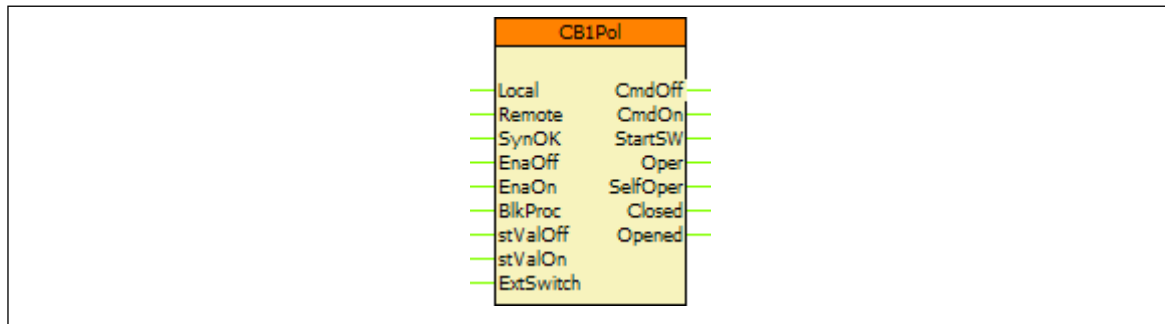


Figure 2-1 Graphic appearance of the function block of the circuit breaker control function

### 3.2.3.3. Settings


#### 3.2.3.3.1. Parameters

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
ControlModel	-	Direct normal, Direct enhanced, SBO enhanced	-	Direct normal	The control model of the circuit breaker node according to the IEC 61850 standard
Forced Check	-	FALSE, TRUE	-	TRUE	If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard
Max Operating Time	ms	10 – 1000	1	200	When either enhanced control model is selected, the status of the CB must change within this time after the issued command. At timeout an invalid-position error will be generated for the client.
Pulse Duration	ms	50 – 1000	1	300	Duration of the generated On and Off impulse*
Max Intermediate Time	ms	20 – 500	1	100	Waiting time for status signals, at expiry the CB is reported to be in intermediate state
Max SynCheck Time	ms	10 – 5000	1	1000	Length of the time period to wait for the conditions of the synchronous state. After expiry of this time, the synchro-switch procedure is initiated (see synchro-check/ synchro-switch function block description)
Max SynSW Time**	ms	0 – 60000	1	0	Length of the time period to wait for the synchro-switch impulse (see synchro-check/ synchro-switch function block description). After this time the function resets, no switching is performed
SBO Timeout	ms	1000 – 20000	1	5000	Duration of the waiting time between object selection and command selection. At timeout no command is performed

\* If the input status signals (stValOff, stValOn) indicate the successful switching then the pulse is withdrawn, but the minimum duration is 100 ms (factory setting).

\*\* If this parameter is set to 0, then the “StartSW” output is not activated

Table 2-1 Parameters of the circuit breaker control function

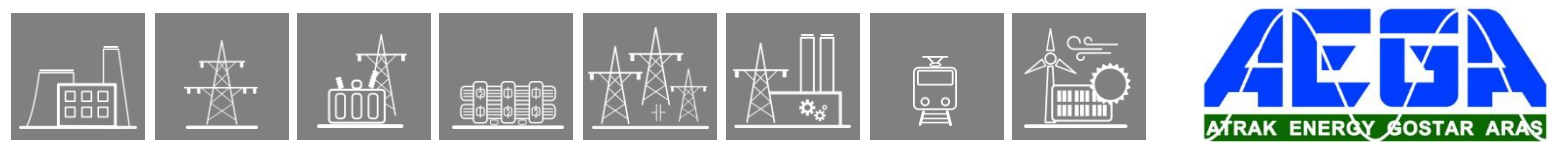

### 3.2.3.3.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.2.3.3.2.1. Binary input signals (graphed output statuses)

The conditions of the inputs are defined by the user, applying the graphic equation editor (logic editor). The part written in **bold** is seen on the function block in the logic editor.

BINARY INPUT SIGNAL	EXPLANATION
CB1Pol_ <b>Local</b> _GrO_	If this input is active, the circuit breaker can be controlled using the local LCD of the device.
CB1Pol_ <b>Remote</b> _GrO_	If this input is active, the circuit breaker can be controlled via remote communication channels of the SCADA system or the device web page ('commands' menu)
CB1Pol_ <b>SynOK</b> _GrO_	This input indicates if the synchronous state of the voltage vectors at both sides of the circuit breaker enables the closing command. This signal is usually generated by the synchro check/ synchro switch function. If this function is not available, set the input to logic true.
CB1Pol_ <b>EnaOff</b> _GrO_	The active state of this input enables the opening of the circuit breaker. The state is usually generated by the <i>interlocking conditions defined graphically by the user</i> .
CB1Pol_ <b>EnaOn</b> _GrO_	The active state of this input enables the closing of the circuit breaker. The state is usually generated by the <i>interlocking conditions defined graphically by the user</i> .
CB1Pol_ <b>BlkProc</b> _GrO_	The active state of this input blocks the operation of the circuit breaker. The conditions are defined graphically by the user.
CB1Pol_ <b>stValOff</b> _GrO_	Off (Opened) state of the circuit breaker.
CB1Pol_ <b>stValOn</b> _GrO_	On (Closed) state of the circuit breaker.
CB1Pol_ <b>ExtSwitch</b> _GrO_	This signal is considered only when evaluating unintended operation (see "SelfOper" output in Chapter 2.2.2). It indicates that an external command has been issued to the circuit breaker (e.g. trip request from other protection device or external on/off command is given).

*Table 2-2 The binary input signals of the circuit breaker control function*

### 3.2.3.3.2.2. Binary output signals (graphed input statuses)

The binary output status signals of the differential protection function. Parts written in **bold** are seen on the function block in the logic editor.

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
CB1Pol_ <b>CmdOff</b> _Grl_	Off Command	Off command impulse, the duration of which is defined by the parameter "Pulse duration"
CB1Pol_ <b>CmdOn</b> _Grl_	On Command	On command impulse, the duration of which is defined by the parameter "Pulse duration"
CB1Pol_ <b>StartSW</b> _Grl_	Start Synchro-switch	If the synchro check/synchro switch function is applied and the synchronous state conditions are not valid for the time defined by the parameter "Max.SynChk time", then this output triggers the synchro switch function (see synchro-check/synchro-switch function block description).
CB1Pol_ <b>Oper</b> _Grl_	Operation	An impulse with a duration of 150 ms at any operation of the circuit breaker
CB1Pol_ <b>SelfOper</b> _Grl_	Unintended Operation	This output is logic true if the status of the circuit breaker has changed without detected command from the SCADA system or on the input "ExtSwitch"
CB1Pol_ <b>Closed</b> _Grl_	Closed	The filtered status signal for closed state of the circuit breaker
CB1Pol_ <b>Opened</b> _Grl_	Opened	The filtered status signal for opened state of the circuit breaker

Table 2-3 The binary output signals of the circuit breaker control function

### 3.2.3.3.2.3. On-line data

Visible values on the on-line data page:

SIGNAL TITLE	DIMENSION	EXPLANATION
Status	-	State of the CB (see Chapter 2.2.6)
Off Command	-	Off command impulse, the duration of which is defined by the parameter "Pulse duration"
On Command	-	On command impulse, the duration of which is defined by the parameter "Pulse duration"
Operation	-	An impulse with a duration of 150 ms at any operation of the circuit breaker
Unintended Operation	-	This output is logic TRUE if the status of the circuit breaker has changed without detected command from the SCADA system or on the input "ExtSwitch"
Opened	-	The filtered status signal for opened state of the circuit breaker
Closed	-	The filtered status signal for closed state of the circuit breaker
Operation counter	-	Resettable* counter that increments every time the Operation (see above) output gets active

\*The operation counter can be reset on the device web page on-line menu.

Table 2-4 On-line data of the circuit breaker control function

### 3.2.3.3.2.4. Events

The following events are generated in the event list, as well as sent to SCADA according to the configuration.

EVENT	VALUE	EXPLANATION
Status	Intermediate,Off,On,Bad	CB state indication based on the received signals

*Table 2-5 Event of the circuit breaker control function*

### 3.2.3.3.2.5. Commands

The following table contains the issuable commands of the function block. The name of the command channel is used while working in the EuroCAP configuration tool, whereas the title is seen by the user on the device web page.

COMMAND CHANNEL	TITLE	RANGE	EXPLANATION
CB1Pol_Oper_Con_	Operation	Off,On	Issue open (off) or close (on) command on the corresponding outputs of the function block

*Table 2-6 The command of the circuit breaker control function*

### 3.2.3.3.2.6. Indication of the four states (Intermediate, On, Off, Bad)

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the circuit breaker. Different graphic symbols can be assigned to the values, the function block's events are generated also according to this status variable.

This integer status has four values based on the states of the **stValOn** and **stValOff** inputs of the function block.

INTEGER STATUS	TITLE	STVALON STATE	STVALOFF STATE	VALUE	EXPLANATION
CB1Pol_stVal_ISt_	Status	FALSE	FALSE	0: Intermediate	Integer status signal for indicating the state of the CB according to the corresponding inputs of the function block
		FALSE	TRUE	1: Off	
		TRUE	FALSE	2: On	
		TRUE	TRUE	3: Bad	

*Table 2-7 State signals from the circuit breaker control function*



### 3.2.3.3.3. Technical data

FUNCTION	VALUE	ACCURACY
Pulse time		< 3 ms

Table 2-8 The technical data of the circuit breaker control function

#### 3.2.3.3.3.1. Notes for testing

If the commands get blocked from time to time during commissioning, it is advised to check how the conditions are fulfilled to issue commands on the function block. The following **three** conditions must be fulfilled at the same time:

- Local or Remote input is active appropriately
- The enabling input (EnaOff or EnaOn) of the issued command (off or on) is active
- (close/on command only) Synchro-check is OK (SynOK input is active)

If there are no conditions to be defined for any of these three (e.g. there is no synchro-check function present, so no valid signal can be provided to that input), the corresponding input can be connected to constant logical TRUE signal provided by the fixture output of the Common function block.

##### 3.2.3.3.3.1.1. IEC 61850 commands

In several configurations the Interlocking and Control logical nodes may have the same prefix for CB and DC function blocks (**INTCILO#** and **SBwCSWI#** respectively where the '#' marks the instance number). This means that their instance number not necessarily corresponds to the actual function block:

- Example: if there are **2** DC and **1** CB function blocks in the same configuration where the former ones were added first, the instance number **#1** and **#2** will belong to the DC function blocks whereas number **#3** will belong to the CB function block even if it is the only CB control function in the device.
- Make sure to check which logical nodes belong to which function by checking the DOI description using the EuroCAP tool (right click the function block in the Logic editor)

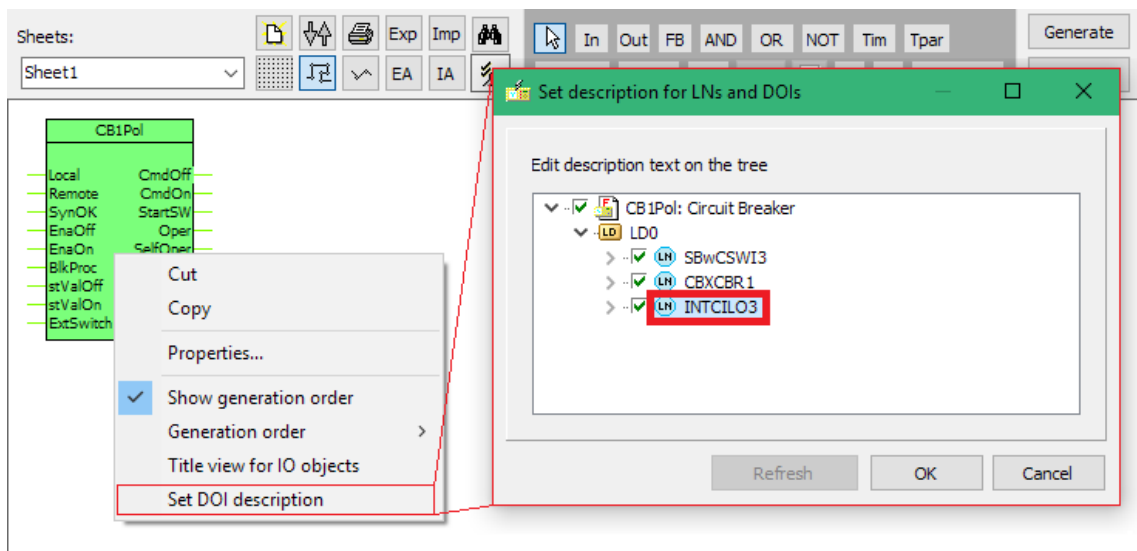


Figure 2-2 Checking the description of the Interlocking LN of the function block

In other cases, the two prefixes are given according to the type of the function block, so they are individual for each (i.e. **CBCILO#** and **CBCSW#** for circuit breaker and **DCCILO#** and **DCCSW#** for disconnector).





## 3.2.4. Disconnecter control function

### 3.2.4.1. Application

The disconnector control block can be used to integrate the disconnector control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

#### 3.2.4.1.1. Mode of operation

The disconnector control block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the disconnector. It processes the status signals received from the disconnector and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” and “EnaOn”, using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
  - Time limitation to execute a command
  - Command pulse duration
  - Filtering the intermediate state of the disconnector
  - Controlling the individual steps of the manual commands
- Sending open and close commands to the disconnector
- Operation counter
- Event reporting

### 3.2.4.2. Disconnecter control function overview

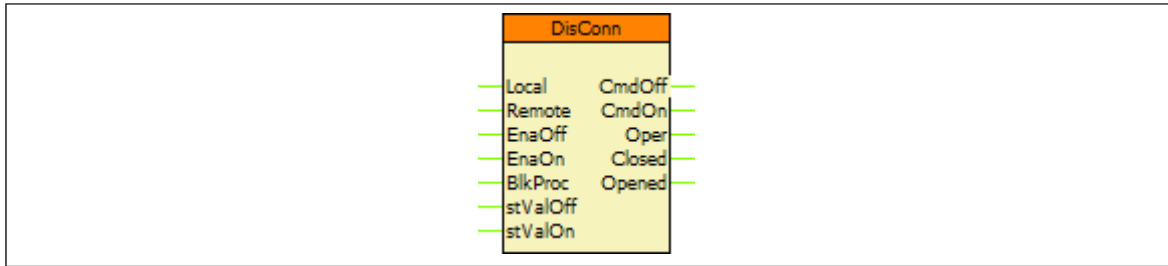


Figure 2-1 Graphic appearance of the function block of the disconnecter control function

#### 3.2.4.2.1. Settings

##### 3.2.4.2.1.1. Parameters

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Control Model	-	Direct normal, Direct enhanced, SBO enhanced	-	Direct normal	The control model of the disconnecter node according to the IEC 61850 standard
Type of Switch	-	N/A, Load Break, Disconnecter, Earthing Switch, HS Earthing Switch	-	Disconnecter	
Forced Check	-	FALSE, TRUE	-	TRUE	If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard
Max Operating Time	ms	10 – 60000	1	10000	When either enhanced control model is selected, the status of the DC must change within this time after the issued command. At timeout an invalid-position error will be generated for the client.
Pulse Duration	ms	100 – 60000	1	1000	Duration of the generated On and Off impulse*
Max Intermediate Time	ms	20 – 60000	1	10000	Waiting time for status signals, at expiry the DC is reported to be in intermediate state
SBO Timeout	ms	1000 – 20000	1	5000	Duration of the waiting time between object selection and command selection. At timeout no command is performed

\* If the input status signals (stValOff, stValOn) indicate the successful switching then the pulse is withdrawn, but the minimum duration is 1000 ms (factory setting).

Table 2-1 Parameters of the disconnecter control function

### 3.2.4.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.2.4.2.2.1. Binary input signals (graphed output statuses)

The conditions of the inputs are defined by the user, applying the graphic equation editor (logic editor). The part written in **bold** is seen on the function block in the logic editor.

BINARY INPUT SIGNAL	EXPLANATION
DisConn_ <b>Local</b> _GrO_	If this input is active, the disconnector can be controlled using the local LCD of the device.
DisConn_ <b>Remote</b> _GrO_	If this input is active, the disconnector can be controlled via remote communication channels of the SCADA system or the device web page ('commands' menu)
DisConn_ <b>EnaOff</b> _GrO_	The active state of this input enables the opening of the disconnector. The state is usually generated by the <i>interlocking conditions defined graphically by the user</i> .
DisConn_ <b>EnaOn</b> _GrO_	The active state of this input enables the closing of the disconnector. The state is usually generated by the <i>interlocking conditions defined graphically by the user</i> .
DisConn_ <b>BlkProc</b> _GrO_	The active state of this input blocks the operation of the disconnector. The conditions are defined graphically by the user.
DisConn_ <b>stValOff</b> _GrO_	Off (Opened) state of the disconnector.
DisConn_ <b>stValOn</b> _GrO_	On (Closed) state of the disconnector.


Table 2-2 The binary input signals of the disconnector control function

#### 3.2.4.2.2.2. Binary output signals (graphed input statuses)

The binary output status signals of the differential protection function. Parts written in **bold** are seen on the function block in the logic editor.

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DisConn_ <b>CmdOff</b> _GrI_	Off Command	Off command impulse, the duration of which is defined by the parameter "Pulse duration"
DisConn_ <b>CmdOn</b> _GrI_	On Command	On command impulse, the duration of which is defined by the parameter "Pulse duration"
DisConn_ <b>Oper</b> _GrI_	Operation	An impulse with a duration of 150 ms at any operation of the disconnector
DisConn_ <b>Closed</b> _GrI_	Closed	The filtered status signal for closed state of the disconnector
DisConn_ <b>Opened</b> _GrI_	Opened	The filtered status signal for opened state of the disconnector

Table 2-3 The binary output signals of the disconnector control function

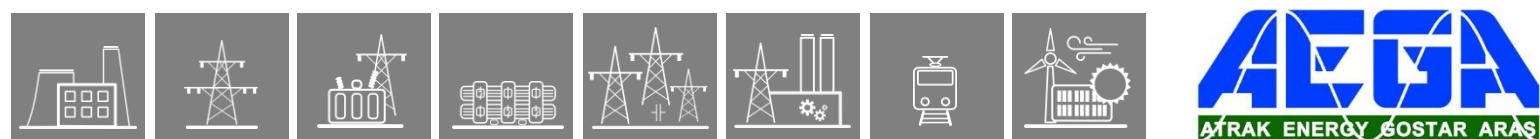

### 3.2.4.2.2.3. On-line data

Visible values on the on-line data page:

SIGNAL TITLE	DIMENSION	EXPLANATION
Status	-	State of the DC (see Chapter 2.2.6)
Off Command	-	Off command impulse, the duration of which is defined by the parameter "Pulse duration"
On Command	-	On command impulse, the duration of which is defined by the parameter "Pulse duration"
Operation	-	An impulse with a duration of 150 ms at any operation of the disconnector
Opened	-	The filtered status signal for opened state of the disconnector
Closed	-	The filtered status signal for closed state of the disconnector
Operation counter	-	Resettable* counter that increments every time the Operation (see above) output gets active

*Table 2-4 On-line data of the disconnector control function*

\*The operation counter can be reset on the device web page on-line menu.

### 3.2.4.2.2.4. Events

The following events are generated in the event list, as well as sent to SCADA according to the configuration.

EVENT	VALUE	EXPLANATION
Status	Intermediate,Off,On,Bad	DC state indication based on the received status signals

*Table 2-5 Event of the disconnector control function*

### 3.2.4.2.2.5. Commands

The following table contains the issuable commands of the function block. The name of the command channel is used while working in the EuroCAP configuration tool, whereas the title is seen by the user on the device web page.

COMMAND CHANNEL	TITLE	RANGE	EXPLANATION
DisConn_Oper_Con_	Operation	Off,On	Issue open (off) or close (on) command on the corresponding outputs of the function block

*Table 2-6 The command of the disconnector control function*

### 3.2.4.2.2.6. Indication of the four states (Intermediate, On, Off, Bad)

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the disconnecter. Different graphic symbols can be assigned to the values, the function block's events are generated also according to this status variable.

This integer status has four values based on the states of the **stValOn** and **stValOff** inputs of the function block.

INTEGER STATUS	TITLE	STVALON STATE	STVALOFF STATE	VALUE	EXPLANATION
DisConn_stVal_ISt_	Status	FALSE	FALSE	0: Intermediate	Integer status signal for indicating the state of the DC according to the corresponding inputs of the function block
		FALSE	TRUE	1: Off	
		TRUE	FALSE	2: On	
		TRUE	TRUE	3: Bad	

Table 2-7 State signals from the disconnecter control function

### 3.2.4.2.3. Technical data

FUNCTION	VALUE	ACCURACY
Operate time		±5% or ±15 ms, whichever is greater

Table 2-8 The technical data of the disconnecter control function

#### 3.2.4.2.3.1. Notes for testing

If the commands get blocked from time to time during commissioning, it is advised to check how the conditions are fulfilled to issue commands on the function block. The following **three** conditions must be fulfilled at the same time:

- Local or Remote input is active appropriately
- The enabling input (EnaOff or EnaOn) of the issued command (off or on) is active

If there are no conditions to be defined for any of these two (e.g. there is no difference made between local/remote control), the corresponding input can be connected to constant logical TRUE signal provided by the fixture output of the Common function block.

##### 3.2.4.2.3.1.1. IEC 61850 commands

In several configurations the Interlocking and Control logical nodes may have the same prefix for DC and CB function blocks (**INTCILO#** and **SBwCSWI#** respectively where the '#' marks the instance number). This means that their instance number not necessarily corresponds to the actual function block:

- Example: if there are **1** CB and **1** DC function blocks in the same configuration where the former was added first, the instance number **#1** will belong to the CB function block whereas number **#2** will belong to the DC function block even if it is the only DC control function in the device.
- Make sure to check which logical nodes belong to which function by checking the DOI description using the EuroCAP tool (right click the function block in the Logic editor)

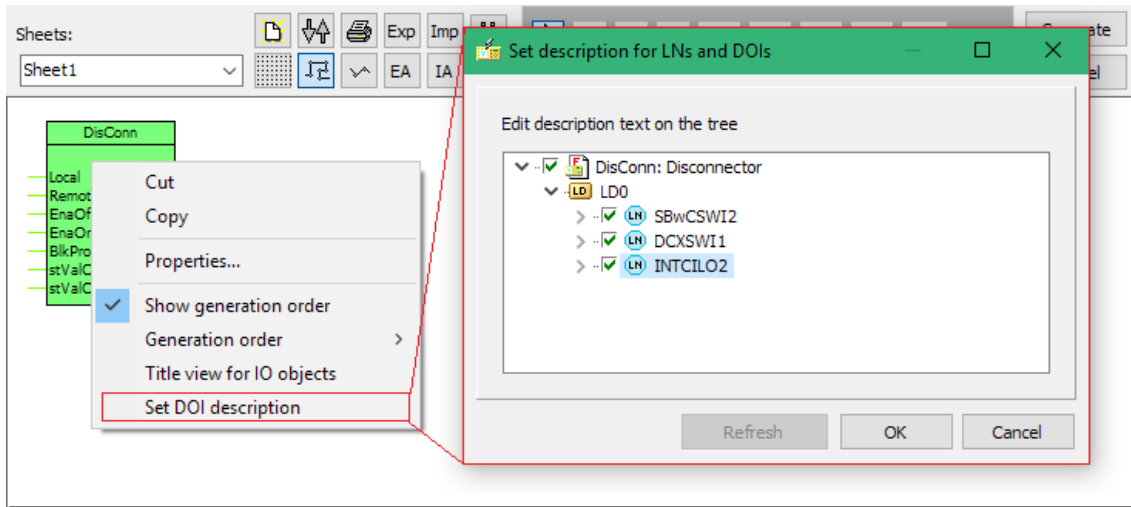


Figure 2-2 Checking the description of the Interlocking LN of the function block

In other cases, the two prefixes are given according to the type of the function block, so they are individual for each (i.e. **DCCILO#** and **DCCSW#** for disconnecter and **CBCILO#** and **CBCSW#** for circuit breaker).

### 3.2.4.3. Example logic

A simple example can be seen below of how to insert the function block in the user logic using the EuroCAP Logic Editor:

- The Local/Remote state of the device is provided by the Common function block which is present in all configurations
- The connections to the BIn and BOut elements show the connections to the physical input and output contacts
- The highlighted signal leading to the EnaOff and EnaOn inputs is the realization of the interlocking logic. In this case the disconnector can operate only if the circuit breaker is opened.

The opened state of the CB is now indicated by its filtered 'Opened' signal which is active only if the CB is open and there is no state error (or intermediate state) of it.


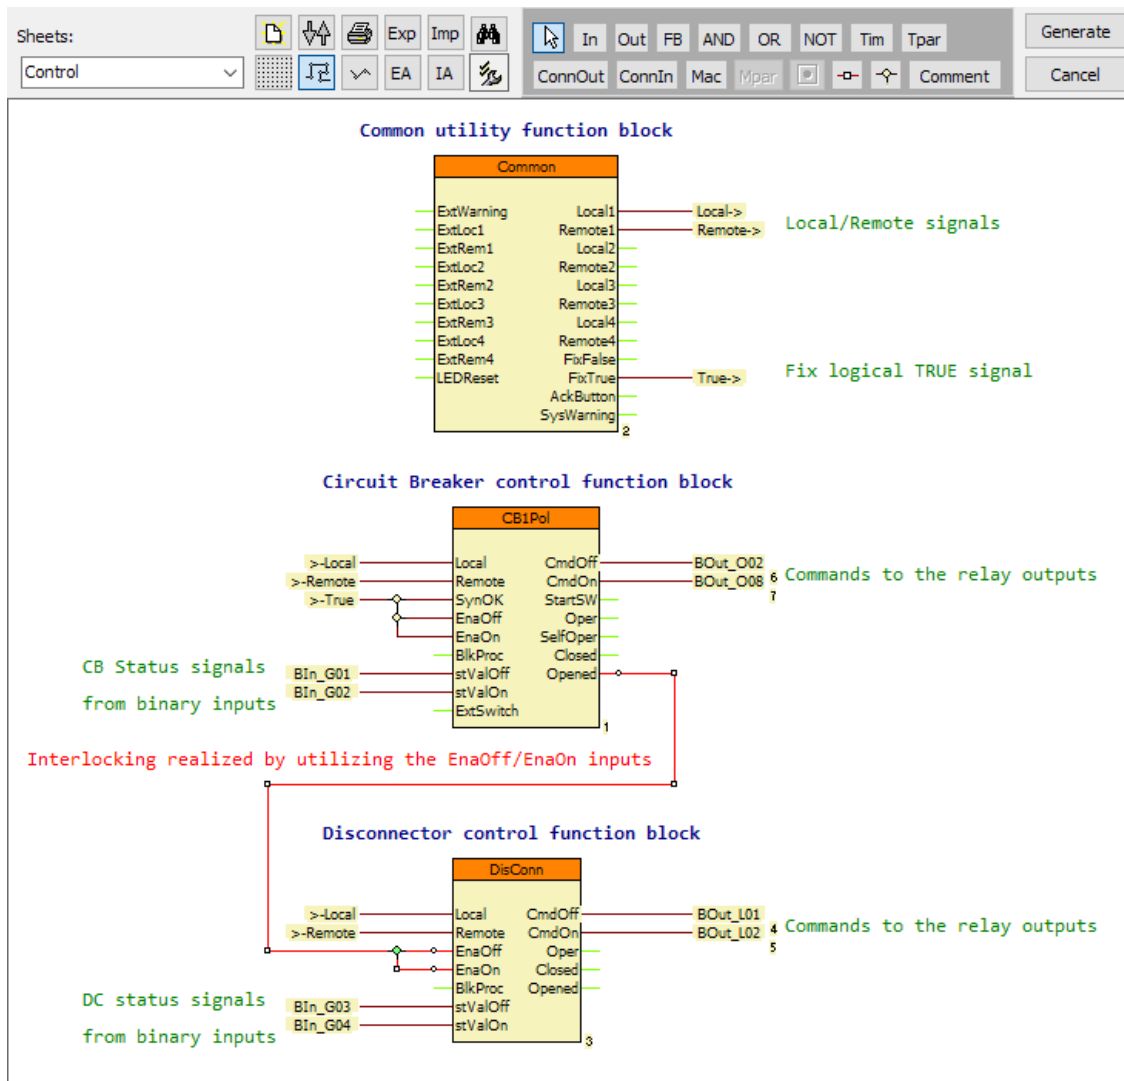


Figure 3-1 Inserting the disconnector function block into the logic (example)

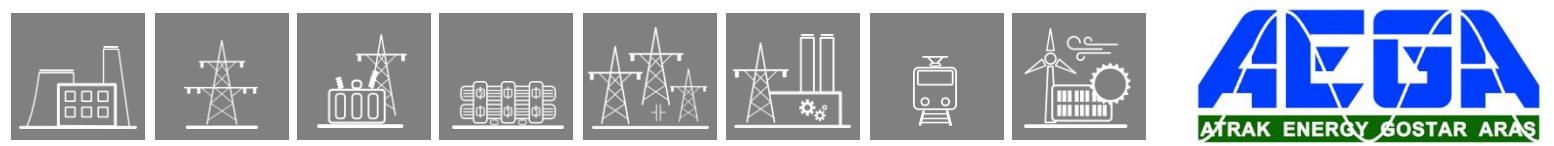

## 3.2.5. Ethernet Links function

### 3.2.5.1. Introduction

The EuroProt+ device constantly checks the statuses of its connections to the outside world (wherever possible). These statuses can be seen on the **status/log** page in the advanced menu on the web page of the device.

When further indications are needed or the signals of the statuses (such as events, logic signals for the user logic, LEDs etc.), the Ethernet Links function block makes these available for the user.

#### 3.2.5.1.1. Ports

The function can check the following types of communication ports:


- Fiber Optic (MM – multi mode)
- Fiber Optic (SM – single mode)
- RJ45
- PRP/HSR
- EOB (Ethernet On Board on the front HMI of the device)

See the EuroProt+ Hardware Description (different document) for the list of the CPU modules that contain any of these ports.



### 3.2.5.2. Ethernet Links function overview

The graphic appearance of the function block is shown on [Figure 2-1](#). These blocks show all binary input and output status signals, which are applicable in the graphic equation editor.

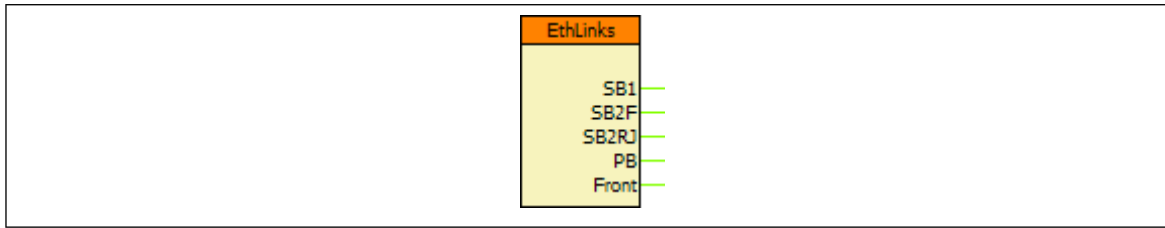

*Figure 2-1 Graphic appearance of the function block of the ethernet links function*

#### 3.2.5.2.1. Settings

There are no settings for this function block.

#### 3.2.5.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

This function block owns only binary output signals.

##### 3.2.5.2.2.1. Binary output signals (graphed input statuses)

The binary output status signals of the Ethernet Links function. **Parts written in bold** are seen on the function block in the logic editor.

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
EthLnk_ <b>SB1</b> _Grl_	Station Bus1	Active if the first (upper) fiber optic port of the CPU module has an active connection.
EthLnk_ <b>SB2F</b> _Grl_	Station Bus2 – Fiber	Active if the second (middle) fiber optic port of the CPU module has an active connection.
EthLnk_ <b>SB2RJ</b> _Grl_	Station Bus2 –RJ4	Active if the RJ45 port of the CPU module has an active connection.
EthLnk_ <b>PB</b> _Grl_	Process Bus	Active if the third (lower) fiber optic port of the CPU module has an active connection
EthLnk_ <b>Front</b> _Grl_	RJ45/EOB on front panel	Active if the front RJ45 port (or EOB) has an active connection

*Table 2-1 The binary output status signals of the ethernet links function*

### 3.2.5.2.2.2. On-line data

Visible values on the on-line data page:

SIGNAL TITLE	DIMENSION	EXPLANATION
Station Bus1	-	Active if the first (upper) fiber optic port of the CPU module has an active connection.
Station Bus2 – Fiber	-	Active if the second (middle) fiber optic port of the CPU module has an active connection.
Station Bus2 –RJ4	-	Active if the RJ45 port of the CPU module has an active connection.
Process Bus	-	Active if the third (lower) fiber optic port of the CPU module has an active connection
RJ45/EOB on front panel	-	Active if the front RJ45 port (or EOB) has an active connection

*Table 2-2 The measured analogue values of the ethernet links function*

### 3.2.5.2.2.3. Events

The following events are generated in the event list, as well as sent to SCADA according to the configuration.

EVENT	VALUE	EXPLANATION
Station Bus1	off, on	Active if the first (upper) fiber optic port of the CPU module has an active connection.
Station Bus2 – Fiber	off, on	Active if the second (middle) fiber optic port of the CPU module has an active connection.
Station Bus2 –RJ4	off, on	Active if the RJ45 port of the CPU module has an active connection.
Process Bus	off, on	Active if the third (lower) fiber optic port of the CPU module has an active connection
RJ45/EOB on front panel	off, on	Active if the front RJ45 port (or EOB) has an active connection

*Table 2-3 Events of the ethernet links function*

### 3.2.5.2.3. Technical data

There is no technical data to add.

## 3.2.6. Trip Circuit Supervision

### 3.2.6.1. Introduction

This document describes the applicable hardware and provides guidelines for usage in the device configuration.

#### 3.2.6.1.1. Operation principle

The trip circuit supervision is utilized for checking the integrity of the circuit between the trip coil and the tripping output of the protection device.

This is realized by injecting a small DC current (around 1-5 mA) into the trip circuit. If the circuit is intact, the current flows, causing an active signal to the opto coupler input of the trip contact.

The state of the input is shown on the devices' binary input listing among the other binary inputs, and it can be handled like any other of them (it can be added to the user logic, etc.)

#### 3.2.6.1.2. Applicable modules

The following modules contain trip outputs with trip circuit supervision. The information here is restricted to the trip circuit supervision only. For more details please refer to the EuroProt+ Hardware description from which these were extracted. Note that there are other modules without trip circuit supervision, those are not listed here.

Table 1-1 Modules with Trip Circuit Supervision

MODULE TYPE	TRIP+4201	TRIP+2101	TRIP+2201	PSTP+4201	PSTP+2101
CHANNEL NUMBER	4	4	4	2	2
RATED VOLTAGE	24 V DC and 48 V DC	110 V DC	220 V DC	24 V DC and 48 V DC and 60 V DC	110 V DC and 220 V DC
THERMAL WITHSTAND VOLTAGE	72 V DC	150 V DC	242 V DC	72 V DC	242 V DC

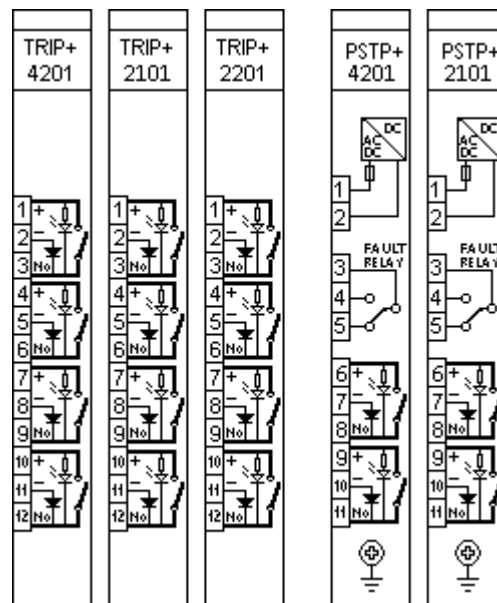


Figure 1-1 I/O arrangement of the modules with TCS

## 3.2.6.2. Hardware application

### 3.2.6.2.1. Wiring

The wiring of these modules can be 2-wire or 3-wire. The TCS – Trip Circuit Supervision function is active with both methods.



The voltage of the "No" contact is maximized at 15 V by a Zener-diode. Make sure that the voltage caused by the resistance of the circuit breaker and the injected current from the TRIP+ module does not reach 10 V. In case of PSTP+ modules, this voltage is 8 V (PSTP+/4201) and 13 V (PSTP+/2101).



Our TRIP+ modules are made to switch DC circuits. **Using reversed polarity or AC voltage can cause the damage of the internal circuits.**

#### 3.2.6.2.1.1. 3-wire TRIP+ wiring methods

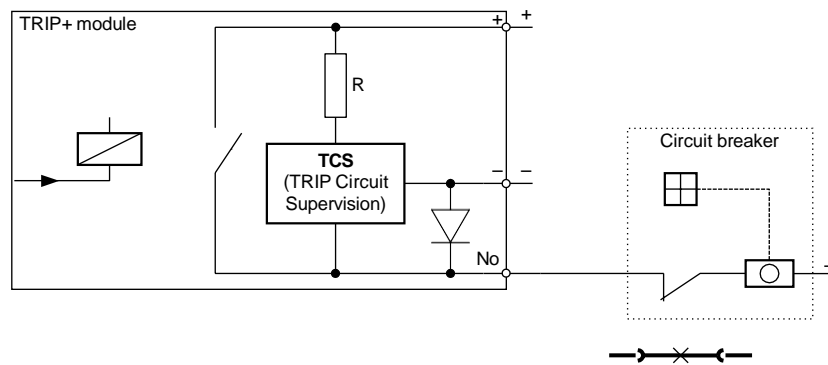


Figure 2-1 3-wire TRIP+ wiring

It is possible to use parallel connected TRIP+ modules. In this case the negative contacts must be common.

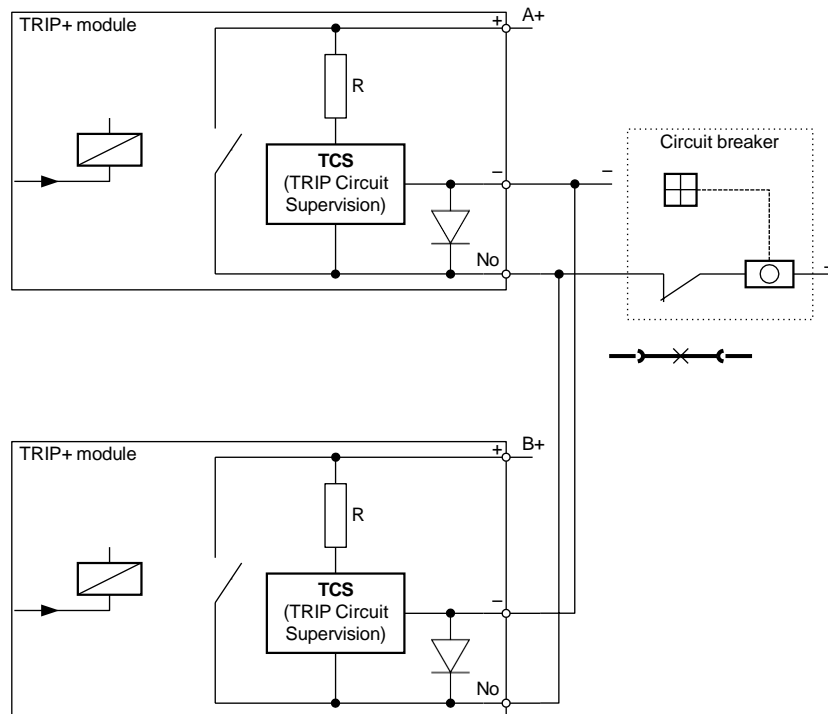


Figure 2-2 3-wire TRIP+ wiring using parallel connected TRIP+ modules

### 3.2.6.2.1.2. 2-wire TRIP+ wiring methods

If it is necessary, you can also wire the TRIP+ modules using only the “+” and the “No” contacts.

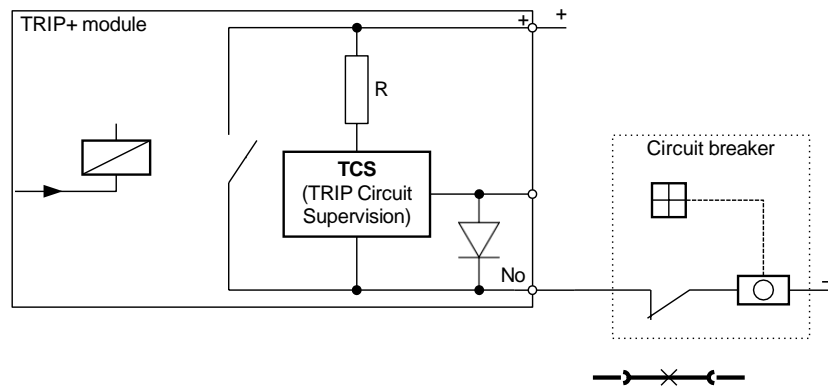


Figure 2-3 2-wire TRIP+ wiring

It is possible to use parallel connected TRIP+ modules.

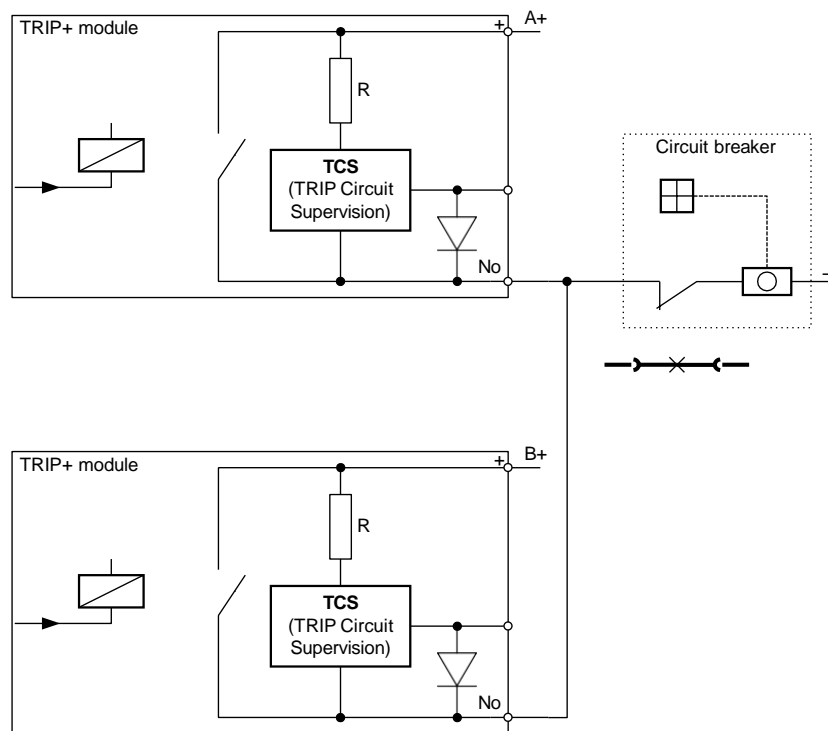


Figure 2-4 2-wire TRIP+ wiring using parallel connected TRIP+ modules

If the circuit breaker needs two-pole switching, TRIP+ modules can be connected series as you can see in [Figure 2-5](#).

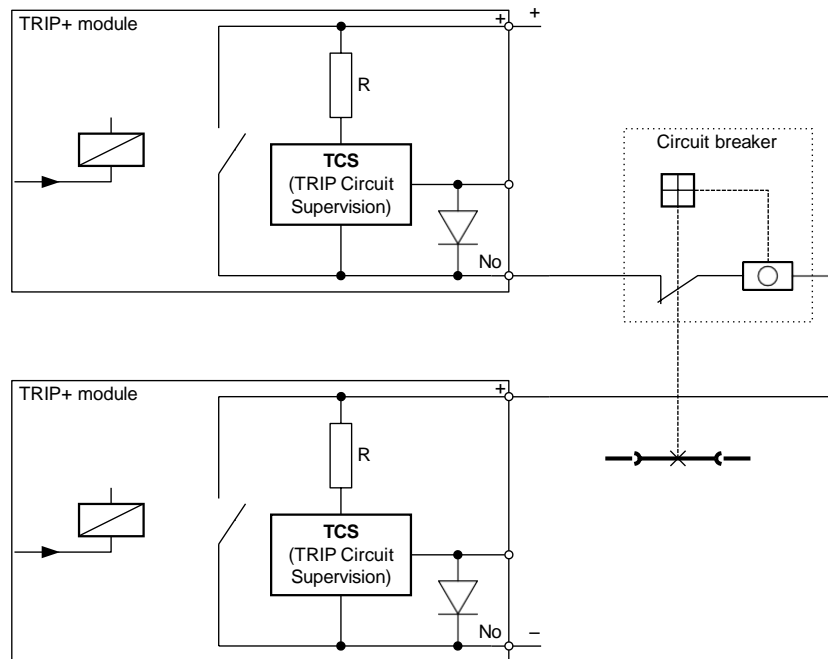


Figure 2-5 2-wire TRIP+ wiring using series connected TRIP+ modules

### 3.2.6.2.2. TCS signal handling

The Trip Circuit Supervision detects broken trip circuit if the current flowing through the trip coil is below 1 mA or (in case of 3-wire wirings) the voltage on it is above 8-10-13 V (depending on the module).


In Chapter [2.3](#) there are calculated maximum values for the resistance of the trip coil. If these values are exceeded, the TCS might consider the trip circuit broken even if it is intact.

To solve this, there are two ways:

- Using the 2-wire wiring method\*:** leaving out/disconnecting the DC- part of the TRIP wiring may solve the issue.  
Note that in this case the voltage is not maximized on 15 V, so **the used voltage (up to 220 Vdc) will appear on the “NO” pin**. Caution is advised when touching the wiring in this case.
- Usage of modules without TCS:** if the TCS is not a requirement (e.g. in backup protections), it can be simply left out by opting for the appropriate modules (such as PSTP+/2131 or TRIP+/21F1) while ordering.

*\*The inputs of some relay testers might sense the states of the Trip contacts active even if they are not. In such cases the “-” pin must be wired in for the tests.*



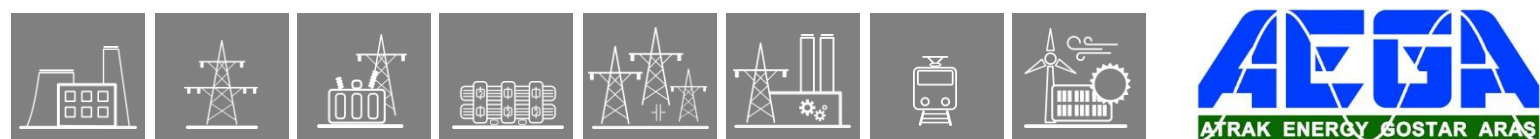

### 3.2.6.2.3. Technical data

The following tables contain information according to the wiring connections described in Chapter 2.1.

Table 2-1 Technical data for the TRIP+ modules

MODULE TYPE	TRIP+4201	TRIP+2101	TRIP+2201	
VALUE OF R RESISTOR ( $\pm 10\%$ )	10 k $\Omega$	73 k $\Omega$	130 k $\Omega$	
INJECTED CURRENT AT "NO" CONTACT	2.4 mA @ 24 V DC 4.8 mA @ 48 V DC	1.5 mA @ 110 V DC	1.7 mA @ 220 V DC	
MAXIMUM RESISTANCE OF THE TRIP COIL	3-WIRE WIRING (MAX. 10 V)	11.8 k $\Omega$ @ 24 V DC 3.7 k $\Omega$ @ 48 V DC	9.7 k $\Omega$ @ 110 V DC 8.4 k $\Omega$ @ 125 V DC	8.1 k $\Omega$ @ 220 V DC
	3-WIRE WIRING WITH IN PARALLEL (MAX. 10 V)	5.9 k $\Omega$ @ 24 V DC 1.8 k $\Omega$ @ 48 V DC	4.8 k $\Omega$ @ 110 V DC 4.2 k $\Omega$ @ 125 V DC	4 k $\Omega$ @ 220 V DC
	2-WIRE METHOD (1 mA MIN. CURRENT)	14 k $\Omega$ @ 24 V DC 38 k $\Omega$ @ 48 V DC	37 k $\Omega$ @ 110 V DC 52 k $\Omega$ @ 125 V DC	90 k $\Omega$ @ 220 V DC

The PSTP+ modules work based on current generator principle, so the calculations for these are based on the necessary minimum current and the allowed maximum voltage.

Table 2-2 Technical data for the PSTP+ modules

MODULE TYPE	PSTP+4201	PSTP+2101	
INJECTED CURRENT AT "NO" CONTACT	1.5 mA	1.5 mA	
MAXIMUM RESISTANCE OF THE TRIP COIL	3-WIRE WIRING (1 mA CURRENT)	8 k $\Omega$ (max. 8 V)	13 k $\Omega$ (max. 13 V)
	3-WIRE WIRING IN PARALLEL	4 k $\Omega$ (max. 8 V)	6.5 k $\Omega$ (max. 13 V)
	2-WIRE METHOD (1 mA MIN. CURRENT)	24 k $\Omega$ @ 24 V DC 48 k $\Omega$ @ 48 V DC 60 k $\Omega$ @ 60 V DC	110 k $\Omega$ @ 110 V DC 220 k $\Omega$ @ 220 V DC

### 3.2.6.3. Software application

#### 3.2.6.3.1. Binary inputs



The **TCS input is active if the trip circuit is intact**, so the logical '0' or FALSE signal of the input means that either the trip circuit is broken, or it connects to high resistance.

The TCS signals are shown the same way as other binary inputs are in the device: they can be seen in the **on-line data** menu on the local HMI or the device web page, and they can be utilized just like any other binary input when editing the device configuration with EuroCAP software.

The names/titles of the inputs follow the occupied slot of the TRIP module (if it is in Slot **N**, the TCS contact is named BIn\_#N##).

#### 3.2.6.3.2. The TCS macro

In most cases the trip circuit is tripped along with the circuit breaker as well. In situations like this the TCS input would signal a broken trip circuit (logical '0' or FALSE) unnecessarily. To avoid this, the status signals of the CB are to be used combined with the TCS input signal so that it will be evaluated only when the CB is closed.

The TCS macro incorporates this logic for two separate TCS inputs for one CB (see [Figure 3-2](#) for the two TCS inputs and the CB status signal inputs). The outputs are the failure signals for each connected TCS input.

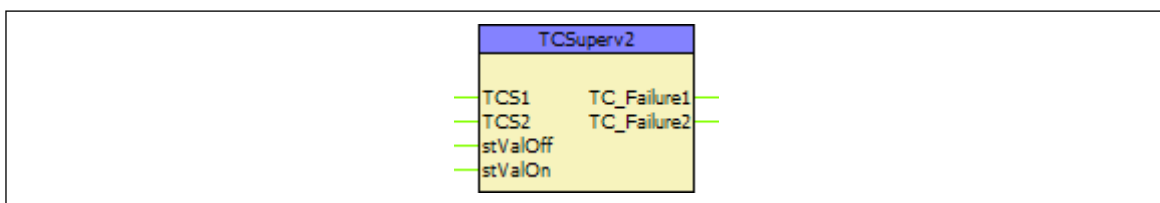


Figure 3-1 Graphic appearance of the Trip Circuit Supervision macro



The internal logic of the macro can be seen on [Figure 3-2](#) below. Both outputs have a fixed pick delay of 1000 ms. Note that **here the outputs are active if the trip circuit is broken**. For a CB with only 1 trip circuit it is enough to simply leave the **TCS2** input open (naturally in this case the TC\_Failure2 output cannot be used).

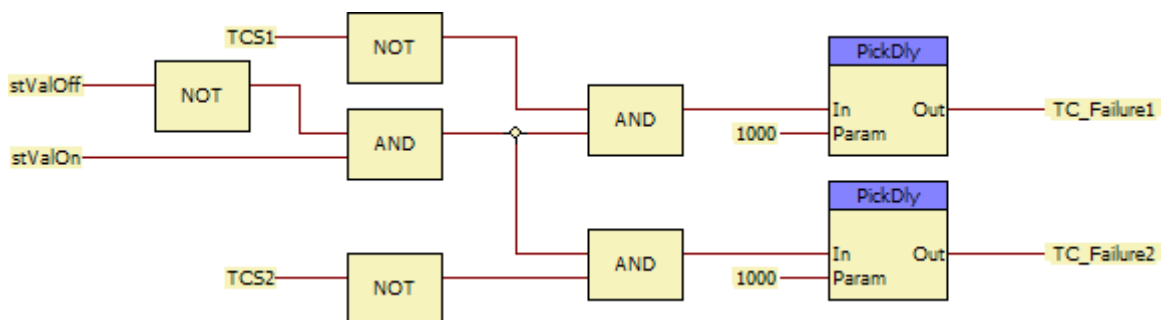


Figure 3-2 Internal logic of the Trip Circuit Supervision macro



### 3.2.6.3.2.1. Binary input signals

The following table explains the binary input signals of the macro.

*Table 3-1 Binary input signals of the Trip Circuit Supervision macro*

BINARY INPUT SIGNAL	EXPLANATION
<b>TCS1</b>	Connect here the first TCS binary input
<b>TCS2</b>	Connect here the second TCS binary input
<b>stValOff</b>	CB Off/Open signal
<b>stValOn</b>	CB On/Closed signal


### 3.2.6.3.2.2. Binary output signals

The following table explains the binary output signals of the macro.

*Table 3-2 Binary output signals of the Trip Circuit Supervision macro*

BINARY OUTPUT SIGNAL	EXPLANATION
<b>TC_Failure1</b>	Failure on the first circuit
<b>TC_Failure2</b>	Failure on the second circuit

Note that these are the outputs of a macro, and not a function block, so they must be connected to a physical or a logical output (ConnOut, create status) to make them usable in other parts of the configuration. For further information please refer to the EuroCAP software description.

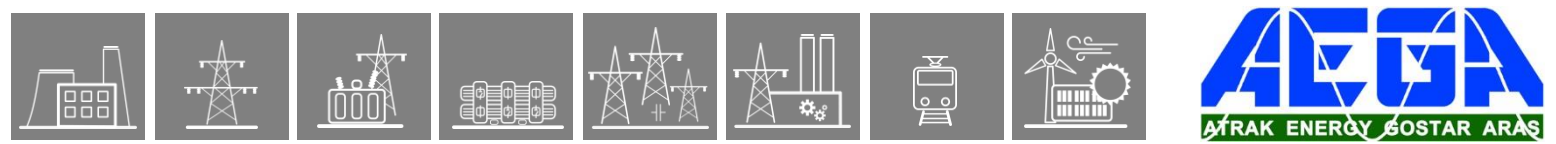

## 3.2.7. Dead Line Detection Function

### 3.2.7.1. Application

The “Dead Line Detection” (DLD) function generates a signal indicating the dead or live state of the line. Additional signals are generated to indicate if the phase voltages and phase currents are above the pre-defined limits.

#### 3.2.7.1.1. Mode of Operation

The task of the “Dead Line Detection” (DLD) function is to decide the Dead line/Live line state.

Criteria of “Dead line” state: all three phase voltages are below the voltage setting value AND all three currents are below the current setting value.

Criteria of “Live line” state: all three phase voltages are above the voltage setting value.

### 3.2.7.1.2. Structure of the Algorithm

Figure 1-1 shows the structure of the dead line detection algorithm.

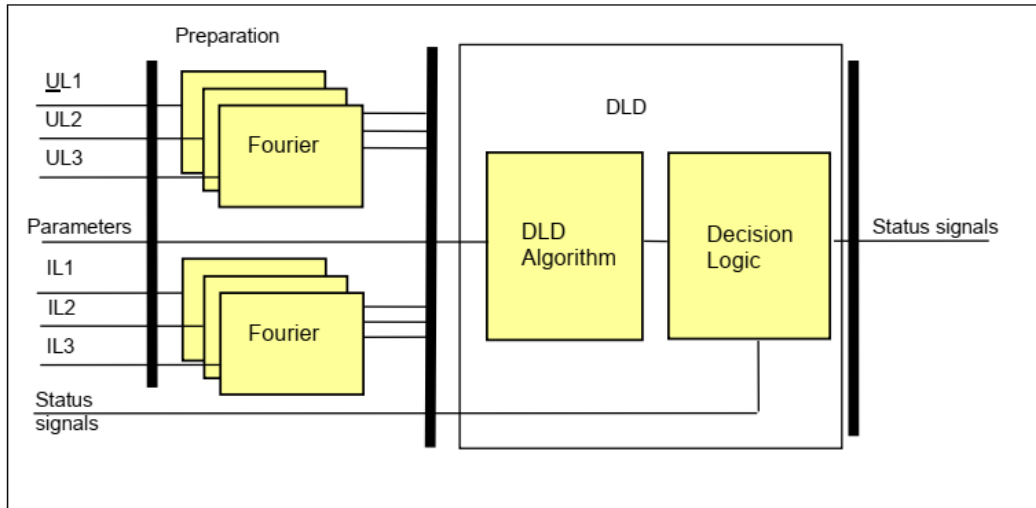


Figure 1-1 Structure of the dead line detection algorithm

For the preparation phase:

The **inputs** are

- the sampled values of the three phase voltages (UL1, UL2, UL3) and three phase currents (IL1, IL2, IL3),
- parameters.

The **outputs** are

- the fundamental Fourier components of the three phase voltages (UL1, UL2, UL3) and three phase currents (IL1, IL2, IL3).

For the DLD function:

The **inputs** are

- the fundamental Fourier components of the three phase voltages (UL1, UL2, UL3) and three phase currents (IL1, IL2, IL3),
- parameters,
- status signals.

The **software modules** of the dead line detection function are:

#### **Fourier calculations**

These modules calculate the basic Fourier components of the phase currents and phase voltages individually. These modules belong to the preparation phase.

#### **Dead Line Detection**

This module decides if the “Live line condition” (Line\_OK) or the “DeadLine condition” is fulfilled.

#### **Decision logic**

The decision logic module combines the status signals to generate the outputs of the function.

The following description explains the details of the individual components.

### 3.2.7.1.3. The Fourier Calculation (Fourier)

These modules calculate the basic Fourier current components of the phase voltages and phase currents individually. These modules belong to the preparation phase.

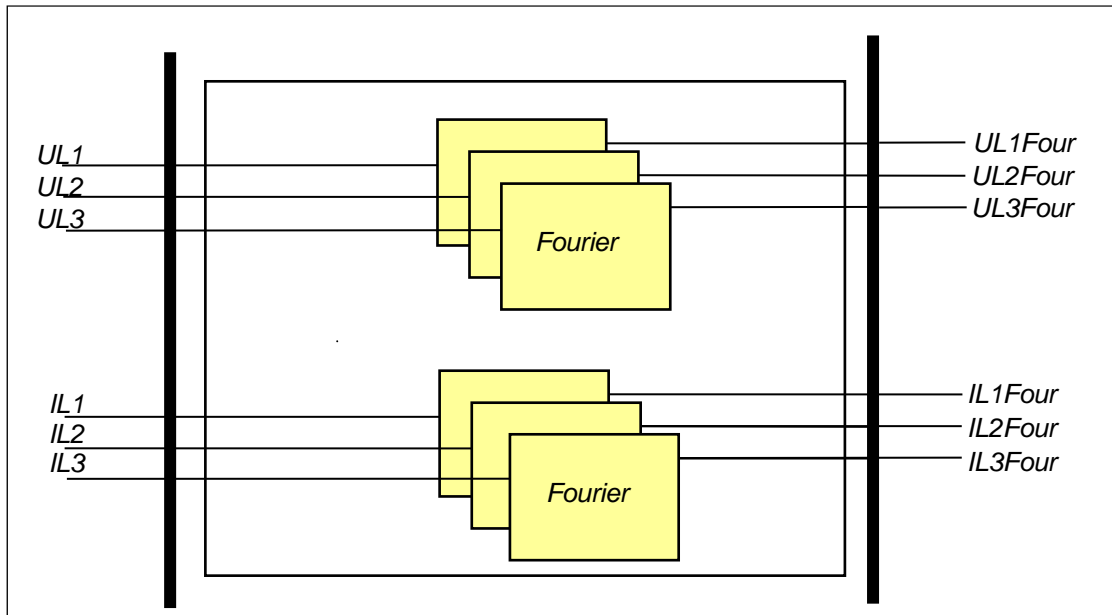


Figure 1-2 Principal scheme of the Fourier calculation

The **inputs** are the sampled values of:

- the three phase voltages (UL1, UL2, UL3)
- the three phase currents (IL1, IL2, IL3)

The **outputs** are:

- the basic Fourier components of the analyzed voltages (UL1Four, UL2Four, UL3Four),
- the basic Fourier components of the analyzed currents (IL1Four, IL2Four, IL3Four).

### 3.2.7.1.4. The Dead Line Detection Algorithm (Dead Line Detection)

This module decides if the “Live line condition” (Line\_OK) or the “DeadLine condition” is fulfilled.

The **inputs** are

- the basic Fourier components of the phase voltages (UL1Four, UL2Four, UL3Four),
- the basic Fourier components of the phase currents (IL1Four, IL2Four, IL3Four),
- status signals,
- parameters.

The **outputs** are the internal status signals of the function. These indicate the “DeadLine condition” or the “Live line condition” (Line\_OK) state.

Criteria of “Dead line” state: all three phase voltages are below the voltage setting value AND all three currents are below the current setting value.

Criteria of “Live line” state: all three phase voltages are above the voltage setting value.

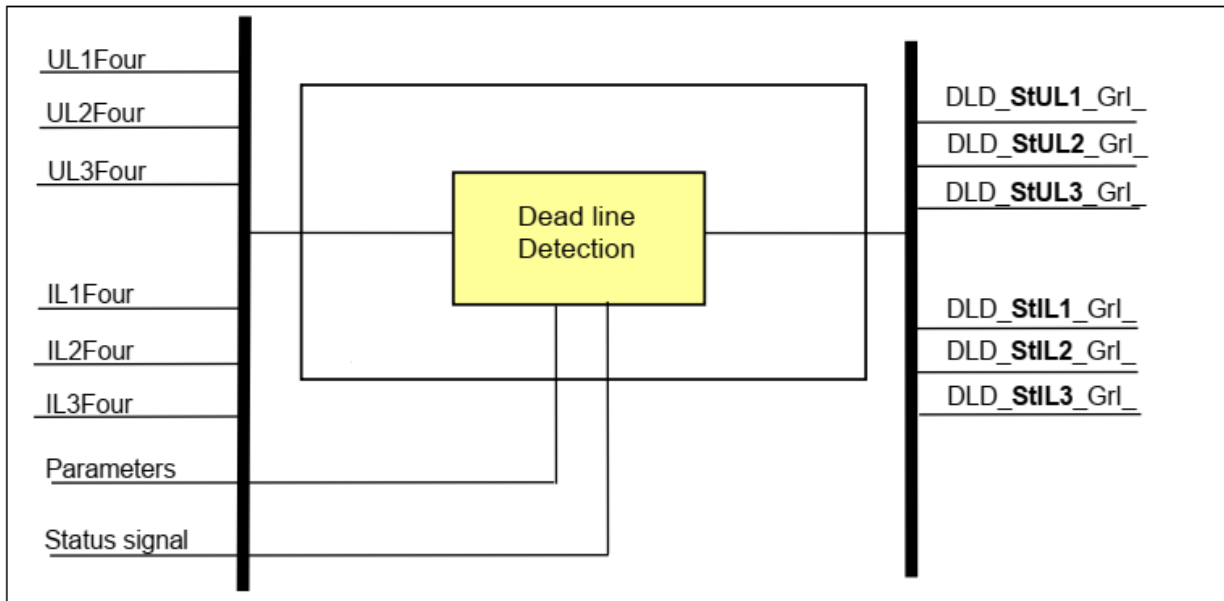


Figure 1-3 Principal scheme of the dead line detection function

## Enumerated parameters

*Table 1-1 The enumerated parameters of the dead line detection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, On	-	Off	Parameter for enabling the function

## Integer parameters

*Table 1-2 The integer parameters of the dead line detection function*

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Min Operate Voltage	%	10 – 100	1	60	Voltage setting for “Dead line” state criteria.
Min Operate Current	%	2 – 100	1	10	Current setting for “Dead line” state criteria.

## Binary status signals

The dead line detection function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**

*Table 1-3 The binary input signal of the dead line detection function*

BINARY STATUS SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_Blk_GrO_	Block	Input used to disable the function

The **binary output status signals** of the residual dead line detection function are listed in [Table 1-4](#).

*Table 1-4 The binary output status signals of the dead line detection function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_StUL1_Grl_	Start UL1	The voltage of phase L1 is above the setting limit
DLD_StUL2_Grl_	Start UL2	The voltage of phase L2 is above the setting limit
DLD_StUL3_Grl_	Start UL3	The voltage of phase L3 is above the setting limit
DLD_StIL1_Grl_	Start IL1	The current of phase L1 is above the setting limit
DLD_StIL2_Grl_	Start IL2	The current of phase L2 is above the setting limit
DLD_StIL3_Grl_	Start IL3	The current of phase L3 is above the setting limit

### 3.2.7.1.5. The Decision Logic (Decision logic)

The decision logic module combines status signals, binary and enumerated parameters to generate the dead line or live line status signals.

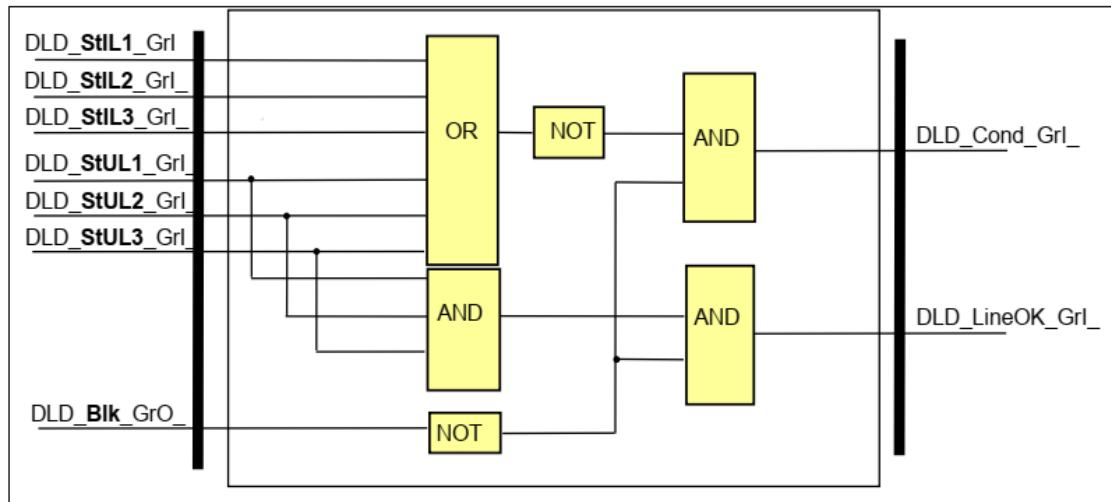


Figure 1-4 The logic scheme of the decision logic

Table 1-5 The binary input status signal of the decision logic

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_StUL1_Grl_	Start UL1	The voltage of phase L1 is above the setting limit
DLD_StUL2_Grl_	Start UL2	The voltage of phase L2 is above the setting limit
DLD_StUL3_Grl_	Start UL3	The voltage of phase L3 is above the setting limit
DLD_StIL1_Grl_	Start IL1	The current of phase L1 is above the setting limit
DLD_StIL2_Grl_	Start IL2	The current of phase L2 is above the setting limit
DLD_StIL3_Grl_	Start IL3	The current of phase L3 is above the setting limit

#### Binary status signals

The function has a binary input signal, which serves the purpose of disabling the function. **The conditions of disabling are defined by the user, applying the graphic equation editor.**

Table 1-6 The binary input signal of the dead line detection function

BINARY STATUS SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_Blk_GrO_	Block	Input for disabling the function

Table 1-7 The binary output status signals of the dead line detection function

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_DeadLine_Grl_	DeadLine condition	The requirements of "DeadLine condition" are fulfilled
DLD_LineOK_Grl_	LineOK condition	The requirements of "Live line condition" (LineOK) are fulfilled

### 3.2.7.2. DeadLine Detection Function Overview

The graphic appearance of the dead line detection function block is shown in [Figure 2-1](#). This block shows all binary input and output status signals that are applicable in the graphic equation editor.

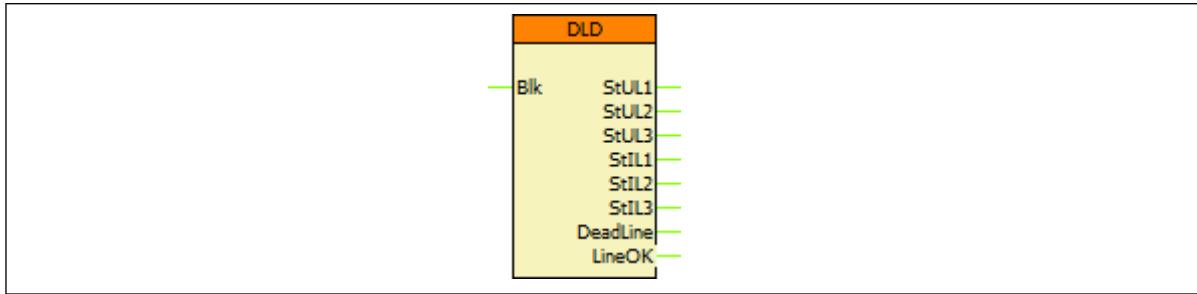


Figure 2-1 The function block of the residual instantaneous overcurrent protection

#### 3.2.7.2.1. Settings


##### 3.2.7.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 Parameters of the dead line detection function

TITLE	DIM	RANGE	STEP	DEFAULT	EXPLANATION
Operation	-	Off, On	-	Off	Parameter for enabling the function
Min Operate Voltage	%	10 – 100	1	60	Voltage setting for “Dead line” state criteria.
Min Operate Current	%	2 – 100	1	10	Current setting for “Dead line” state criteria.



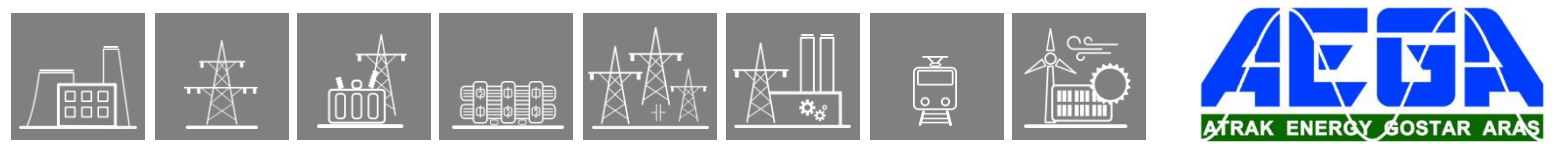

### 3.2.7.2.2. Function I/O

This section briefly describes the analogue and digital inputs and outputs of the function block.

#### 3.2.7.2.2.1. Analogue inputs

The analog inputs are the sampled values of the three phase voltages and the three phase currents.

#### 3.2.7.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side of the function block in the Logic editor.

*Table 2-2 The binary input signals of the dead line detection function*

BINARY INPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_ <b>Blk</b> _GrO_	Block	Input for disabling the function

#### 3.2.7.2.2.3. Binary output signals (graphed input statuses)

These signals can be used in EuroCAP to assign to LED, user LCD object etc. Parts written in **bold** are seen on the right side of the function block in the *Logic Editor*.

*Table 2-3 The binary output signals of the dead line detection function*

BINARY OUTPUT SIGNAL	SIGNAL TITLE	EXPLANATION
DLD_ <b>StUL1</b> _GrI_	Start UL1	The voltage of phase L1 is above the setting limit
DLD_ <b>StUL2</b> _GrI_	Start UL2	The voltage of phase L2 is above the setting limit
DLD_ <b>StUL3</b> _GrI_	Start UL3	The voltage of phase L3 is above the setting limit
DLD_ <b>StIL1</b> _GrI_	Start IL1	The current of phase L1 is above the setting limit
DLD_ <b>StIL2</b> _GrI_	Start IL2	The current of phase L2 is above the setting limit
DLD_ <b>StIL3</b> _GrI_	Start IL3	The current of phase L3 is above the setting limit
DLD_ <b>DeadLine</b> _GrI_	DeadLine condition	The requirements of "DeadLine condition" are fulfilled
DLD_ <b>LineOK</b> _GrI_	LineOK condition	The requirements of "Live line condition" (LineOK) are fulfilled

#### 3.2.7.2.2.4. Online data

The following values are visible in the *online data* page.

*Table 2-4 Online data of the dead line detection function*

SIGNAL TITLE	DIMENSION	EXPLANATION
DeadLine condition	-	The requirements of "DeadLine condition" are fulfilled
LineOK condition	-	The requirements of "Live line condition" are fulfilled



### 3.2.7.2.2.5. Events

There are no events generated for this function block.

### 3.2.7.2.3. Technical Data

*Table 2-5 Technical data of the dead line detection function*

FUNCTION	VALUE	ACCURACY
Pick-up voltage		1%
Operation time	< 20 ms	
Reset ratio	0.95	

### 3.2.7.2.4. Notes for Testing

This function does not generate events on its own. To create them, another function block, the GGIO16 custom event function block must be utilized, see its description for more information.



The **software modules** of the current unbalance function:

**Fourier calculations**

These modules calculate the RMS values of the basic Fourier current components of the phase currents individually (not part of the VCB60 function).

**Analogue signal processing**

This module processes the RMS values of the Fourier components of the phase currents to prepare the signals for the decision.


**Decision logic**

The decision logic module combines the status signals to generate the starting signal and the trip command of the function.

The following description explains the details of the individual components.

### 3.2.8.1.3. The Fourier calculation (Fourier)

These modules calculate the RMS values of the fundamental Fourier components of the phase currents individually. They are not part of the VCB60 function; they belong to the preparatory phase.

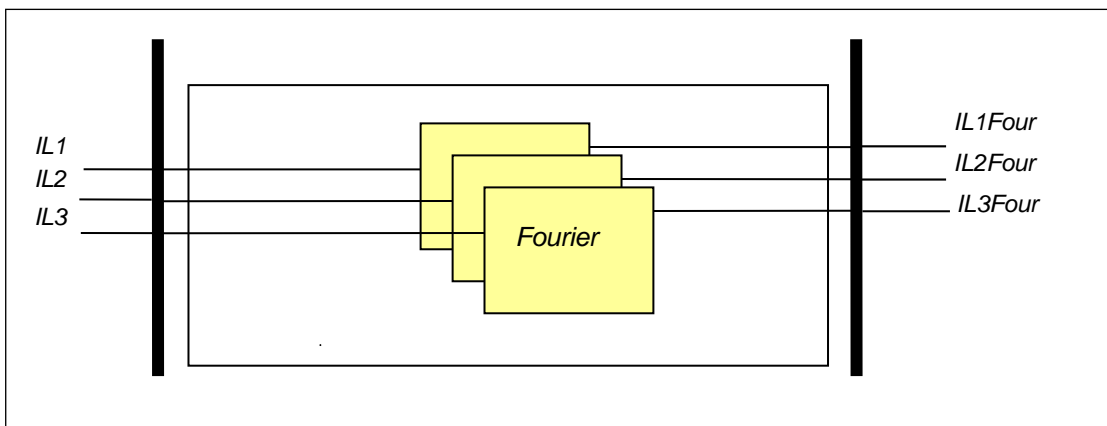

*Figure 1-2 Principal scheme of the Fourier calculation*

The **inputs** are the sampled values of the three phase currents (IL1, IL2, IL3)

The **outputs** are the RMS values of the fundamental Fourier components of the phase currents (IL1Four, IL2Four, IL3Four).

### 3.2.8.1.4. The Analogue signal processing

This module processes the Fourier components of the phase currents to prepare the signals for the decision.

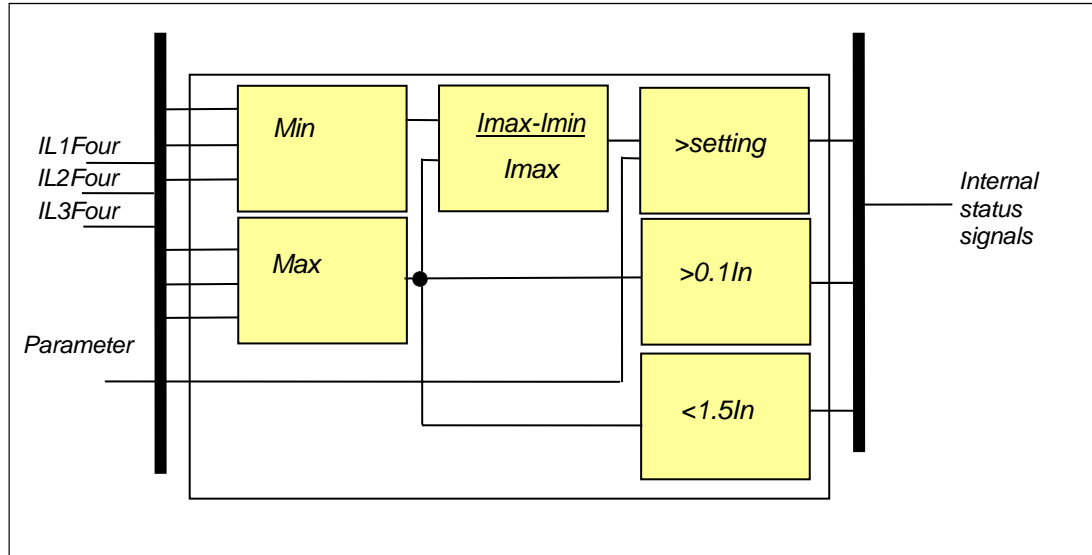


Figure 1-3 Principal scheme of the analogue signal processing

The **inputs** are the fundamental Fourier components of the analyzed currents (IL1Four, IL2Four, IL3Four)

The **outputs** are internal binary signals:

- $\Delta I >$  The difference between the maximum and minimum of the RMS values of the fundamental Fourier components of the phase currents as a percentage of the maximum of these values is above the limit defined by the preset parameter "Start current";
- $I_{max} > 0.1 I_n$  The maximum of the RMS values of the fundamental Fourier components of the phase currents is sufficient for evaluation;
- $I_{max} < 1.5 I_n$  The maximum of the RMS values of the fundamental Fourier components of the phase currents is not considered as a fault current.

### 3.2.8.1.5. The decision logic (Decision logic)

The decision logic module combines the status signals, binary and enumerated parameters to generate the trip command of the function.

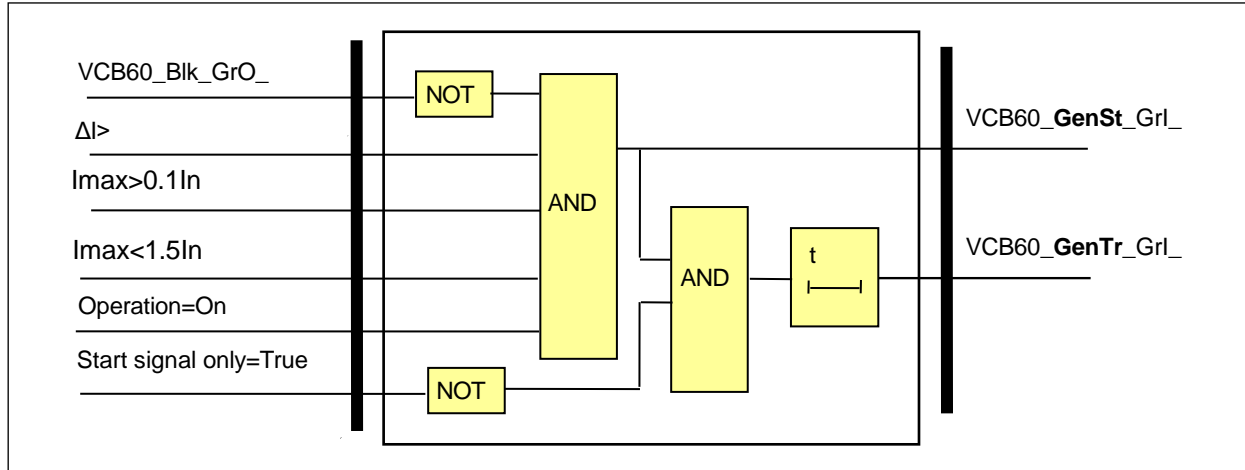


Figure 1-4 The logic scheme of the current unbalance function

The **inputs** are internal binary signals:

- $\Delta I >$  the difference between the maximum and minimum of the RMS values of the fundamental Fourier components of the phase currents as a percentage of the maximum of these values is above the limit defined by parameter setting "Start Current Diff";
- $I_{max} > 0.1 I_n$  the maximum of the RMS values of the fundamental Fourier components of the phase currents is sufficient for evaluation;
- $I_{max} < 1.5 I_n$  the maximum of the RMS values of the fundamental Fourier components of the phase currents is not considered as a fault current.

### 3.2.8.2. Current unbalance protection function overview

The graphic appearance of the function block of the current unbalance protection function is shown below. The block shows all binary input and output status signals which are applicable in the graphic equation editor.

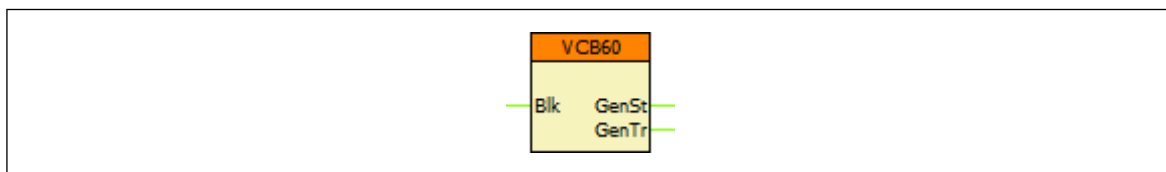


Figure 2-1 Graphic appearance of the function block of the current unbalance protection function



### 3.2.8.2.2.5. Events

The following events are generated in the event list, as well as sent to the SCADA according to the configuration.

*Table 2-5 Generated events of the current unbalance protection function*

EVENT	VALUE	EXPLANATION
General Start	off, on	General start of the function
General Trip	off, on	General trip command of the function

### 3.2.8.2.3. Technical data

*Table 2-6 Technical data of the current unbalance protection function*

FUNCTION	VALUE	ACCURACY
Pick-up starting accuracy at In		< 2 %
Reset ratio	0,95	
Operate time	70 ms	

### 3.2.8.2.4. Notes for testing

Normally in the EuroProt+ devices the trip contacts are assigned to the Trip Logic function block, and not to the protection function blocks. Because of this, the testing personnel must make sure that the Trip Logic is switched on ('Operation' parameter is set to other than 'Off') before starting the tests, otherwise there will be no physical trip on the relay.

Note that the time delay parameter incorporates the algorithm time as well, so the time delay *does not mean the time difference between the appearance of the start and trip signals* of the function. In other words: it is not the delay between the detection of the fault and the trip that follows it. This should be taken into consideration when checking the disturbance records.

Instead the time delay parameter defines the elapsed time from the appearance of the faulty state to the trip. Because of this, while testing, the delay measurement should start *from the moment of the fault injection* until the trip signal.






<i>Synchrocheck function (SYN25)</i>	
Voltage Diff	Voltage different value
Frequency Diff	Frequency different value
Angle Diff	Angle different value
<i>Line measurement (MXU_L) (here the displayed information means primary value)</i>	
Active Power – P	Three-phase active power
Reactive Power – Q	Three-phase reactive power
Apparent Power – S	Three-phase power based on true RMS voltage and current measurement
Current L1	True RMS value of the current in phase L1
Current L2	True RMS value of the current in phase L2
Current L3	True RMS value of the current in phase L3
Voltage L1	True RMS value of the voltage in phase L1
Voltage L2	True RMS value of the voltage in phase L2
Voltage L3	True RMS value of the voltage in phase L3
Voltage L12	True RMS value of the voltage between phases L1 L2
Voltage L23	True RMS value of the voltage between phases L2 L3
Voltage L31	True RMS value of the voltage between phases L3 L1
Frequency	Frequency
<i>Metering (MTR)</i>	
Forward MWh	Forward MWh
Backward MWh	Backward MWh
Forward MVAh	Forward MVAh
Backward MVAh	Backward MVAh
<i>Line thermal protection (TTR49L)</i>	
Calc. Temperature	Calculated line temperature

\* The reference angle is the phase angle of “Voltage Ch - U1”

Table 3-146 Measured analog values



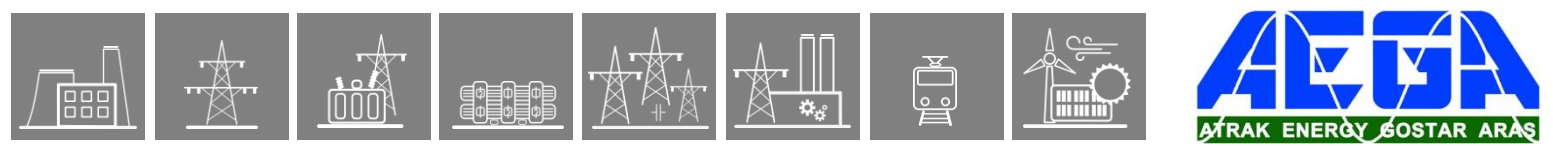

NOTE: The rated primary current of the channels is not needed for the current input function block itself. These values are passed on to the subsequent function blocks.

### 3.3.1.1.1.2. Setting the rated secondary current

The scaling of the currents (even hardware scaling) depends on parameter setting.

#### Rated Secondary I1-3 and Rated Secondary I4

Select the rated secondary current according to the nominal data of the main current transformer. The options to choose from are 1A or 5A (in special applications, 0.2A or 1A). This parameter influences the internal number format and, naturally, accuracy. (A small current is processed with finer resolution if 1A is selected.) The first parameter is common for the first three channels and the second one is applied for the fourth channel.

NOTE: when selecting from the available choice, no hardware modification is needed.

### 3.3.1.1.1.3. Setting the positive direction of the currents

The positive direction of the currents influences the correct operation of directionality (e.g. distance protection, directional overcurrent protection, power calculation, etc.) If needed, the currents can be inverted by setting parameters. This is equivalent to interchanging the two wires, connecting the currents to the inputs.

#### Starpoint I1-3 and Direction I4.

Starpoint I1-3 applies to each of the channels IL1, IL2 and IL3. The example of Figure 1-1 below shows the connection and the correct parameter setting for Starpoint I1-3=Line. The current L1 is connected to terminal No1 of the CT input, the current L2 to No3, and the current L3 to No5. The common point of the CT inputs is the connected No2-No4-No6. This point leads the residual current to the input No7. The connection point No8 is connected with the fourth wire to the starpoint of the CTs. This application of the fourth channel is the "Normal" direction.

If the currents are connected not this way then change the parameter values accordingly.

### 3.3.1.1.1.4. Setting the rated primary current

These parameters are needed only to display the currents (and powers) in primary scale. The protection function apply secondary values, these parameters are not needed for protection functions.

#### Rated Primary I1-3 and Rated Primary I-4

Select the rated primary currents according to the nominal data of the main current transformers. The first parameter (Rated Primary I1-3) is common for the first three channels and the second (Rated Primary I-4) is for the fourth channel.

### 3.3.1.1.2. Application of the on-line measurements in commissioning

The **measured values** of the current input function block are listed and explained in the Table below.

Measured value	Dim.	Explanation
Current Ch - I1	A(secondary)	Fourier basic component of the current in channel IL1
Angle Ch - I1	degree	Vector position of the current in channel IL1
Current Ch – I2	A(secondary)	Fourier basic component of the current in channel IL2
Angle Ch – I2	degree	Vector position of the current in channel IL2
Current Ch – I3	A(secondary)	Fourier basic component of the current in channel IL3
Angle Ch – I3	degree	Vector position of the current in channel IL3
Current Ch – I4	A(secondary)	Fourier basic component of the current in channel I4
Angle Ch – I4	degree	Vector position of the current in channel I4

*Table 1-3 The measured analogue values of the current input function*

NOTE1: The scaling of the Fourier basic component is such that if pure sinusoid 1A RMS of the rated frequency is injected, the displayed value is 1A.

NOTE2: The reference of the vector position depends on the device configuration. If a voltage input module is included, then the reference vector (vector with angle 0 degree) is the vector calculated for the first voltage input channel of the first applied voltage input module. If no voltage input module is configured, then the reference vector (vector with angle 0 degree) is the vector calculated for the first current input channel of the first applied current input module. (The first input module is the one, located closer to the CPU module.)

### 3.3.1.1.3. Examples

When the vector position of the currents are relevant (e.g. distance protection, directional overcurrent protection, power measurement, etc.) then mind the correct connection of the instrument transformers and the related parameter setting. If the wires of the secondary cables are interchanged then change also the related parameter values.

#### 3.3.1.1.3.1. Residual current measurement

Figure 1-1 shows a connection example with 3I<sub>0</sub> measurement. The star-point of the CT-s is towards the line, L1 is connected to terminal No1 of the CT input, L2 to No3, L3 to No5.

The common point of the CT inputs is the connected No2-No4-No6. This point leads the residual current to the input No7. The connection point No8 is connected with the fourth wire to the star-point of the CTs.


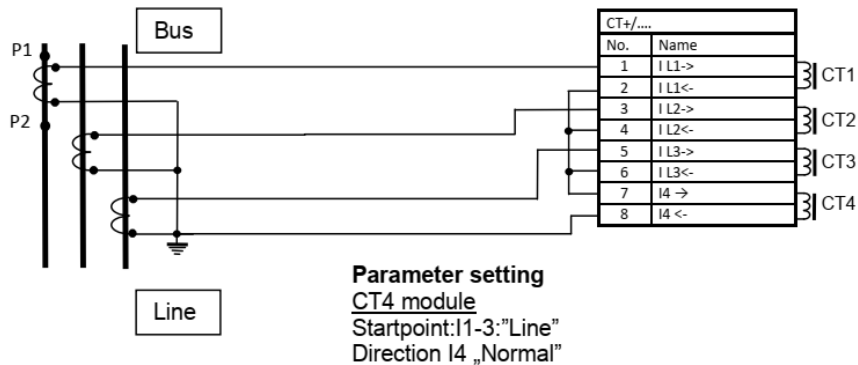


Figure 1-1 Example: CT connection with 3I<sub>0</sub> measurement

The related proposed parameter setting is the screen-shot of Figure 1-2. Parameter “Starpoint I1-3” is set to “Line”, indicating that the star-point is toward the protected object (line). The parameter “Direction I4” is set to “Normal”, indicating that the residual current flows in to terminal No7 and the star point of the primary current transformer is toward the protected object (line).

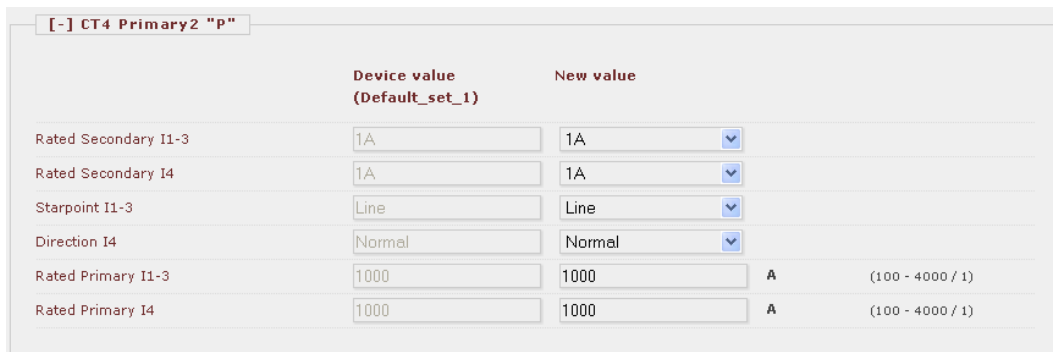

	Device value (Default_set_1)	New value		
Rated Secondary I1-3	1A	1A		
Rated Secondary I4	1A	1A		
Starpoint I1-3	Line	Line		
Direction I4	Normal	Normal		
Rated Primary I1-3	1000	1000	A	(100 - 4000 / 1)
Rated Primary I4	1000	1000	A	(100 - 4000 / 1)

Figure 1-2 Example: Parameter setting, according to Figure 1-1

In case of normal operation of the network, the correct connection of the CT-s and the related parameter setting can be checked using the “On-line” measurements. Disconnect one phase of the protected line, e.g. L1. The expected result is shown in Figure 1-3. The current is missing in phase L1 (Current Ch-I1 = 0) and the measured 3I<sub>0</sub> value is the vector sum of the remaining I<sub>2</sub>+I<sub>3</sub>. (Value of “Current Ch - I4” with the related “Angle - I4”).

NOTE: If in this test, only the secondary current is disclosed using a short measuring cable, then the measured current in this phase is usually not zero, due to the current distribution between the low-impedance input and the impedance of the measuring cable. For correct result, additionally to the short-circuit, also the disconnection of this input is needed. In this example the reference vector is the vector of the first voltage channel (not shown in the screenshot).

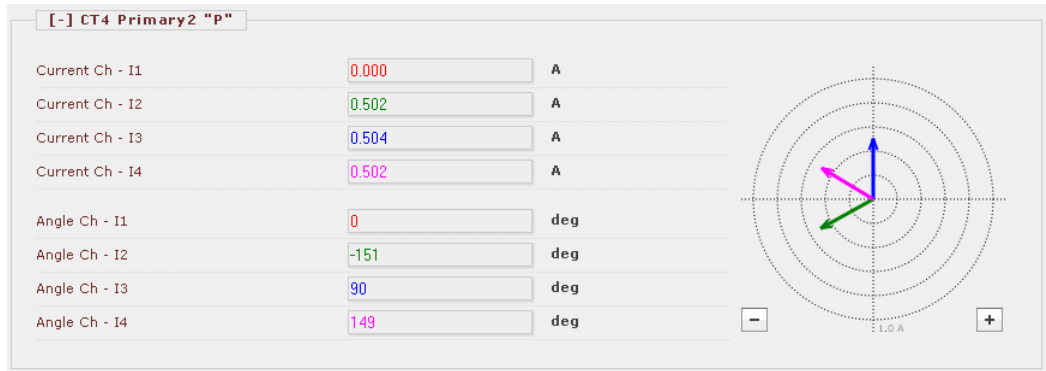


Figure 1-3 Example: Checking the current connection

### 3.3.1.1.3.2. Application of core-balanced CT

Figure 1-4 shows a connection example with 3I<sub>0</sub> measurement. The star-point of the CT-s is towards the line, L1 is connected to terminal No1 of the CT input, L2 to No3, L3 to No5. The common point of the CT inputs is the connected No2-No4-No6. The separately measured residual current is connected with the same polarity to terminals 7-8.

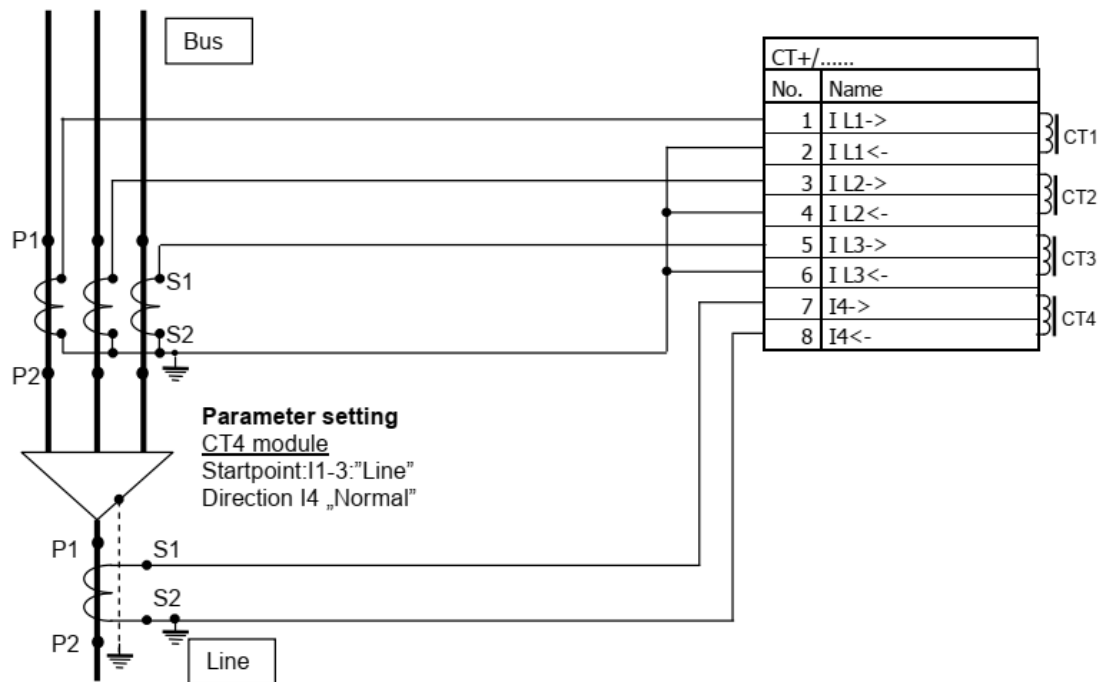


Figure 1-4 Example: CT connection with core-balance CT application

This figure also indicates the proposed parameter values for this connection. The checking is similar to that, shown in Figure 1-3.



## 3.3.2. Line and frequency measurement functions

### 3.3.2.1. Application

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers when they are available in the actual configuration.

These signals are pre-processed by the “VT4 module” voltage input function block and by “CT4 module” the current input function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic phasors of the voltages and currents and the true RMS values. Additionally, it is in these function blocks that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed values and the measured transformer parameters, the measurement function blocks calculate - depending on the hardware and software configuration - the primary RMS values of the voltages and currents and some additional values such as active and reactive power, symmetrical components of voltages and currents. These values are available as primary quantities and they can be displayed on the on-line screen of the device or on the remote user interface of the computers connected to the communication network and they are available for the SCADA system using the configured communication system.

### 3.3.2.2. Mode of operation

The **inputs** of the line measurement function are

- the Fourier components and true RMS values of the measured voltages and currents,
- frequency measurement,
- parameters.

The **outputs** of the line measurement function are

- displayed measured values,
- reports to the SCADA system.

**NOTE:** the scaling values are entered as parameter setting for the “Voltage transformer input” function block and for the “Current transformer input” function block.



### 3.3.2.3. The measurement

#### 3.3.2.3.1. The measured values; variants of the function

There are six variants of the MXU function, based on their **measured values**. Parameters and measurements are alike for each. The **type of the variant** is shown in the *function block name*:

- Line Measurement (*MXU\_LM*)
- Frequency Measurement (*MXU\_F*)
- Voltage measurement (*MXU\_V*)
- Voltage measurement (*MXU\_V1*) (single voltage)
- Current measurement (*MXU\_C*)
- Current measurement (*MXU\_C1*) (single current)

Table 1-1 Measured values of each variant

ON-LINE MEASURED VALUE	EXPLANATION	MXU FUNCTION BLOCK VARIANT					
		LM	F	V	V1	C	C1
MXU_P_OLM_	Active Power – P (Fourier base harmonic value)	X					
MXU_Q_OLM_	Reactive Power – Q (Fourier base harmonic value)	X					
MXU_S_OLM_	Apparent Power – S (Fourier base harmonic value)	X					
MXU_Fi_OLM_	Power factor	X					
MXU_I1_OLM_	Current L1	X				X	X
MXU_I2_OLM_	Current L2	X				X	
MXU_I3_OLM_	Current L3	X				X	
MXU_Ipos_OLM_	Calculated positive seq. current	X				X	
MXU_Ineg_OLM_	Calculated negative seq. current	X				X	
MXU_3Io_OLM_	Calculated 3Io	X				X	
MXU_U1_OLM_	Voltage L1	X		X	X		
MXU_U2_OLM_	Voltage L2	X		X			
MXU_U3_OLM_	Voltage L3	X		X			
MXU_U12_OLM_	Voltage L12	X		X			
MXU_U23_OLM_	Voltage L23	X		X			
MXU_U31_OLM_	Voltage L31	X		X			
MXU_Upos_OLM	Calculated positive seq. voltage	X		X			
MXU_Uneg_OLM_	Calculated negative seq. voltage	X		X			
MXU_3Uo_OLM_	Calculated 3Uo	X		X			
MXU_f_OLM_	Frequency		X	X			

### 3.3.2.3.2. The measurement modes

Regarding the power measurements there are two possibilities for the measurement modes. The first one is the “ThreePhase”-method, where all three measured voltages and currents are considered in the power calculation. The second one is the “Aron”-method, where two phase-to-phase voltages and two phase currents are taken into the calculation. This method has correct results only in case when the voltages and currents are symmetrical. The user can choose the mode with the “Measurement mode” parameter. For the “Aron”-method there are three options:

Table 1-2 Explanation for the Aron measurement modes

Measurement mode	Used phase-currents	Used phase-to-phase voltages
Aron L2-L3	L2, L3	L1-L2, L3-L1
Aron L3-L1	L1, L3	L1-L2, L2-L3
Aron L1-L2	L1, L2	L2-L3, L3-L1



If the “Connection U1-3” parameter of the *VT4 module* function block is set to “Ph-Ph”, the “ThreePhase”-method cannot be used for the power measurements here, so either of the “Aron” methods must be set for it. Otherwise, the device will provide a warning signal (yellow Status LED, “General param. error” message).

### 3.3.2.4. Reporting the measured values and the changes

It is usual for the SCADA systems that they sample the measured and calculated values in regular time periods and additionally they receive the changed values as reports at the moment when any significant change is detected in the primary system. The “Line measurement” function block performs such reporting for the SCADA system. Three parameters define this reporting:

- *Report Deadband* for choosing the type of reporting, or disabling the reporting
- *Deadband Value* for defining the deadband width
- *Range (value)* for evaluating the “out-of-range” condition

The usage of these parameters is explained in the following chapters.

#### 3.3.2.4.1. “Amplitude” mode of reporting

If the “Amplitude” mode is selected for reporting, a report is generated if the measured value leaves the deadband around the previously reported value. As an example, [Figure 1-1](#) shows that the current becomes higher than the value reported in “report1” PLUS the Deadband value, this results “report2”, etc.

For this mode of operation, the Deadband parameters are explained in the figure below.

**NOTE:** The “Range” parameters are needed to evaluate a measurement as “out-of-range”.

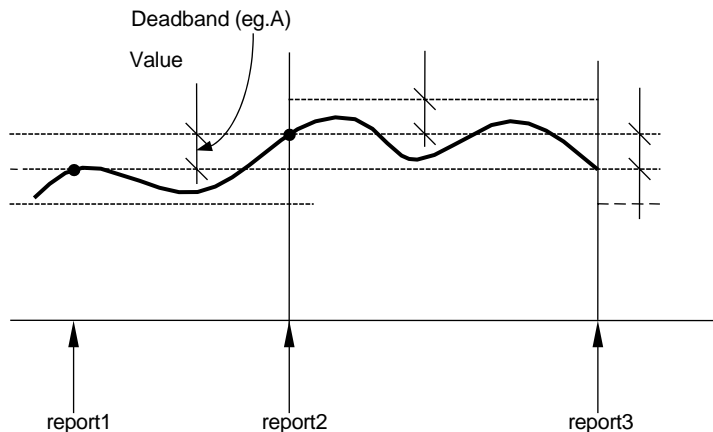


Figure 1-1 Reporting if “Amplitude” mode is selected

### 3.3.2.4.2. “Integrated” mode of reporting

If the “Integrated” mode is selected for reporting, a report is generated if the time integral of the measured value since the last report gets becomes larger, in the positive or negative direction, then the (deadband\*1sec) area. As an example, [Figure 1-2](#) shows that the integral of the current in time becomes higher than the Deadband value multiplied by 1sec, this results “report2”, etc.

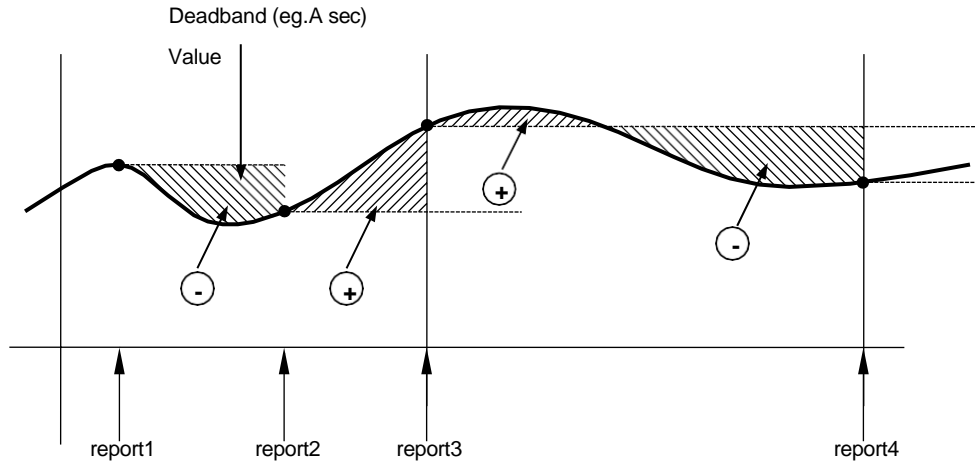


Figure 1-2 Reporting if “Integrated” mode is selected

### 3.3.2.4.3. Periodic reporting

Periodic reporting is generated independently of the changes of the measured values when the defined time period elapses. If the reporting time period is set to 0, then no periodic reporting is performed for this quantity.

Applying periodic reporting and setting up its interval is done by using the **Communication configurator**, a part of the **EuroCAP** software (see its description for detailed information).

Once the “Trigger period” property is set to “True”, the “Integrity period” setting becomes available to set (in milliseconds). As an example, see the picture below.


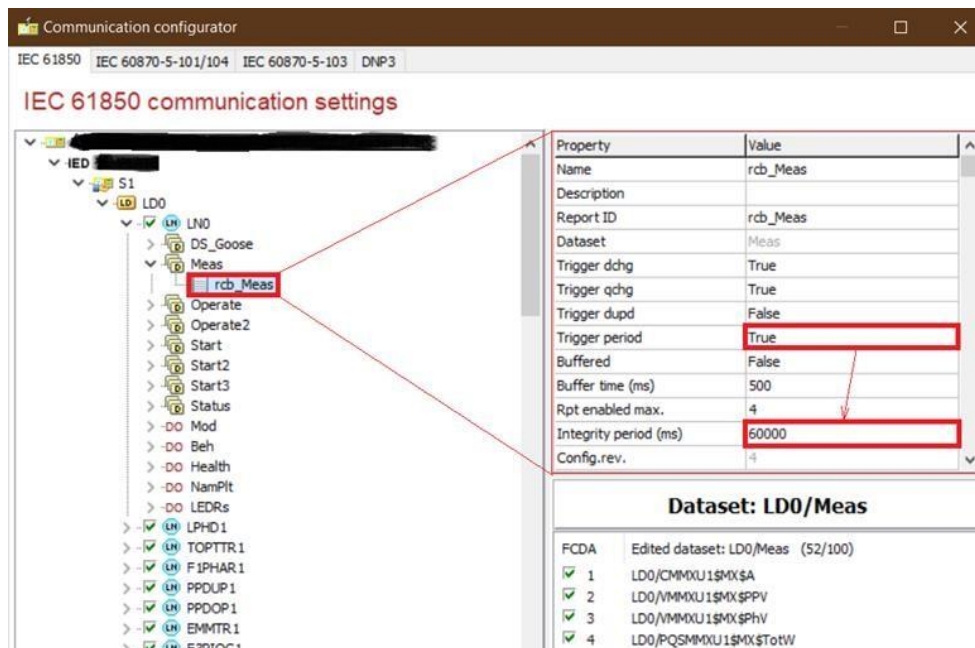


Figure 1-3 Setting up periodic reporting in EuroCAP

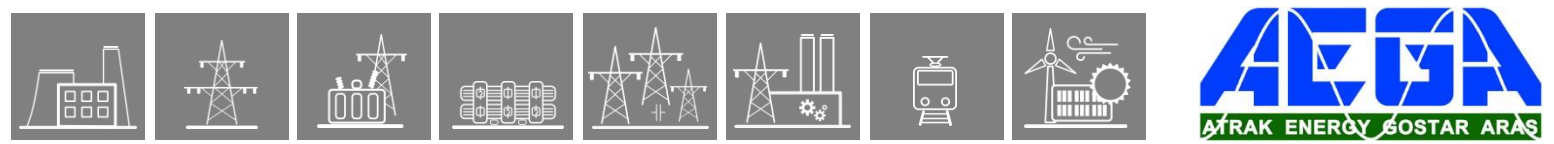

### 3.3.2.4.4. Zero-point clamping

A measured value under the zero-point clamping limit is cut off to zero.

- Three-phase current measurement 0.2% of nominal ( $I_n$ )
- Three-phase voltage measurement 2% of nominal ( $U_n$ )
- Residual current measurement 0.2% of nominal ( $I_n$ )
- Residual voltage measurement 2% of nominal ( $U_n$ )
- Phase sequence current measurement 0.2% of the nominal ( $I_n$ )
- Phase sequence voltage measurement 2% of the nominal ( $U_n$ )
- Three-phase power and energy measurement 0.23% of the nominal ( $S_n$ )



Range Value - Ipos	A	1 – 5000	1	500	Range value for the positive seq. current
Report Deadband - P	-	Off, Amplitude, Integrated	-	Amplitude	Selection of the reporting mode for active power measurement
Deadband Value - P	kW*	0.10 – 10000.00	0.01	10	Deadband value for the active power
Range Value - P	kW*	1.00 – 100000.00	0.01	500	Range value for the active power
Report Deadband - Q	-	Off, Amplitude, Integrated	-	Amplitude	Selection of the reporting mode for reactive power measurement
Deadband Value - Q	kVAr*	0.10 – 10000.00	0.01	10	Deadband value for the reactive power
Range Value - Q	kVAr*	1.00 – 100000.00	0.01	500	Range value for the reactive power
Report Deadband - S	-	Off, Amplitude, Integrated	-	Amplitude	Selection of the reporting mode for apparent power measurement
Deadband Value - S	kVA*	0.10 – 10000.00	0.01	10	Deadband value for the apparent power
Range Value - S	kVA*	1.00 – 100000.00	0.01	500	Range value for the apparent power
Report Deadband	Hz	Off, Amplitude, Integrated	-	Amplitude	Selection of the reporting mode for frequency measurement
Deadband Value	Hz	0.01 – 1.00	0.01	0.03	Deadband value for the frequency
Range Value	Hz	0.05 – 10.00	0.01	5	Range value for the frequency

*\*the prefixes can change (i.e. kW→MW, kV→V etc.) depending on the configuration; changing these is done by Protecta personnel*

*\*\*if the setting range is to be extended, contact Protecta personnel*

### 3.3.2.5.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.3.2.5.2.1. Analogue inputs

The analogue inputs of the measurement functions are

- the Fourier components and true RMS values of the measured and calculated secondary voltages
- the Fourier components and true RMS values of the measured secondary currents,

#### 3.3.2.5.2.2. Analogue outputs (measurements)

See the next chapter (On-line data) for the listing of all measurements. Note again, that the measured values depend on the type of the actual measurement function block, see Chapter [1.3.1](#)

#### 3.3.2.5.2.3. On-line data

The **on-line data** of the line measurement function depend on the available analogue values which are referring to the applied hardware configuration.

Visible values on the on-line data page:

*Table 2-2 On-line data of the line measurement function*

SIGNAL TITLE	DIMENSION	EXPLANATION
Power - P	kW*	Calculated three-phase active power
Reactive Power - Q	kVAr*	Calculated three-phase reactive power
Apparent Power - S	kVA*	Calculated three-phase apparent power
Power factor	-	Calculated power factor
Current L1	A	Measured primary current L1 based on the nominal values of the CT4 current input function
Current L2	A	Measured primary current L2 based on the nominal values of the CT4 current input function
Current L3	A	Measured primary current L3 based on the nominal values of the CT4 current input function
Positive sequence current	A	Calculated positive sequence current from the three phase currents
Negative sequence current	A	Calculated negative sequence current from the three phase currents
Calculated 3Io	A	Calculated 3Io from the three phase currents
Voltage L1	kV*	Measured primary L1 phase voltage L1 based on the nominal values of the VT4 voltage input function
Voltage L2	kV*	Measured primary L2 phase voltage L2 based on the nominal values of the VT4 voltage input function
Voltage L3	kV*	Measured primary L3 phase voltage L3 based on the nominal values of the VT4 voltage input function
Voltage L12	kV*	Calculated L12 phase-to-phase voltage
Voltage L23	kV*	Calculated L23 phase-to-phase voltage
Voltage L31	kV*	Calculated L31 phase-to-phase voltage
Positive sequence voltage	kV*	Calculated positive sequence voltage from the three phase voltages
Negative sequence voltage	kV*	Calculated negative sequence voltage from the three phase voltages
Calculated 3Uo	kV*	Calculated 3Uo from the three phase voltages
Frequency	Hz	Measured frequency

*\*the prefixes may be different (i.e. kW→MW, kV→V etc.) depending on the configuration; changing these is done by Protecta personnel*







### 3.3.2.5.3.1. Notes for testing

If there are no measurements seen on the SCADA software, check the Report Deadband parameter and/or the settings of the periodic reporting in the Communication Configurator. The former's default value is 'Off', and the latter's is 'False', which means that by default, the reporting is disabled. It must be enabled first.

The **periodic reporting** is defined in the device configuration file (.epc/.epcs) using EuroCAP. See Chapter [1.4.3](#). This also means that changing the properties of this will require loading a new configuration file to the device (hence a full device restart).




If the "Connection U1-3" parameter of the *VT4 module* function block is set to "Ph-Ph", the "ThreePhase"-method cannot be used for the power measurements here, so either of the "Aron" methods must be set for it. Otherwise, the device will provide a warning signal (yellow Status LED, "General param. error" message).

For the devices shipped with modules manufactured before 2020/Q2, the technical data table is different:

*Table 2-7 Technical data of the line measurement function*

HARDWARE MODULE	RANGE	ACCURACY
CT+/5151 or CT+/5102	0,2 In – 0,5 In	±2%, ±1 digit
	0,5 In – 20 In	±1%, ±1 digit
CT+/1500	0,03 In – 2 In	±0,5%, ±1 digit

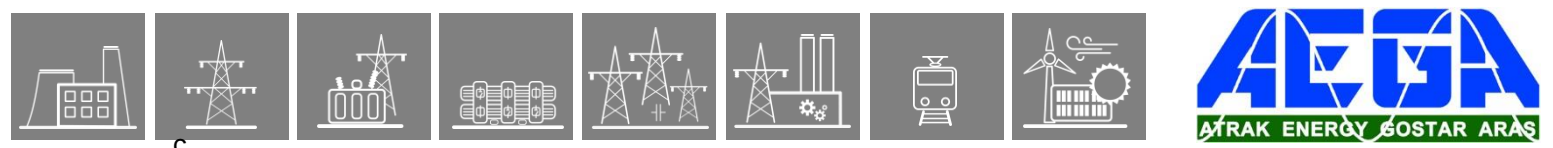

C

### 3.3.3. Average and maximum measurement function

#### 3.3.3.1. The measurement

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers.

These signals are pre-processed by the “Voltage transformer input” function block and by the “Current transformer input” function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic phasors of the voltages and currents and the true RMS values. Additionally, it is in these function blocks that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed analog signals, several function blocks perform additional calculation, e.g.: active and reactive power, frequency, temperature, impedances, higher harmonics, symmetrical components, etc.

The “Average and maximum” function block calculates average values and locates maximum values of the assigned (measured and calculated) analog signals.

#### 3.3.3.2. Operation of the function block

The **input** of the function can be:

- Any single calculated analog value: active and reactive power, frequency, temperature, impedances, higher harmonics, symmetrical components, etc. depending on the assignment in the configuration.

The **outputs** of the function are:

- Average of the analog value,
- Maximum of the analog value.

The average and the maximum values are automatically reported to the SCADA system. The maximum is logged and is sent automatically to the HMI, the average however is logged only if a binary input of the function block enables this activity.

#### 3.3.3.3. Reporting the values

The average calculation needs a time span for calculation; this is given as a parameter value, set in minutes (or the function is switched off). When the timer expires, the calculated average is reported automatically to the SCADA system. Depending on the requirements, this value is also logged and is sent to the local HMI. This activity is controlled by a binary input of the function block.

The identification of the maximum value needs also a time span; this is given as a parameter value, set in days. When the timer expires, the found maximum value is reported automatically to the SCADA system. Additionally this value is also logged and is sent to the local HMI.

The starting of the timer is controlled by the internal real-time clock of the device. The moment of time for the starting of the processing cycles is set by a parameter value.

### 3.3.3.4. Parameters of the function block

#### Enumerated parameter

Parameter name	Title	Selection range	Default
Time window for averaging			
MXU_TimWin_EPar_T _	Average TimeWindow	Off,5min,10min,15min,30min,60min	Off

Table 1-1 The enumerated parameters of the average and maximum measurement function

#### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Time window for finding the maximum value						
MXU_MaxResInt_IPar_T	MaxReset Interval	day	0	365	1	1
Moment of time for reporting and reset						
MXU_MaxResTime_IPar_T	MaxReset Time	hour	0	23	1	12

Table 1-2 The integer parameters of the average and maximum measurement function

### 3.3.3.5. Status signals of the function block

The average and maximum measurement function block has **binary input signals**, which serve the purpose of resetting the values and enabling logging the average value. **The conditions are defined by the user, applying the graphic equation editor.**

Binary status signal	Explanation
MXU_Reset_GrO_IL1 *	This signal resets both the calculated average and the found maximum value. At the end of the running cycles, the values found during the shortened cycle will be processed.
MXU_DemHMIEna_GrO_IL1	During the active state of this signal also the calculated average value is logged

\* Note: In this example “IL1” is indicating that in the instant of the function block processes the RMS value of the current in line 1

Table 1-3 The binary input signal for the average and maximum measurement function block

The average and maximum measurement function block **has no binary output signals.**

### 3.3.3.6. The function block

The function block of the average and maximum measurement function is shown in Figure 1-1. This block shows all binary input (and output) status signals that are applicable in the graphic equation editor.

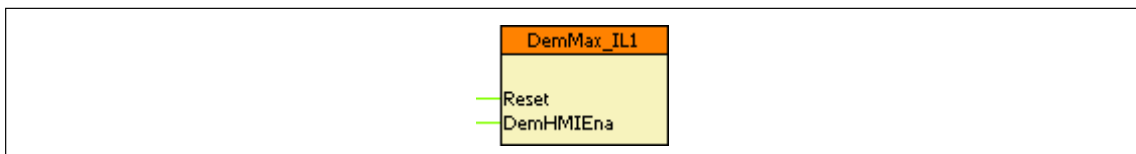


Figure 1-1 The function block of the average and maximum measurement function block

### 3.3.4. AIC current input function

#### 3.3.4.1. Application of the AIC current input function

If the factory configuration includes an AIC input hardware module, the AIC current input function block is automatically configured among the software function blocks. Separate current input function blocks are assigned to each AIC current input hardware module.

The AIC current input module accepts transducers current outputs. The AIC module has four channels, they can measure unipolar and bipolar current values in wide ranges. (See EuroProt+ hardware description document.) The transducer converts any physical quantity to DC current values.

The transmitters can be connected by wiring methods, shown in Figure 1–1, Figure 1–2 and Figure 1–3.

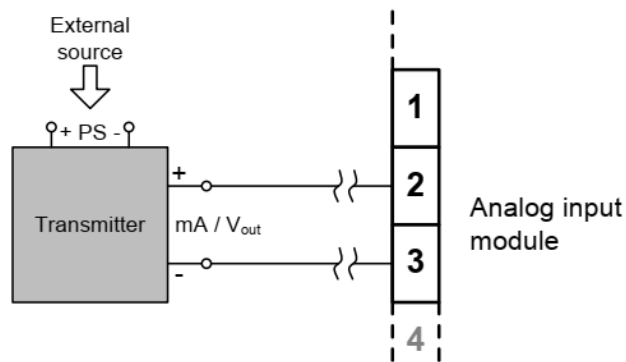


Figure 1–1 2-wire AIC wiring without 12 V excitation

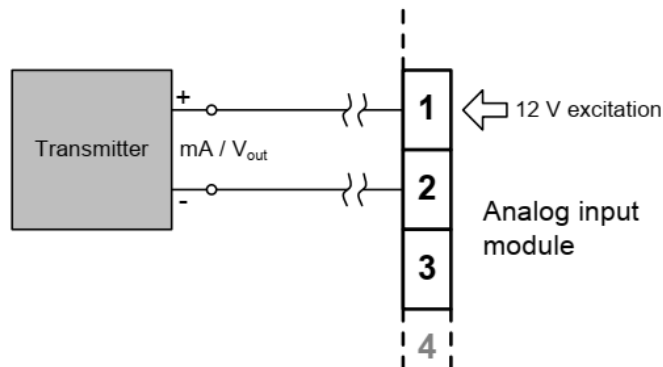


Figure 1–2 2-wire AIC wiring with 12 V excitation

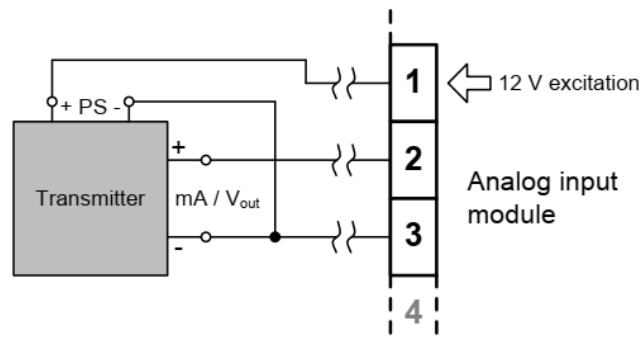


Figure 1–3 3-wire AIC wiring with 12 V excitation

The channels of the module are independent of each other. To each channel a dedicated measuring module is assigned. These measuring modules are described in a separate document: “**GGIOmA current measurement module function block description**”.

### 3.3.4.2. Technical summary

#### 3.3.4.2.1. Technical data

The technical data of the AIC analog current input module are related to the hardware module. This is described in the document “**EuroProt+ Hardware description**, Chapter 11: analog input module”.

#### 3.3.4.2.2. Summary of the parameters

The parameters of the AIC analog current input function are explained in the following table.


##### Enumerated parameters

Parameter name	Title	Selection range	Default
Polarity of Channel 1			
AIC_Ch1Dir_EPar_1	Direction - Ch1	Normal,Inverted*	Normal
Polarity of Channel 2			
AIC_Ch2Dir_EPar_1	Direction – Ch2	Normal,Inverted*	Normal
Polarity of Channel 3			
AIC_Ch3Dir_EPar_1	Direction – Ch3	Normal,Inverted*	Normal
Polarity of Channel 4			
AIC_Ch4Dir_EPar_1	Direction – Ch4	Normal,Inverted*	Normal

\*Figures 1-1, 1-2 and 1-3 show “Normal” connection polarity

Table 1-1 The enumerated parameters of the current input function

NOTE: The function block has no input and output binary signals, the graphic logic editor does not show this function block.

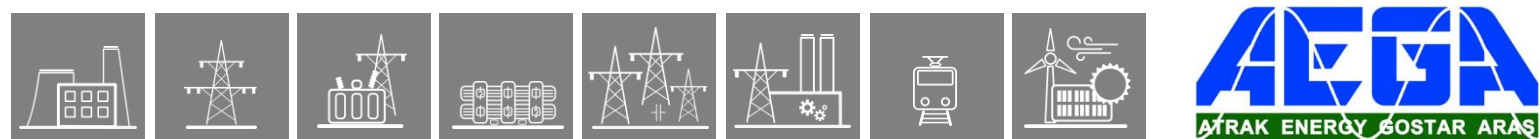

## 3.3.5. Metering

### 3.3.5.1. Application

The metering function can be applied to calculate the active and reactive energy supply and demand values based on the own measurement of the device or the energy meter impulses.

#### 3.3.5.1.1. Mode of operation

There is an “Input selection” parameter to select the input of energy the calculation “Measurement” or “Impulse”. Chapter 1.1.1 and Chapter 1.1.2 describe the difference of operation.

#### 3.3.5.1.2. Measurement mode

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers.

These signals are pre-processed by the “Voltage transformer input” function block and by the “Current transformer input” function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic phasors of the voltages and currents. Additionally, it is in these function blocks that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed values and the transformer parameters, the “Line measurement” function block calculates “P” and “Q” values in every process cycle and based on these values the “Metering” function block calculates the active and reactive power supply and demand. These values are accumulated to obtain, separately:

- Active power demand,
- Active power supply,
- Reactive power demand.
- Reactive power supply,

This means that the positive and negative values are accumulated separately.

The time period of the accumulation is defined by parameter setting. It can be selected in a broad range. The start of the accumulation is based on the integrated real-time clock of the device. For example, for the “Time Interval” setting of 15min, the trigger is: at 0h0min, 0h15min, 0h30min, 0h45 min, 1h0min, etc.

When the accumulation time is over, the calculated values are reported to the SCADA system. The displayed values change continuously.

The calculated values are available as primary quantities, and they can be displayed on the on-line screen of the device or on the webpage of the device and they are available for the SCADA system using the configured communication system.

The **inputs** of the metering function are:

- the Fourier components of the measured voltages and currents,
- parameters.

The **output** of the metering function is:

- displayed measured values.

NOTE: the scaling values are entered as parameter setting for the “Voltage transformer input” function block and for the “Current transformer input” function block.



### 3.3.5.1.5. The measurement

#### 3.3.5.1.5.1. Reference direction

“Reference direction” parameter setting defines the direction when voltage and current vectors are in phase. Setting can be “Demand” or “Supply”.

#### 3.3.5.1.5.2. The measured values

Unit prefix of the **measured values** of the metering function depends on the configuration: it can be kilo or Mega. The “Line measurement” function uses the same unit prefix as the Metering.

MEASURED VALUE	EXPLANATION
MTR_PosP_OLM_	Demand kWh – active power consumption
MTR_NegP_OLM_	Supply kWh – active power supply
MTR_PosQ_OLM_	Demand kVArh – reactive power consumption
MTR_NegQ_OLM_	Supply kVArh – reactive power supply

*Table 1-1 Measured values of the metering function*

The measured values available are shown as on-line information, see the figure below.



[-] METERING		
Demand kWh	400.0	kWh
Supply kWh	300.0	kWh
Demand kVArh	500.0	kVArh
Supply kVArh	2500.0	kVArh

*Figure 1-1 Measured values of the metering function*

#### 3.3.5.1.6. Parameter setting

The time period of accumulation is defined by parameter setting. This can be selected in a broad range, as it is shown in Table 1-2.

##### Enumerated parameter

PARAMETER NAME	TITLE	SELECTION RANGE	DEFAULT
Selection of the time period for power metering			
MTR_TimInt_EPar_	Time Interval	Off, 5min, 10min, 15min, 30min, 60min	30min

*Table 1-2 The enumerated parameter of the metering function*



### 3.3.5.2. Metering function overview

The graphic appearance of the function block of the metering function is shown below. The block shows all binary input and output status signals which are applicable in the graphic equation editor.

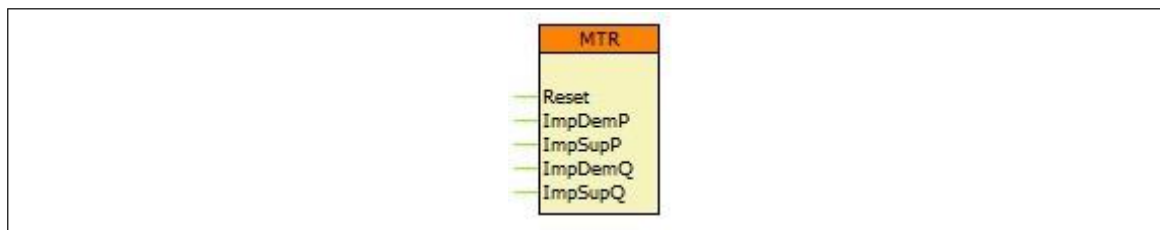


Figure 2-1 Graphic appearance of the function block of the metering function

#### 3.3.5.2.1. Settings

##### 3.3.5.2.1.1. Parameters

The available parameters are listed below in order of their appearance in the *parameters* menu. If the setting range of a parameter should be extended, contact Protecta Support.

Table 2-1 The available parameters of the metering function

TITLE	DIM.	RANGE	STEP	DEFAULT	EXPLANATION
Time Interval	-	Off, 5min (On), 10min , 15min , 30min , 60min	-	30min	Time period of accumulation parameter for general operation of the function:
Input selection	-	Measurement, Impulse,	-	Measurement	Input selection of energy calculation
Cumulation mode		FALSE,TRUE		FALSE	Cumulation mode is used
Reference direction	-	Demand, Supply	-	Demand	Energy direction reference selection.
Active pulse scale	kWh/ pulse	1 - 10000	1	100	One impulse of energy meter is equal to this setting
Reactive pulse scale	kVarh/ pulse	1 - 10000	1	100	One impulse of energy meter is equal to this setting

### 3.3.5.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

#### 3.3.5.2.2.1. Analogue inputs

The function uses the sampled values of a voltage and current inputs. This is defined in the configuration.

#### 3.3.5.2.2.2. Analogue outputs (measurements)

The measured values of the metering function are listed in the table below.

*Table 2-2 The measured analogue values of the metering function*

MEASURED VALUE	DIMENSION	EXPLANATION
Demand P	kWh	<i>Demand P. Unit prefix can be kilo- or mega-, depends on the configuration</i>
Supply P	kWh	<i>Supply P. Unit prefix can be kilo- or mega-, depends on the configuration</i>
Demand Q	kVArh	<i>Demand Q. Unit prefix can be kilo- or mega-, depends on the configuration</i>
Supply Q	kVArh	<i>Supply Q. Unit prefix can be kilo- or mega-, depends on the configuration</i>

#### 3.3.5.2.2.3. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side function block in the Logic editor.

*Table 2-3 The binary input signal of the metering function*

BINARY OUTPUT SIGNAL	EXPLANATION
MTR_Reset_GrO_	Reset input of the function has meaning only in cumulation mode
MTR_ImpDemP_GrO_	Demand P impulse of external energy meter input of the function has meaning only in impulse input mode
MTR_ImpSupP_GrO_	Supply P impulse of external energy meter input of the function has meaning only in impulse input mode
MTR_ImpDemQ_GrO_	Demand Q impulse of external energy meter input of the function has meaning only in impulse input mode
MTR_ImpSupQ_GrO_	Supply Q impulse of external energy meter input of the function has meaning only in impulse input mode

#### 3.3.5.2.2.4. Events

The following events are generated in the event list, as well as sent to the SCADA according to the configuration.

*Table 2-4 Generated events of the metering function*

EVENT	DIMENSION	EXPLANATION
Demand P	Wh	<i>Demand P value</i>
Supply P	Wh	<i>Supply P value</i>
Demand Q	VArh	<i>Demand Q value</i>
Supply Q	VArh	<i>Supply Q value</i>

### 3.3.5.2.3. Technical data

Table 2-5 Technical data of the metering function

FUNCTION	RANGE	ACCURACY
Power accuracy	$I > 15\%I_n$	$\pm 3\%$

### 3.3.5.2.4. Notes for testing

Time period of the accumulation is defined by parameter setting.

Starting accumulation is based on the integrated real-time clock of the device.

For example, for a “Time Interval” setting of 15min, the trigger is: at 0h0min, 0h15min, 0h30min, 0h45 min, 1h0min, etc.

Parameter changing resets the accumulation. Using the settings of the example above, setting new parameters at 0h07min will result in the following:


- the accumulated values are reset to zero,
- the new accumulation starts at 0h15min,
- the first report is sent at 0h30min. Measured values in Events list will also refresh at 0h30min.

### 3.3.5.2.5. 61850 LN

Instance number of Logical Node is not mentioned in the table below.

Table 2-6 Logical Node and Data Objects of the metering function

LN NAME	DO NAME	DA NAME	FC	EXPLANATION
EMMTR	DmdVArhPV	mag.f	MX	Demand VArh value
		q	MX	quality
		t	MX	timestamp
	DmdWhPV	mag.f	MX	Demand Wh value
		q	MX	quality
		t	MX	timestamp
	SupVArhPV	mag.f	MX	Supply VArh value
		q	MX	quality
		t	MX	timestamp
	SupWhPV	mag.f	MX	Supply Wh value
		q	MX	quality
		t	MX	timestamp

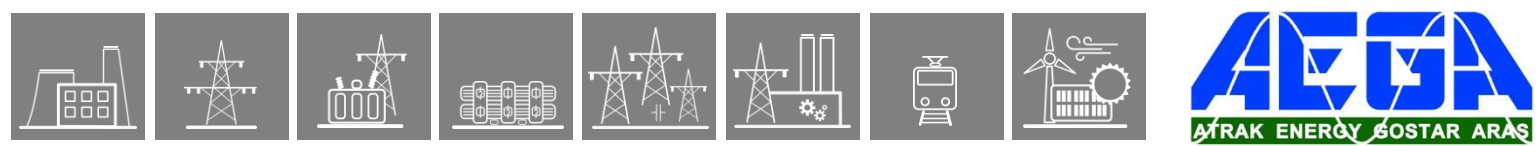

### 3.3.6. Voltage selection function block

#### 3.3.6.1. Application

In several substation configurations with double busbar, there is no voltage measurement in the bays, but voltage transformers are connected to the busbars only.

If the protection functions configured in the bay devices apply voltage measurement then the correct selection of the voltage sources is needed. The role of the voltage selection is that the protection functions get the voltage of the busbar section to which the feeder or the transformer is connected.

To solve this problem the device gets both three-phase voltages of both busbar sections, and a binary signal decides which one is valid for the protection function.

The “Voltage selection” function block assigns the correct voltages to the protection functions.

#### 3.3.6.2. Mode of operation

The voltage selection is decided by a binary signal. **The conditions are defined by the user applying the graphic equation editor.**

If this input signal is FALSE then the voltages of the voltage input module configured as default input are assigned to the protection functions.

If however this input signal is TRUE then the voltages of the other voltage input module are assigned to the protection functions.

#### 3.3.6.3. The binary status signals

The voltage selection function block has a binary input signal. **The conditions are defined by the user applying the graphic equation editor.**

The **binary input status signal** of the voltage selection function block is shown in Table 1-1.

Binary status signal	Title	Explanation
SelectVolt_USelect_GrO_	USelect	Binary signal controlling the voltage selection

Table 1-1 The binary input status signal of the voltage selection function block


The **binary output status signals** of the voltage selection function block.

The voltage selection function block has no binary output status signals.

#### 3.3.6.4. The parameters

The voltage selection function block has no parameters.

### 3.3.6.5. The symbol of the function block in the graphic editor

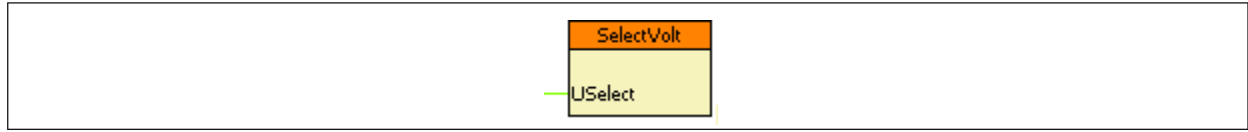

*Figure 1-1 The function block of the voltage selection function block*


The name of the input signal is a part of the “Binary status signal” name shown in Table 1-1.

### 3.3.6.6. Example


In this simple example the channel No.1 of the binary input module in position “F” is used as the signal controlling the selection.

If this input signal is FALSE then the voltages of the voltage input module configured as default input are assigned to the protection functions.

If however this input signal is TRUE then the voltages of the other voltage input module are assigned to the protection functions.

 

*Figure 2-1 Example The simple application of the voltage selection function block*

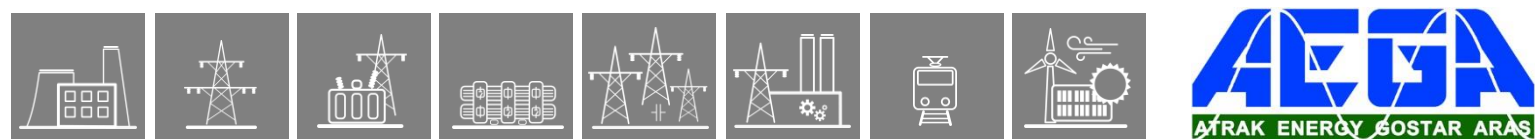

## 3.3.7. Trip Value Recorder

### 3.3.7.1. Application

For quick evaluating of network faults, it is very useful to see in the event list of the protection device the measured primary analog values (currents, voltages) before and during the fault state. The Trip value recorder function serves this purpose.

This function is not a default element of any configuration, but it can be acquired (please contact Protecta Support team).

#### 3.3.7.1.1. The measurement

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers.

These signals are pre-processed by the “Voltage transformer input” function block and by the “Current transformer input” function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic phasors of the voltages and currents and the true RMS values. Additionally, it is in these function blocks that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed analogue signals, several function blocks perform additional calculation, e.g.: active and reactive power, frequency, temperature, impedances, higher harmonics, symmetrical components, etc.

The Trip value recorder function calculates the primary values from its three input secondary signals (currents or voltages) and uses them as described in the following chapter.

#### 3.3.7.1.2. Operation principles

The Trip value recorder has two binary inputs: “Start” and “Trip”.

When the “Start” binary input receives a rising edge signal, the function stores the pre-fault value of the three analogue signals and the fault value of the three analogue signal as well and the function starts waiting for the trigger (Trip) signal. If no trigger signal coming and new start signal receives the stored pre-fault and fault values will be overwritten by the latest ones.

The “Trip” binary input of the function is applied for triggering the trip value recording to generate the events with the pre-fault and fault values.

After triggering the function, so the “Trip” binary input is activated, the function generates the following values in the event list and sends them automatically to the SCADA system:

- pre-fault values of the three analog signals 100 ms before the Start signal receives,
- fault values of the three analog signals: average of the values 10 ms and 20 ms after the Start.

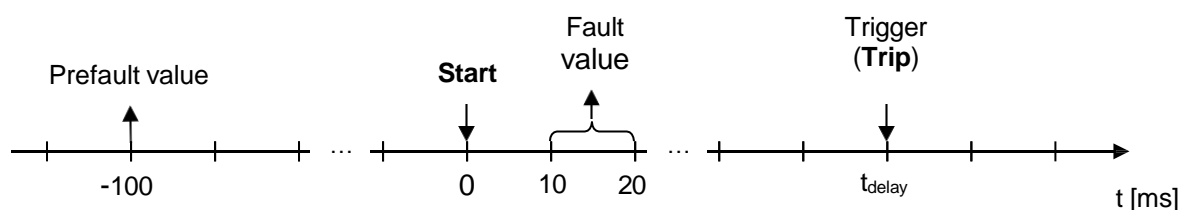


Figure 1-1 Time diagram of the trip recording behaviour

### 3.3.7.2. Trip value recorder function overview

The graphic appearance of the function block of the trip value recorder function is shown below. The block shows all binary input and output status signals which are applicable in the graphic equation editor.

Usually, the collected general start signal of the protection functions is assigned to the “Start” input and the general trip signal of trip logic function is connected to the “Trip” input.

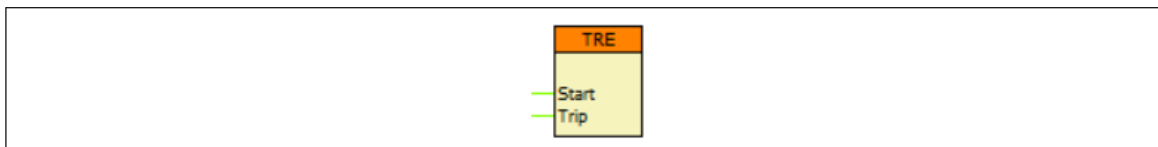


Figure 2-1 Graphic appearance of the function block of the trip value recorder function

#### 3.3.7.2.1. Settings

##### 3.3.7.2.1.1. Parameters

The Trip value recorder function does not have any parameters.

#### 3.3.7.2.2. Function I/O

This section describes briefly the analogue and digital inputs and outputs of the function block.

##### 3.3.7.2.2.1. Analogue inputs

The function uses the sampled values of a current input or voltage input. Moreover, calculated analogue signals i.e.: symmetrical values, differential/bias current values can be used as inputs.

The following table contains the available input channels of the trip value recorder function.

Table 2-1 Available analogue inputs of the trip value recorder function

ANALOGUE INPUTS	RELATED FUNCTION BLOCK
Phase current, phase-to-phase, symmetrical, residual currents	CT4, CalcCurr
Voltage in phase, phase-to-phase, and symmetrical; Reference (busbar) voltages	VT4, CalcVolt
Calculated Idiff/Ibias current of transformer differential protection	DIF87T
Calculated Idiff/Ibias current of busbar differential protection for each bus section	DIF87B

**NOTE:** Displaying the fault current values of the line differential protection Idiff/Ibias current and the restricted earth fault protection Idiff/Ibias current are integrated into the protection function, thus not need additional trip value functions to display the trip values.

##### 3.3.7.2.2.2. Binary input signals (graphed output statuses)

The conditions of the binary inputs are defined by the user, applying the graphic equation editor (*Logic Editor*). Parts written in **bold** are seen on the left side function block in the Logic editor.

Table 2-2 The binary input signal of the trip value recorder function

BINARY OUTPUT SIGNAL	EXPLANATION
TRE_ <b>Start</b> _GrO_	Dedicated input of the function to receive the start signal of the selected protection functions
TRE_ <b>Trip</b> _GrO_	Dedicated input of the function to receive the trip signal of the selected protection functions





### 3.3.8. RTD temperature input function

#### 3.3.8.1. Application of the RTD input

If the factory configuration includes an RTD temperature input hardware module, the temperature input function block is automatically configured among the software function blocks. Separate temperature input function blocks are assigned to each temperature input hardware module.

The RTD+1100 temperature input hardware module is equipped with four special input channels, the RTD+ 0200 has a single channel only. (See EuroProt+ hardware description document.) To each channel, a temperature sensor can be connected. The temperature is measured as the resistance value of the sensor, which depends upon the temperature.

The sensors can be connected by wiring methods, shown in [Figure 1–1](#), [Figure 1–2](#) and [Figure 1–3](#). The connection mode is identified also by parameter setting.

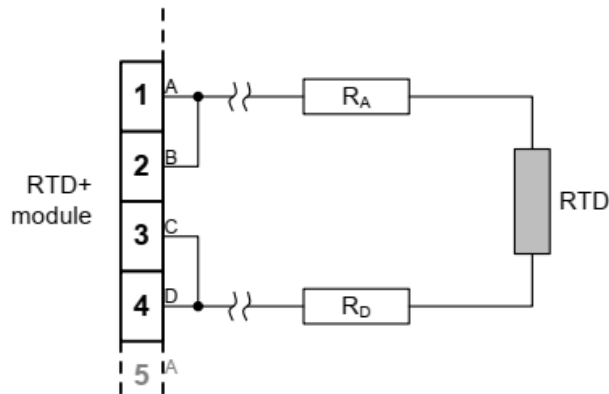


Figure 1–1 2-wire RTD wiring

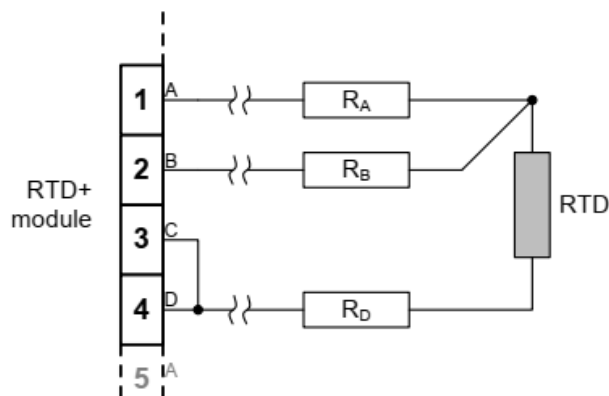


Figure 1–2 3-wire RTD wiring

When 3-wire connection is applied, it is supposed that  $R_A=R_D$ .


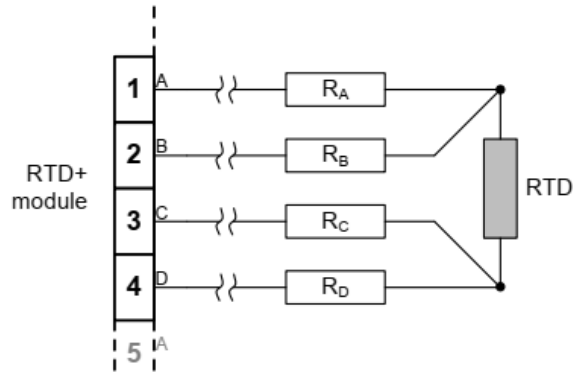


Figure 1-3 4-wire RTD wiring

The channels of the module are independent of each other. To each channel a dedicated measuring module is assigned. These measuring modules are described in a separate document: “**GGIORTD temperature measurement module function block description**”. The module is prepared to connect the following types of sensors:

- Pt100/Ni100
- Ni120/Ni120US
- Pt250/Ni250
- Pt1000/Ni1000
- Cu10
- Service-Ohm (60 Ω ... 1.6 kΩ)

The applied type of sensors define the conversion mode from measured resistance to temperature. These are selected by parameters of the temperature measuring module. See separate document: “**GGIORTD temperature measurement module function block description**”.

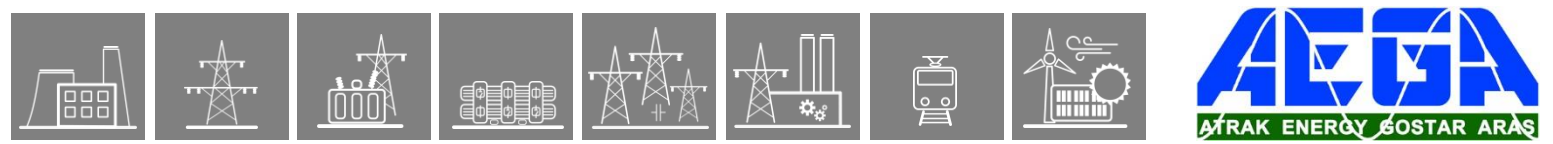

### 3.3.8.2. Technical summary

#### 3.3.8.2.1. Technical data

The technical data of the temperature input module are related to the hardware module. This is described in the document “**EuroProt+ Hardware description**, Chapter 10: RTD input module”.

#### 3.3.8.2.2. Summary of the parameters


The parameters of the temperature input function are explained in the following table.

##### Enumerated parameters

Parameter name	Title	Selection range	Default
Connection mode of Channel 1			
RTD_Ch1RangeOfMAn03_EPar_	Channel 01	3wire, 4wire, 2wire	3wire
Connection mode of Channel 2			
RTD_Ch2Range2OfMAn03_EPar_	Channel 02	3wire, 4wire, 2wire	3wire
Connection mode of Channel 3			
RTD_Ch3RangeOfMAn04_EPar_	Channel 03	3wire, 4wire, 2wire	3wire
Connection mode of Channel 4			
RTD_Ch4Range2OfMAn04_EPar_	Channel 04	3wire, 4wire, 2wire	3wire

*Table 1-1 The enumerated parameters of the voltage input function*

NOTE: The function block has no input and output binary signals, the graphic logic editor does not show this function block.

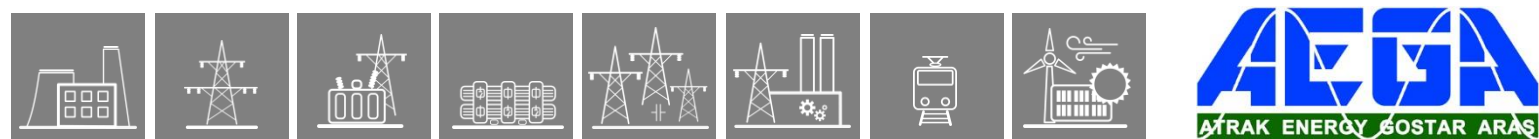

## 3.4. Disturbance recorder function

The disturbance recorder function can record analog signals and binary status signals. These signals are configured using the EuroCAP software tool.

The disturbance recorder function has a binary input signal, which serves the purpose of starting the function. **The conditions of starting are defined by the user, applying the graphic equation editor.** The disturbance recorder function keeps on recording during the active state of this signal but the total recording time is limited by the timer parameter setting.

The pre-fault time, max recording time and post-fault time can be defined by parameters.

### 3.4.1. Mode of recording

If the triggering conditions defined by the user - using the graphic equation editor – are satisfied and the function is enabled by parameter setting, then the disturbance recorder starts recording the sampled values of configured analog signals and binary signals.

The analog signals can be sampled values (voltages and currents) received via input modules or they can be calculated analog values (such as negative sequence components, etc.)

The number of the configured binary signals for recording is limited to 64, and up to 32 analog channels can be recorded.

The available memory for disturbance records is 12 MB.

*There are two function blocks available.* The first function (**DRE**) applies 20 sampling in a network period. Accordingly for 50 Hz, the sampling frequency is 1 kHz. (For 60 Hz the sampling frequency is 1.2 kHz). This is used in all configurations by default.

The second function (**DRE2**) is capable to be set by parameter to apply 20 or 40 sampling in a network period. This way accordingly for 50 Hz, the sampling frequency is 1 kHz or 2 kHz (and for 60 Hz the sampling frequency is 1.2 kHz or 2.4 kHz). *Except for this, the two function blocks are the same.*

As an example, for 50 Hz, if the duration of the record is 1000 ms then one analog channel needs about 7 kB and a binary channel needs 2 kB, Using the following formula the memory size can be estimated:

$$\text{Memory size of a record} = (n \cdot 7 \text{ kB} + m \cdot 2 \text{ kB}) \cdot \text{record duration (s)}$$

Here n,m: are the number of analog and binary channels respectively.

During the operation of the function, the pre-fault signals are preserved for the time duration as defined by the parameter "PreFault".

The recording duration is limited by the parameter "Max Recording Time" but if the triggering signal resets earlier, this section is shorter.

The post-fault signals are preserved for the time duration as defined by the parameter "PostFault".

During or after the running of the recording, the triggering condition must be reset for a new recording procedure to start.

### 3.4.2. Format of recording

The records are stored in standard COMTRADE format.

- The configuration is defined by the file .cfg,
- The data are stored in the file .dat,
- Plain text comments can be written in the file .inf.

### 3.4.3. Downloading and evaluating the disturbance records

The procedure for downloading the records is described in detail in the EuroProt+ manual “Remote user interface description”, Chapter 4.7. The three files are zipped in a file .zip. This procedure assures that the three component files (.cfg, .dat and .inf) are stored in the same location.

The evaluation can be performed using any COMTRADE evaluator software. Protecta offers the “**srEval**” software for this purpose. The application of this software is described in detail in the “srEval manual”. This manual can be downloaded from the following Internet address: [http://www.softreal.hu/product/sreval\\_en.shtml](http://www.softreal.hu/product/sreval_en.shtml).

### 3.4.4. Parameters of the disturbance recorder functions

#### Enumerated parameters

Parameter name	Title	Selection range	Default
Parameter for activation			
DRE_Oper_EPar_	Operation	Off, On	Off
DRE_Resolution_EPar_	Resolution *	1/1.2kHz, 2/2.4kHz	1/1.2kHz

\*only on the optional 2/2.4 kHz disturbance recorder function

*Table 1-1 The enumerated parameters of the disturbance recorder functions*

#### Timer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Pre-fault time:						
DRE_PreFault_TPar_	PreFault	msec	100	1000	1	200
Post-fault time:						
DRE_PostFault_TPar_	PostFault	msec	100	1000	1	200
Overall-fault time limit:						
DRE_MaxFault_TPar_	Max Recording Time	msec	500	10000	1	1000

*Table 1-2 The timer parameters of the disturbance recorder functions*

NOTE: The device goes automatically in “Warning” state and sends a warning message (see [Figure 1-1](#)) if the sum of the pre-fault time and post-fault time is longer than the overall-fault time. The corresponding message in the RDSP log file is: „Wrong DR settings. PreFault + PostFault must be less than MaxFault. Check the parameters.”

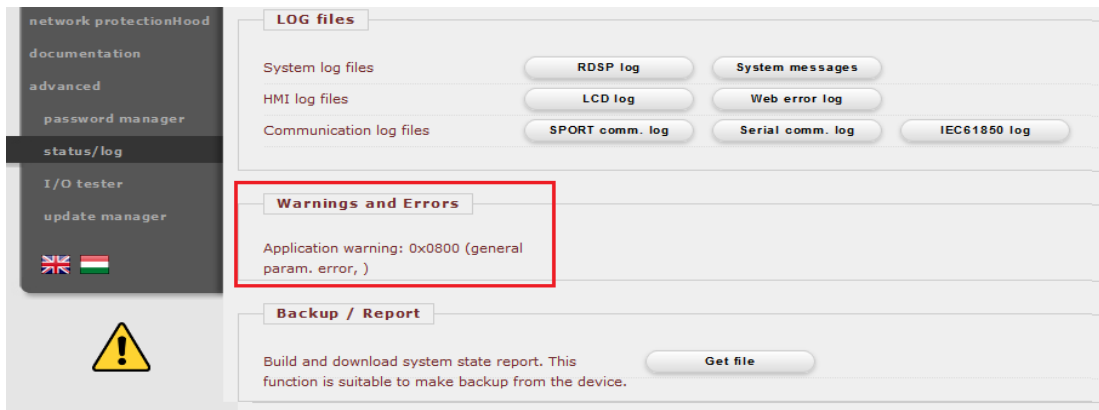


Figure 1-1 Warning message if the settings are invalid

### 3.4.5. The input signals of the disturbance recorder functions

#### Binary status signals

The disturbance recorder function has a binary input signal, which serves the purpose of starting the function. **The conditions of starting are defined by the user, applying the graphic equation editor.**

Binary status signal	Explanation
DRE_Start_GrO_	Output status of a graphic equation defined by the user to start the disturbance recorder function.

Table 1-3 The binary input signal of the disturbance recorder functions

The recording is performed if the function is enabled by the parameter setting AND the triggering condition as defined by the user is “True” as well.

### 3.4.6. The function blocks

The two function blocks of the disturbance recorder function is shown in [Figure 1-2](#). The block shows the binary input status signal, which serves the purpose of triggering the record. It is defined by the user in the graphic equation editor.

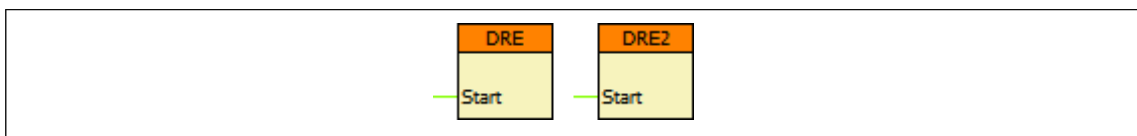


Figure 1-2 The function blocks of the disturbance recorder functions

### 3.4.7. The recorded signals

The analog and binary signals to be recorded are configured using the EuroCAP software tool in the menu item “Software configuration/Disturbance recorder”. (The access level of the user must be at least “Master”.) The application of this software is described in detail in the EuroCAP manual.



### 3.5. Event recorder

The events of the device and those of the protection functions are recorded with a time stamp of 1 ms time resolution. This information with indication of the generating function can be checked on the touch-screen of the device in the “Events” page, or using an Internet browser of a connected computer

## 4. Maintenance guide for EuroProt+ devices

### 4.1. Foreword

The EuroProt+ devices are designed with the most up-to-date and durable components available, to keep appliances in continuous operation for decades. For this range, the only type of components that can age and lead to equipment failure are the power supply capacitors. Therefore, this document, in addition to suggesting some general steps for planned inspections, contains important information on the inspection of power supply modules.

### 4.2. Safety precautions

The EP+ protection-family, depending on the type, operates at dangerous power supply voltages (220 VDC, 230 VAC, 60 VDC, 48 VDC).



In all cases where the connections of the appliance are to be installed or opened, the work must be carried out by a suitably qualified person.

In all cases, the first step of activity should be to switch off the power



The EuroProt+ protection family has a high operating internal temperature. Operations carried out immediately after operation may lead to dangerous burns.



The hardware and software of the EP+ protection family form a complex system. Setting, modifying, and mounting the individual components may severely affect the operation of the whole system.

In all cases where the device is to be operated or maintained, the activity must be carried out by qualified personnel only



## 4.2.1. General guidelines for a scheduled maintenance of EP+ devices

1. As a first step, it is recommended to send an email attaching a report.zip file to the Protecta Application Department on the email address [application@protecta.hu](mailto:application@protecta.hu). In the report file, the logs contain information that can indicate abnormal operation of a module before it causes an operational fault. Based on this information, Protecta can make recommendations for the replacement or repair of the modules concerned.



The report.zip file can be downloaded from the device's web interface, in the Backup / Report section of the Advanced / Status / Log menu, by pressing the "Get file" button. Attention! The file size should be about 700kB. If the downloaded file size is significantly smaller than this, please try again or contact Protecta's Application Department via our web-based support system (<https://support.protecta.hu/?language=English>)!

2. It is usually recommended to update the firmware of the devices during scheduled maintenance. Information about the new firmware releases can be found in the [Release Notes on the Protecta homepage](#). The information here can be used to consider upgrading the basic software for a single device, or all devices in a substation.



**Before starting the upgrade, always contact the Protecta Application Department or submit a ticket in the web-based support system from the following link: <https://support.protecta.hu/>**

For more details on the firmware update, please refer to Chapter 4.2.10.4 of the [EuroProt+ Operating Manual](#).

### 4.3. Power supply maintenance


Power supplies are designed with the longest possible life electrolytic capacitors. Their expected lifetime depends significantly on the environmental conditions of the device. During a scheduled inspection, we recommend visual inspecti

on of the power supply for any abnormalities in the capacitors. The most common phenomena are: bloating, electrolyte leakage, discoloration, which typically occurs on capacitors, but can also occur on the surface of the PCB board due to leakage. In case of abnormality, the capacitors should be replaced. In such a case, please contact Protecta's Application Department via our support page (<https://support.protecta.hu/>)!


The following figures illustrate the different capacitor states in several photos.



*Figure 4-1 The capacitor on the right is already discolored*

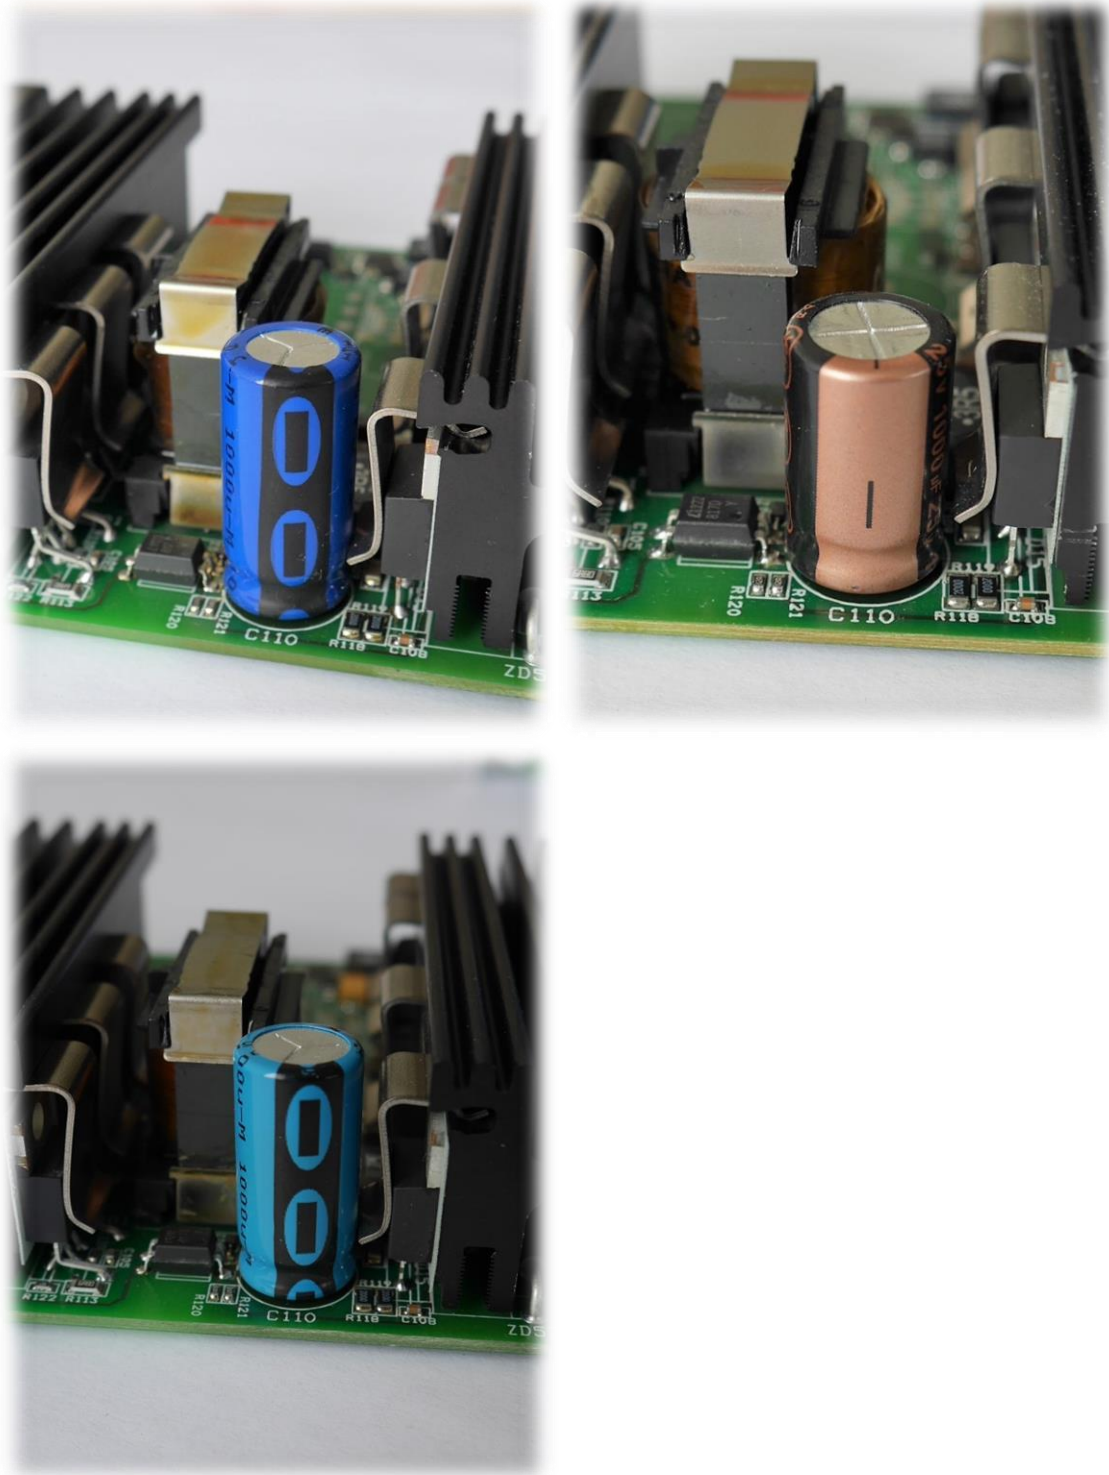

*Figure 4-2 Healthy capacitors on visual inspection*

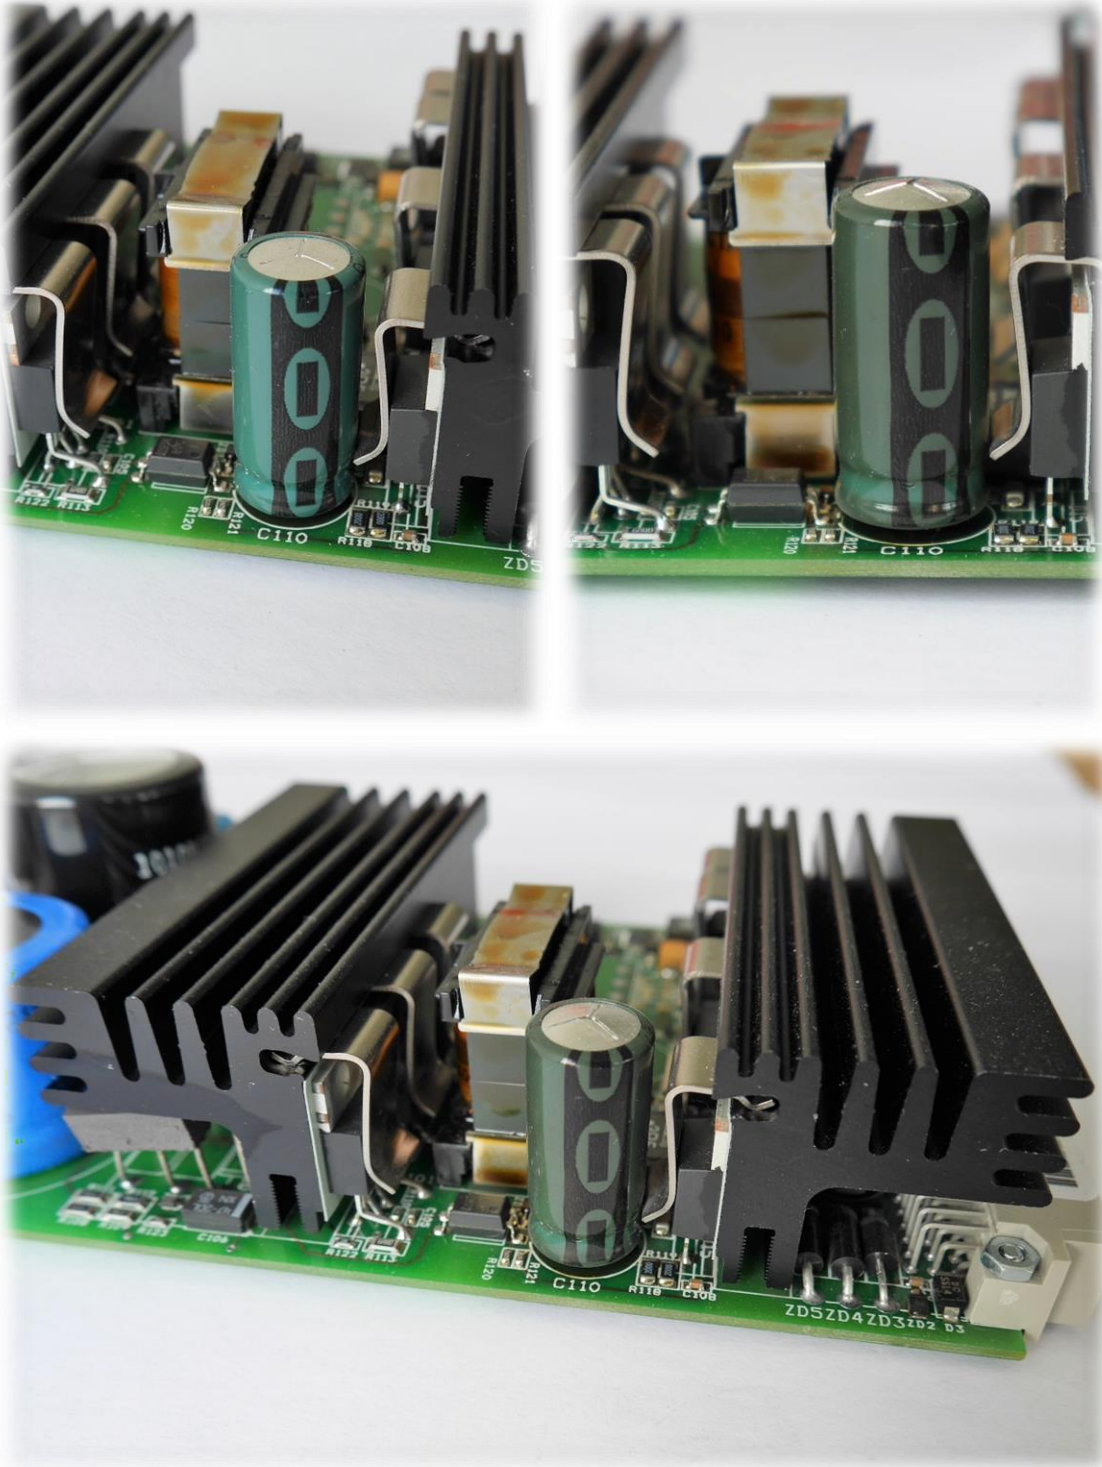

*Figure 4-3 Faulty capacitances on visual inspection. The discoloration compared to the original blue color is clearly visible, bloating can be seen on 2 of them*

#### **4.4. Elements and Batteries**

Az EuroProt+ protection family devices do not contain either a single-use battery or a rechargeable battery.